FOR YOUR SAFETY
If you smell gas:

1. **Open windows.**
2. **DO NOT try to light any appliance.**
3. **DO NOT use electrical switches.**
4. **DO NOT use any telephone in your building.**
5. **Extinguish any open flame.**
6. **Leave the building.**
7. **Immediately call your local gas supplier after leaving the building. Follow the gas supplier's instructions.**
8. **If you cannot reach your gas supplier, call the Fire Department.**

⚠ WARNING

Fire Hazard

Keep all flammable objects, liquids and vapors the minimum required clearances to combustibles away from heater.

Some objects will catch fire or explode when placed close to heater.

Failure to follow these instructions can result in death, injury or property damage.

ROBERTS GORDON

CoRayVac®

Custom-Engineered, Low-Intensity Infrared Heating Systems

Installation, Operation & Service Manual

CRV-B-2
CRV-B-4
CRV-B-6
CRV-B-8
CRV-B-9
CRV-B-10
CRV-B-12
CRV-B-12A

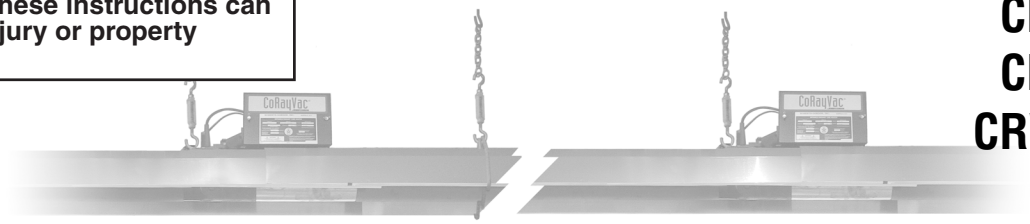

⚠ WARNING

Improper installation, adjustment, alteration, service or maintenance can result in death, injury or property damage. Read the Installation, Operation and Service Manual thoroughly before installing or servicing this equipment.

Installation must be done by a contractor qualified in the installation and service of gas-fired heating equipment or your gas supplier.

Installer

Please take the time to read and understand these instructions prior to any installation. Installer must give a copy of this manual to the owner.

Owner

Keep this manual in a safe place in order to provide your serviceman with necessary information.

Roberts-Gordon LLC
1250 William Street
P.O. Box 44
Buffalo, New York 14240-0044
Telephone: +1.716.852.4400
Fax: +1.716.852.0854
Toll Free: 800.828.7450

www.rg-inc.com
www.corayvac.com
www.radiantheaters.com
www.greenhouse-heater.com
www.robertsgordon.com

© 2012 Roberts-Gordon LLC

P/N 127102NA Rev. L 06/12

TABLE OF CONTENTS

SECTION 1: Heater Safety 1
1.1 Manpower Requirements 1
1.2 Safety Labels and Their Placement 1
1.3 California Proposition 65 1
SECTION 2: Installer Responsibility 4
2.1 Wall Tag 4
2.2 Corrosive Chemicals 4
2.3 National Standards and Applicable Codes 4
SECTION 3: Clearances to Combustibles 5
3.1 Required Clearances to Combustibles 5
SECTION 4: National Standards and Applicable Codes 9
4.1 Gas Codes 9
4.2 Aircraft Hangars 9
4.3 Public Garages 9
4.4 Electrical 9
4.5 Venting 9
4.6 High Altitude 9
SECTION 5: Major Components 10
5.1 Standard Parts List 13
SECTION 6: Design Requirements 16
SECTION 7: Heater Installation 18
7.1 Tube Installation 20
7.2 Coupling and Tube Assembly 20
7.3 Elbow Package Configuration 21
7.4 Reflector Installation 22
7.5 Burner Installation 25
SECTION 8: Optional Heater Accessories 26
8.1 Tee Installation 26
8.2 Reflector Joint 27
8.3 Reflector Side Extension 29
8.4 Universal Shield 30
8.5 Barrier Shield 30
8.6 Two-Foot Decorative Grille Installation 31
8.7 Protective Grille Installation 33
8.8 Classic Cast-Iron Components 34
SECTION 9: Pump Installation and Venting 35
9.1 Pump Installation 35
9.2 General Venting Requirements Model EP-100, EP-200 and EP-300 Series Pumps 37
9.3 Horizontal Venting 4" (10 cm) Pipe 40
SECTION 10: Outside Air Supply 43
10.1 Pressurized 43
10.2 Non-Pressurized 43
10.3 Outside Air Blower Internal Wiring 44
SECTION 11: Gas Piping 47
SECTION 12: Control Methods 49
12.1 ROBERTS GORDON® System Control 49
12.2 ROBERTS GORDON® ULTRAVAC™ 49
12.3 CORAYVAC® Modulating Controls 49
12.4 SPST Transformer Relay Kit (P/N 90417600K) 52
12.5 SPDT Transformer Relay (P/N 90436300) 52
SECTION 13: Starting The System 63
13.1 Checking the Gas Line 63
13.2 Checking the Electrical System 63
13.3 Starting the System 63
13.4 Setting the Vacuum 63
SECTION 14: Variable Frequency Drive Programming 66
14.1 VFD Parameter Settings For Use With Modulating Thermostats 66
14.2 Altering VFD Parameters 67
SECTION 15: Commissioning The CORAYVAC® Modulating System 68
15.1 Setting The CORAYVAC® End Burner Vacuum 68
15.2 Adjusting the Variable Frequency Drive 68
15.3 Programming Of Variable Frequency Drive 69
SECTION 16: Operation and Maintenance 71
16.1 Sequence of Operation 71
16.2 To Shut Off Heater 71
16.3 To Start Heater 71
16.4 Pre-Season Maintenance and Annual Inspection 71
16.5 Maintenance Checklist 72
SECTION 17: Troubleshooting 74
17.1 Troubleshooting Flow Chart 75
SECTION 18: Replacement Parts 77
18.1 Variable Frequency Drive Replacement Parts 79
18.2 Replacement Parts Instructions 80
SECTION 19: General Specifications 81
19.1 Material Specifications 81
19.2 Heater Specifications 81
19.3 Suspension Specifications 81
19.4 Controls Specifications 81
SECTION 20: The ROBERTS GORDON® CORAYVAC® Limited Warranty 83

There are references in this manual to various trademarks. All trademarks mentioned herein, whether registered or not, are the property of their respective owners. Roberts-Gordon LLC is not sponsored by or affiliated with any of the trademark or registered trademark owners, and make no representations about them, their owners, their products or services. Roberts-Gordon LLC is not sponsored by or affiliated with BACnet®, LonWorks®or MODBUS®.

© 2012 Roberts-Gordon LLC

All rights reserved. No part of this work covered by the copyrights herein may be reproduced or copied in any form or by any means - graphic, electronic, or mechanical, including photocopying, recording, taping or information storage and retrieval systems - without the written permission of Roberts-Gordon LLC.

Printed in U.S.A.

TABLE OF FIGURES

Figure 1: Side Panel Label Placement 2
Figure 2: Top and Back Panel Label Placement 3
Figure 3: Standard Reflector 6
Figure 4: One Side Reflector 6
Figure 5: Two Side Reflectors 6
Figure 6: Universal Shield, Position 1 7
Figure 7: Universal Shield, Position 2 7
Figure 8: Universal Shield, Position 3 7
Figure 9: 2-Foot Deco Grille 8
Figure 10: Barrier Shield 8
Figure 11: Protective Grille 8
Figure 12: Major Component Descriptions 10
Figure 13: Heater Assembly Overview 17
Figure 14: Critical Hanger Placement 19
Figure 15: Reflector Joint Detail 28
Figure 16: EP-200 Condensate Valve Assembly 35
Figure 17: Condensate Neutralization Tube 37
Figure 18: Vertical Venting Configuration 39
Figure 19: EP-100 Horizontal Venting Configurations 40
Figure 20: EP-200 Series Horizontal Venting Configurations 41
Figure 21: EP-300 Series Horizontal Venting Configurations 42
Figure 22: Duct Sizing 44
Figure 23: Outside Air Blower Internal Wiring Diagram 44
Figure 24: Filter Housing Assembly 45
Figure 25: Air Supply Blower Support 45
Figure 26: Pressurized Outside Air Supply 46
Figure 27: Non-Pressurized Outside Air Supply 46
Figure 28: Gas Connection with Flexible Gas Hose 48
Figure 29: VFD Terminal Strip 51
Figure 30: One Zone Operation without Control Panel (optional) 53
Figure 31: One Zone Operation (with Outside Air Blower) without Control Panel (optional) 54
Figure 32: Two Zone Operation without Control Panel (optional) 55
Figure 33: General System Wiring 56
Figure 34: External Wiring Diagram EP-100 and EP-201 120 V 1 Ø Pump 56
Figure 35: External Wiring Diagram EP-100, EP-201 or EP-301 230 V 1 Ø Pump (optional) 57
Figure 36: External Wiring Diagram EP-203 or EP-303 208 - 230 V (or 460 V) 3 Ø Pump (optional) 58
Figure 37: CORAYVAC® Modulating Wiring Diagram [LonWorks® (2-10 Vdc with 500 ohm resistor) optional] 59
Figure 38: CORAYVAC® Modulating Wiring Diagram [LonWorks® (4-20 mA) optional] 60
Figure 39: CORAYVAC® Modulating with BACnet® Wiring Diagram (optional) 61
Figure 40: Burner Internal Wiring 62
Figure 41: Burner Internal Ladder Diagram 62
Figure 42: Vacuum Reading 65
Figure 43: Possible Damper Couplings' Locations 70
Figure 44: Variable Frequency Drive Components Diagram 79

LIST OF TABLES

Table 1: Contents of CRV-Series Burner Carton 13
Table 2: Common CRV-Series Components 13
Table 3: Modulating Thermostat Cable Requirements 51

SECTION 1: HEATER SAFETY

Your Safety is Important to Us! This symbol is used throughout the manual to notify you of possible fire, electrical or burn hazards. Please pay special attention when reading and following the warnings in these sections.

Installation, service and annual inspection of heater must be done by a contractor qualified in the installation and service of gas-fired heating equipment.

Read this manual carefully before installation, operation or service of this equipment.

This heater is designed for heating nonresidential indoor spaces. Do not install in residential spaces.

These instructions, the layout drawing, local codes and ordinances, and applicable standards that apply to gas piping, electrical wiring, venting, etc. must be thoroughly understood before proceeding with the installation.

Protective gear is to be worn during installation, operation and service. Thin sheet metal parts, the aluminum reflector portion of the heater and the various venting components, have sharp edges. To prevent injury, the use of work gloves is recommended. The use of gloves will also prevent the transfer of body oils from the hands to the surface of the reflector.

Before installation, check that the local distribution conditions, nature of gas and pressure, and adjustment of the appliance are compatible.

This heater must be applied and operated under the general concepts of reasonable use and installed using best building practices.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do no play with the appliance.

For additional copies of the Installation, Operation and Service Manual, please contact Roberts-Gordon LLC.

1.1 Manpower Requirements

To prevent personal injury and damage to the heater, two persons will be required for installation.

1.2 Safety Labels and Their Placement

Product safety signs or labels should be replaced by the product user when they are no longer legible. Please contact Roberts-Gordon LLC or your ROBERTS GORDON® independent distributor to obtain replacement signs or labels. *See Page 2, Figure 1 through Page 3, Figure 2*.

1.3 California Proposition 65

In accordance with California Proposition 65 requirements, a warning label must be placed in a highly visible location on the outside of the equipment (i.e., near equipment's serial plate). See label placement drawing *on Page 3, Figure 2* for label location. Avoid placing label on areas with extreme heat, cold, corrosive chemicals or other elements. To order additional labels, please contact Roberts-Gordon LLC or your ROBERTS GORDON® independent distributor.

FIGURE 1: Side Panel Label Placement

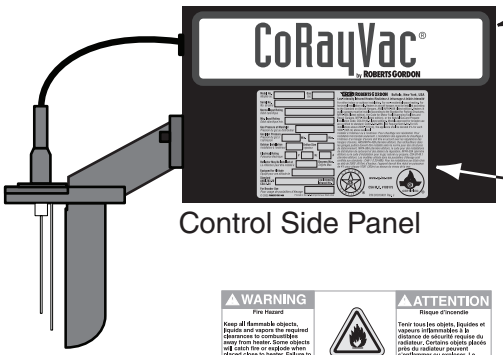

Control Side Panel

Logo Label

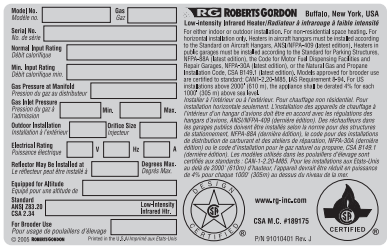

Rating Plate Label

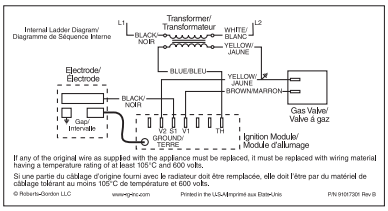
Internal Ladder Diagram/
Diagramme de Séquence Interne
Transformer/
Transformateur
Electrode/
Electrode
Gas Valve/
Valve à gaz
Ignition Module/
Module d'allumage
If any of the original wire as supplied with the appliance must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C and 600 volts.
Si une partie du câblage d'origine fourni avec le radiateur doit être remplacée, elle doit l'être par du matériel de câblage tolérant au moins 105°C de température et 600 volts.

Internal Ladder Diagram Label

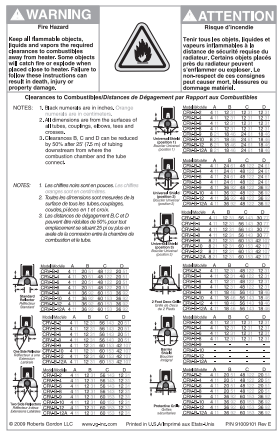
WARNING
Fire Hazard
Keep all flammable objects, liquids and vapors the required clearances to combustibles away from heater. Some objects will catch fire or explode when placed too close. Failure to follow these instructions can result in death, injury or property damage.
ATTENTION
Risque d'incendie
Tenir tous les objets, liquides et vapeurs inflammables à la distance de sécurité requise du radiateur. Certains objets placés près du radiateur peuvent s'enflammer ou exploser. Le non-respect de ces consignes peut causer mort, blessures ou dommage matériel.
Clearances to Combustibles/Distances de Dégagement par Rapport aux Combustibles

Clearances to Combustibles Label

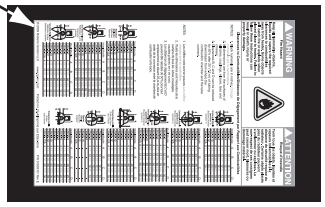

Control Side Panel (inside)

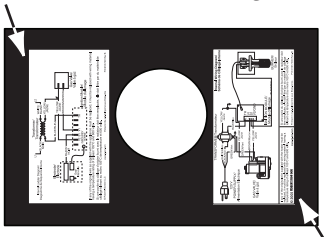

Filter Side Panel (inside)

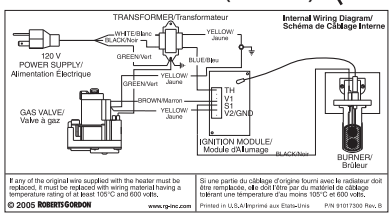
TRANSFORMER/Transformateur
Internal Wiring Diagram/
Schéma de Câblage Interne
120 V
POWER SUPPLY/
Alimentation Électrique
GAS VALVE/
Valve à gaz
IGNITION MODULE/
Module d'Allumage
BURNER/
Brûleur
If any of the original wire supplied with the heater must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C and 600 volts.
Si une partie du câblage d'origine fourni avec le radiateur doit être remplacée, elle doit l'être par du matériel de câblage tolérant une température d'au moins 105°C et 600 volts.
© 2005 ROBERTS GORDON

Wiring Label

Description	Part Number
Logo Label	91007901
Rating Plate Label	91010401
Clearances to Combustibles Label	91009101
Internal Ladder Diagram Label	91017301
Wiring Label	91017300

FIGURE 2: Top and Back Panel Label Placement

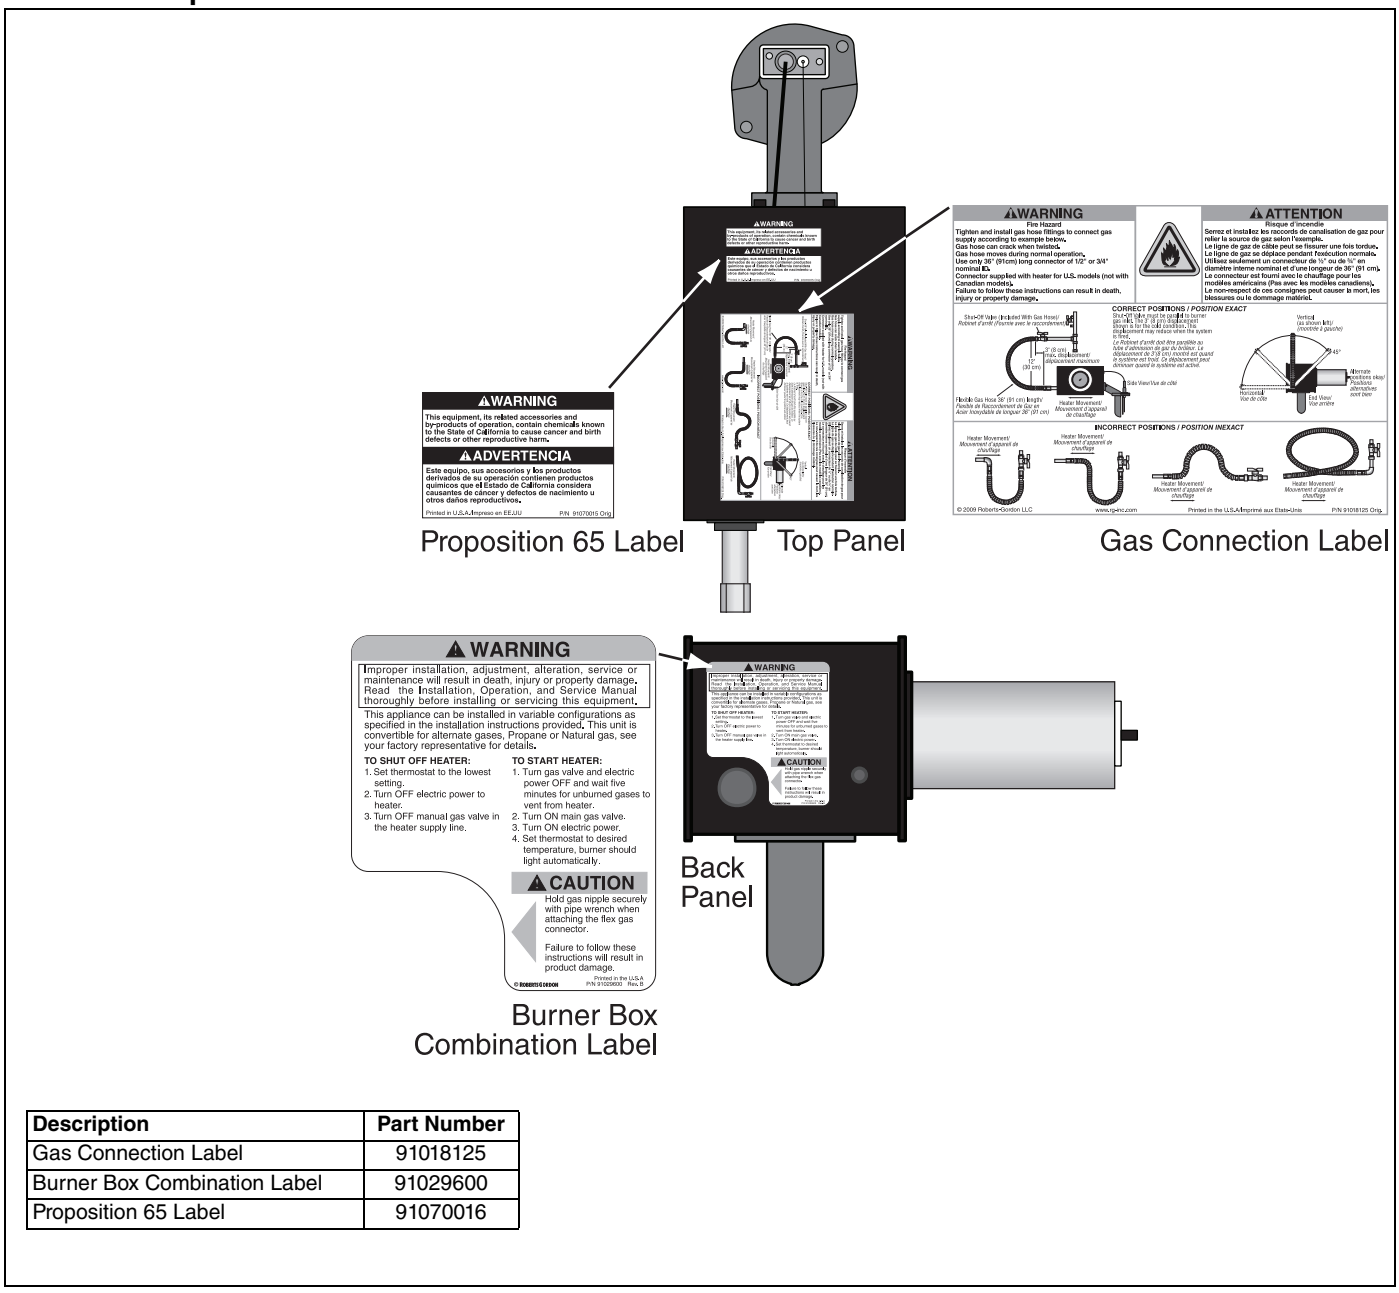
⚠WARNING
This equipment, its related accessories and by-products of operation, contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.
⚠ADVERTENCIA
Este equipo, sus accesorios y los productos derivados de su operación contienen productos químicos que el Estado de California considera causantes de cáncer y defectos de nacimiento u otros daños reproductivos.
Proposition 65 Label
Top Panel
⚠WARNING
Fire Hazard
Tighten and install gas hose fittings to connect gas supply according to example below.
Gas hose can crack when twisted.
Gas hose moves during normal operation.
Use only 36" (91cm) long connector of 1/2" or 3/4" nominal ID.
Connector supplied with heater for U.S. models (not with Canadian models).
Failure to follow these instructions can result in death, injury or property damage.
⚠ATTENTION
Risque d'incendie
Serrez et installez les raccords de canalisation de gaz pour relier la source de gaz selon l'exemple.
Le ligne de gaz de câble peut se fissurer une fois tordue.
Le ligne de gaz se déplace pendant l'exécution normale.
Utilisez seulement un connecteur de ½" ou de ¾" en diamètre interne nominal et d'une longueur de 36" (91 cm).
Le connecteur est fourni avec le chauffage pour les modèles américains (Pas avec les modèles canadiens).
Le non-respect de ces consignes peut causer la mort, les blessures ou le dommage matériel.
CORRECT POSITIONS / POSITION EXACT
INCORRECT POSITIONS / POSITION INEXACT
Gas Connection Label
⚠ WARNING
Improper installation, adjustment, alteration, service or maintenance will result in death, injury or property damage. Read the Installation, Operation, and Service Manual thoroughly before installing or servicing this equipment.
This appliance can be installed in variable configurations as specified in the installation instructions provided. This unit is convertible for alternate gases, Propane or Natural gas, see your factory representative for details.
TO SHUT OFF HEATER:
1. Set thermostat to the lowest setting.
2. Turn OFF electric power to heater.
3. Turn OFF manual gas valve in the heater supply line.
TO START HEATER:
1. Turn gas valve and electric power OFF and wait five minutes for unburned gases to vent from heater.
2. Turn ON main gas valve.
3. Turn ON electric power.
4. Set thermostat to desired temperature, burner should light automatically.
⚠ CAUTION
Hold gas nipple securely with pipe wrench when attaching the flex gas connector.
Failure to follow these instructions will result in product damage.
Printed in the U.S.A
P/N 91029600 Rev.B
Burner Box Combination Label
Back Panel

Description	Part Number
Gas Connection Label	91018125
Burner Box Combination Label	91029600
Proposition 65 Label	91070016

SECTION 2: INSTALLER RESPONSIBILITY

The installer is responsible for the following:

- To ensure the system is designed in accordance with the parameters of the CRV-Series Design Manual (P/N 127500NA).
- To install the heater, as well as the gas and electrical supplies, in accordance with applicable specifications and codes. Roberts-Gordon LLC recommends the installer contact a local Building Inspector or Fire Marshal for guidance.
- To use the information given in a layout drawing and in the manual together with the cited codes and regulations to perform the installation.
- To install the heater in accordance with the clearances to combustibles requirements.
- To furnish all needed materials not furnished as standard equipment.
- To plan location of supports.
- To provide access to burners on all sides for servicing or burner removal.
- To provide the owner with a copy of this Installation, Operation and Service Manual.
- To never use heater as a support for ladder or other access equipment and to never hang or suspend anything from heater.
- To ensure there is adequate air circulation around the heater and to supply air for combustion, ventilation and distribution in accordance with local codes.
- To safely and adequately install heater using materials with a minimal working load of 75 lb (33 kg).
- To ensure the heater is placed in an approved application.

2.1 Wall Tag

A laminated wall tag is available for the heater as a permanent reminder of the safety instructions and the importance of the required clearances to combustibles. Please contact Roberts-Gordon LLC or your ROBERTS GORDON® independent distributor to obtain the wall tag. Affix the tag by peeling off the backing of the adhesive strips on the rear surface and position the tag on a wall near the CRV-Series heater (e.g. thermostat or controller). A copy of the wall tag (P/N 91037912) is illustrated on the back cover. For an immediate solution, you may affix this copy on the wall near the heater.
Know your model number and installed configuration. Model number and installed configuration are found on the burner and in the Installation, Operation and Service Manual. *See Page 6, Figure 3 through Page 8, Figure 11*. Write the proper clearance dimensions in permanent ink according to your model number and configuration in the open spaces on the tag.

2.2 Corrosive Chemicals

⚠ CAUTION

Product Damage Hazard

Do not use heater in area containing corrosive chemicals.

Refer to appropriate Material Safety Data Sheets (MSDS).

Failure to follow these instructions can result in product damage.

Roberts-Gordon LLC cannot be responsible for ensuring that all appropriate safety measures are undertaken prior to installation; this is entirely the responsibility of the installer. It is essential that the contractor, the sub-contractor, or the owner identifies the presence of combustible materials, corrosive chemicals or halogenated hydrocarbons* anywhere in the premises.

** **Halogenated Hydrocarbons** are a family of chemical compounds characterized by the presence of halogen elements (fluorine, chlorine, bromine, etc.). These compounds are frequently used in refrigerants, cleaning agents, solvents, etc. If these compounds enter the air supply of the burner, the life span of the heater components will be greatly reduced. An outside air supply must be provided to the burners whenever the presence of these compounds is suspected. Warranty will be invalid if the heater is exposed to halogenated hydrocarbons.*

2.3 National Standards and Applicable Codes

All appliances must be installed in accordance with the latest revision of the applicable standards and national codes. This refers also to the electric, gas and venting installation. Note: Additional standards for installations in public garages, aircraft hangars, etc. may be applicable.

SECTION 3: CLEARANCES TO COMBUSTIBLES

3.1 Required Clearances to Combustibles

Clearances are the required distances that combustible objects must be away from the heater to prevent serious fire hazards. Combustibles are materials that may catch fire and include common items such as wood, paper, rubber, fabric, etc.

Maintain clearances to combustibles at all times for safety.

Clearances for all heater models are located on the burner of the heater and *on Page 6, Figure 3 through Page 8, Figure 11* in this manual. Check the clearances on each burner for the model heater being installed to make sure the product is suitable for your application and the clearances are maintained. Read and follow the safety guidelines below:

- Keep gasoline or other combustible materials including flammable objects, liquids, dust or vapors away from this heater or any other appliance.
- The stated clearances to combustibles represents a surface temperature of 90° F (50°C) above room temperature. Building materials with a low heat tolerance (such as plastics, vinyl siding, canvas, tri-ply, etc) may be subject to degradation at lower temperatures. It is the installer's responsibility to assure that adjacent materials are protected from degradation.
- Maintain clearances from heat sensitive equipment and workstations.
- Maintain clearances from vehicles parked below the heater.
- Maintain clearances from swinging and overhead doors, overhead cranes, vehicle lifts, partitions, storage racks, hoists, building construction, etc.
- In locations used for the storage of combustible materials, signs must be posted to specify the maximum permissible stacking height to maintain required clearances from the heater to the combustibles. Signs must be posted adjacent to the heater thermostat. In the absence of a thermostat, signs must be posted in a conspicuous location.
- Consult local Fire Marshal, Fire Insurance Carrier or other authorities for approval of proposed installation when there is a possibility of exposure to combustible airborne materials or vapors.
- Hang heater in accordance to the minimum suspension requirements *on Page 19, Figure 14*.
- If the radiant tubes must pass through the building structure, be sure that adequate sleeving and fire stop is installed to prevent scorching and/or fire hazard.

⚠WARNING

Fire Hazard

Keep all flammable objects, liquids and vapors the minimum required clearances to combustibles away from heater.

Some objects will catch fire or explode when placed close to heater.

Failure to follow these instructions can result in death, injury or property damage.

NOTE: 1. All dimensions are from the surfaces of all tubes, couplings, elbows, tees and crosses.
2. Clearances B, C and D can be reduced by 50% after 25' (7.5 m) of tubing downstream from where the combustion chamber and the tube connect.

FIGURE 3: STANDARD REFLECTOR

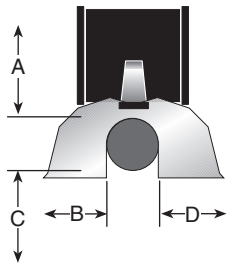

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	20	48	20	11	51	122	51
CRV-B-4	4	20	48	20	11	51	122	51
CRV-B-6	4	20	48	20	11	51	122	51
CRV-B-8	4	20	48	20	11	51	122	51
CRV-B-9	4	36	60	36	11	92	153	92
CRV-B-10	4	36	60	36	11	92	153	92
CRV-B-12	4	36	60	36	11	92	153	92
CRV-B-12A	4	36	60	36	11	92	153	92

.

FIGURE 4: ONE SIDE REFLECTOR

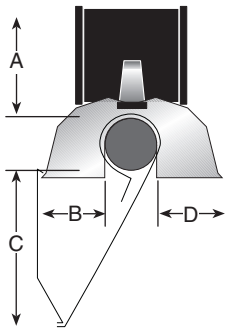

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	12	56	20	11	31	143	51
CRV-B-4	4	12	56	20	11	31	143	51
CRV-B-6	4	12	56	20	11	31	143	51
CRV-B-8	4	12	56	20	11	31	143	51
CRV-B-9	4	12	60	42	11	31	153	107
CRV-B-10	4	12	60	42	11	31	153	107
CRV-B-12	4	12	60	42	11	31	153	107
CRV-B-12A	4	12	60	42	11	31	153	107

FIGURE 5: TWO SIDE REFLECTORS

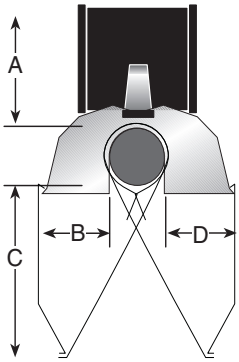

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	12	56	12	11	31	143	31
CRV-B-4	4	12	56	12	11	31	143	31
CRV-B-6	4	12	56	12	11	31	143	31
CRV-B-8	4	12	56	12	11	31	143	31
CRV-B-9	4	12	60	12	11	31	153	31
CRV-B-10	4	12	60	12	11	31	153	31
CRV-B-12	4	12	60	12	11	31	153	31
CRV-B-12A	4	12	60	12	11	31	153	31

NOTE: 1. All dimensions are from the surfaces of all tubes, couplings, elbows, tees and crosses.
2. Clearances B, C and D can be reduced by 50% after 25' (7.5 m) of tubing downstream from where the combustion chamber and the tube connect.

FIGURE 6: UNIVERSAL SHIELD, POSITION 1

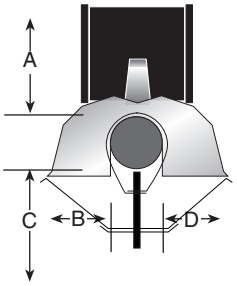

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	12	12	12	11	31	31	31
CRV-B-4	4	12	12	12	11	31	31	31
CRV-B-6	4	12	12	12	11	31	31	31
CRV-B-8	4	12	12	12	11	31	31	31
CRV-B-9	8	18	24	18	21	46	61	46
CRV-B-10	8	18	24	18	21	46	61	46
CRV-B-12	8	18	24	18	21	46	61	46
CRV-B-12A	8	18	24	18	21	46	61	46

FIGURE 7: UNIVERSAL SHIELD, POSITION 2

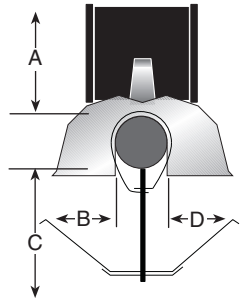

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	24	48	24	11	61	122	61
CRV-B-4	4	24	48	24	11	61	122	61
CRV-B-6	4	24	48	24	11	61	122	61
CRV-B-8	4	24	48	24	11	61	122	61
CRV-B-9	4	36	48	36	11	92	122	92
CRV-B-10	4	36	48	36	11	92	122	92
CRV-B-12	4	36	48	36	11	92	122	92
CRV-B-12A	4	36	48	36	11	92	122	92

FIGURE 8: UNIVERSAL SHIELD, POSITION 3

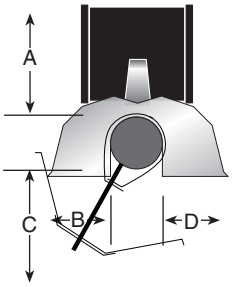

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	12	56	30	11	31	143	77
CRV-B-4	4	12	56	30	11	31	143	77
CRV-B-6	4	12	56	30	11	31	143	77
CRV-B-8	4	12	56	30	11	31	143	77
CRV-B-9	8	12	60	42	21	31	153	107
CRV-B-10	8	12	60	42	21	31	153	107
CRV-B-12	8	12	60	42	21	31	153	107
CRV-B-12A	8	12	60	42	21	31	153	107

NOTE: 1. All dimensions are from the surfaces of all tubes, couplings, elbows, tees and crosses.
2. Clearances B, C and D can be reduced by 50% after 25' (7.5 m) of tubing downstream from where the combustion chamber and the tube connect.

FIGURE 9: 2-FOOT DECO GRILLE

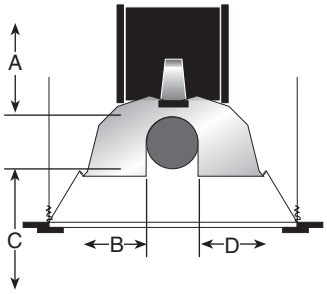

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	12	48	12	11	31	122	31
CRV-B-4	4	12	48	12	11	31	122	31
CRV-B-6	4	12	48	12	11	31	122	31
CRV-B-8	4	12	48	12	11	31	122	31
CRV-B-9	4	18	56	18	11	46	143	46
CRV-B-10	4	18	56	18	11	46	143	46
CRV-B-12	4	18	56	18	11	46	143	46
CRV-B-12A	4	18	56	18	11	46	143	46

FIGURE 10: BARRIER SHIELD

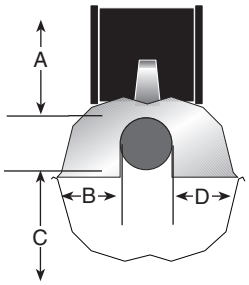

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	12	12	12	11	31	31	31
CRV-B-4	4	12	12	12	11	31	31	31
CRV-B-6	4	12	12	12	11	31	31	31
CRV-B-8	4	12	12	12	11	31	31	31
CRV-B-9	**- UNAPPROVED -**				**- UNAPPROVED -**			
CRV-B-10	**- UNAPPROVED -**				**- UNAPPROVED -**			
CRV-B-12	**- UNAPPROVED -**				**- UNAPPROVED -**			
CRV-B-12A	**- UNAPPROVED -**				**- UNAPPROVED -**			

FIGURE 11: PROTECTIVE GRILLE

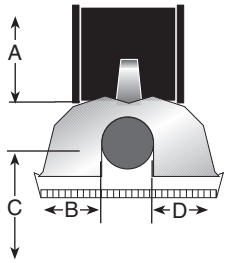

Model	(inches) A	B	C	D	(centimeters) A	B	C	D
CRV-B-2	4	20	48	20	11	51	122	51
CRV-B-4	4	20	48	20	11	51	122	51
CRV-B-6	4	20	48	20	11	51	122	51
CRV-B-8	4	20	48	20	11	51	122	51
CRV-B-9	4	36	60	36	11	92	153	92
CRV-B-10	4	36	60	36	11	92	153	92
CRV-B-12	4	36	60	36	11	92	153	92
CRV-B-12A	4	36	60	36	11	92	153	92

SECTION 4: NATIONAL STANDARDS AND APPLICABLE CODES

4.1 Gas Codes

The type of gas appearing on the nameplate must be the type of gas used. Installation must comply with national and local codes and requirements of the local gas company.

United States: Refer to National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest revision.

Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

4.2 Aircraft Hangars

Installation in aircraft hangars must be in accordance with the following codes:

United States: Refer to Standard for Aircraft Hangars, NFPA 409 - latest revision.

Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

In aircraft storage and servicing areas, heaters shall be installed at least 10' (3 m) above the upper surface of wings or of engine enclosures of the highest aircraft which may be housed in the hangar. The measurement shall be made from the wing or engine enclosure (whichever is higher from the floor) to the bottom of the heater.

• In shops, offices and other sections of aircraft hangars communicating with aircraft storage or servicing areas, heaters shall be installed not less than 8' (2.4 m) above the floor.

• Suspended or elevated heaters shall be so located in all spaces of aircraft hangars that they shall not be subject to injury by aircraft, cranes, movable scaffolding or other objects. Provisions shall be made to assure accessibility to suspended heaters for recurrent maintenance purposes.

4.3 Public Garages

Installation in garages must be in accordance with the following codes:

United States: Refer to Standard for Parking Structures NFPA 88A - latest revision or the Code for Motor Fuel Dispensing Facilities and Repair Garages, NFPA 30A - latest revision.
Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

• Heaters must not be installed less than 8' (2.4 m) above the floor. Minimum clearances to combustibles must be maintained from vehicles parked below the heater.

• When installed over hoists, minimum clearances to combustibles must be maintained from the upper most point of objects on the hoist.

4.4 Electrical

The heater must be electrically grounded in accordance with the following codes:

United States: Refer to National Electrical Code®, NFPA 70 - latest revision. Wiring must conform to the most current National Electrical Code®, local ordinances and any special diagrams furnished.

Canada: Refer to Canadian Electrical Code, CSA C22.1 Part 1 - latest revision.

4.5 Venting

The venting must be installed in accordance with the requirements within this manual and the following codes:

United States: Refer to National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest revision.

Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

4.6 High Altitude

These heaters are approved for installations up to 2000' (610 m)(US), 4500' (1370 m)(Canada) without modification. Consult factory if US installation is above 2000' (610 m) or Canadian installation is above 4500' (1370 m).

SECTION 5: MAJOR COMPONENTS

The figures in this section provide a general overview of component placement in a CRV-Series system. The location of some components such as supports and couplings is crucial for proper installation. Assemble the heater components as shown *on Page 17, Figure 13*.

Optional reflector configurations are shown *on Page 6, Figure 3 through Page 8, Figure 11*. Install appropriate suspension hardware, beam clamps, chain or rod at predetermined locations. Adjustments of chain length will provide uniform pitch.

FIGURE 12: Major Component Descriptions

Burner

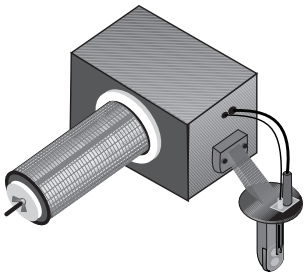

Tube
Hot rolled, heat treated or coated aluminized tube supplied in 10' (3 m) lengths.

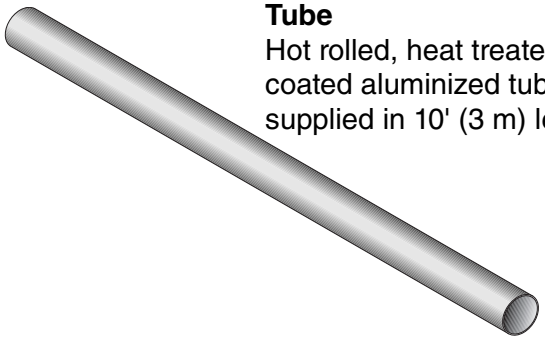

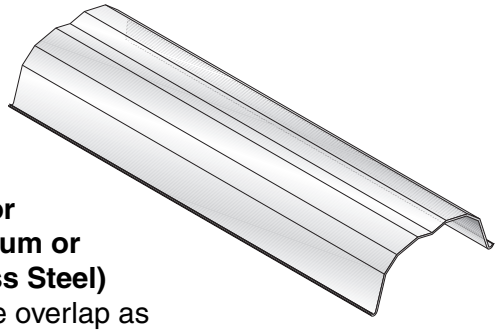

Reflector (Aluminum or Stainless Steel)
Alternate overlap as shown *on Page 24, Section 7.4.3*. Minimum overlap is 6" (16 cm).

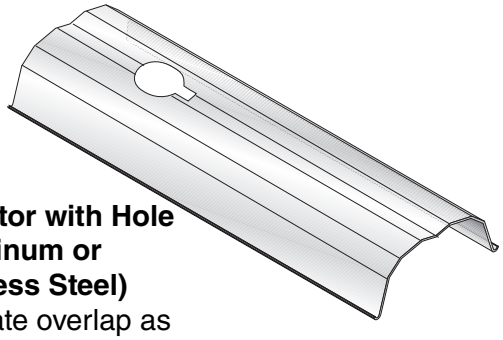

Reflector with Hole (Aluminum or Stainless Steel)
Alternate overlap as shown *on Page 24, Section 7.4.3*. Minimum overlap is 6" (16 cm).

Flex Gas Line with shut-off cock

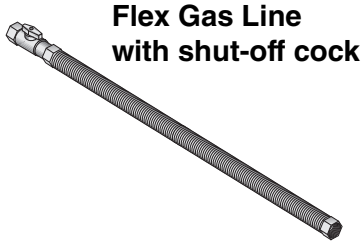

45° Elbow

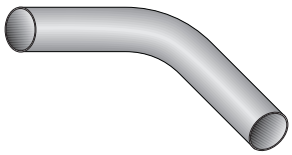

90° Elbow

Combustion Chamber

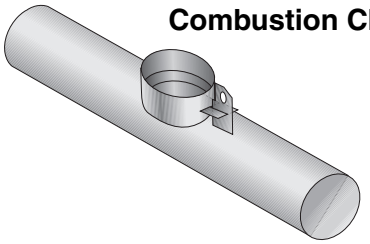

Tee

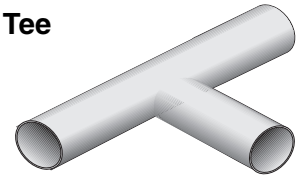

Cross

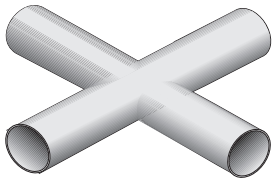

Coupling Assembly with Lock

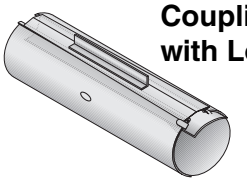

Tube Adapter

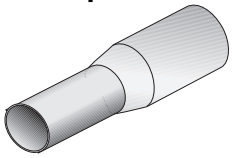

End Vent

FIGURE 10: Major Component Descriptions (Continued)

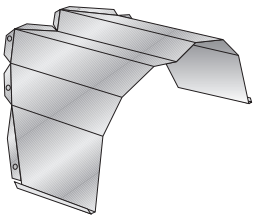

Reflector Joint

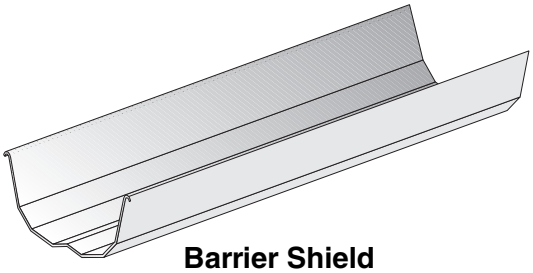

Barrier Shield

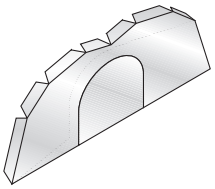

Reflector End Cap (Aluminum or Stainless Steel)
Punch out center section to accommodate tube.

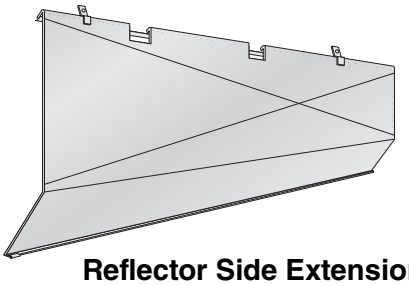

Reflector Side Extension

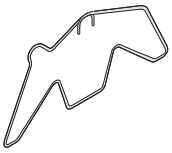

Tube and Reflector Hanger
Suspend system from these hangers.

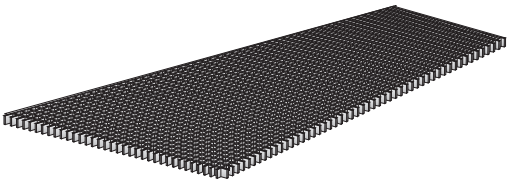

Deco Grille



Reflector Support Strap & Wire Form

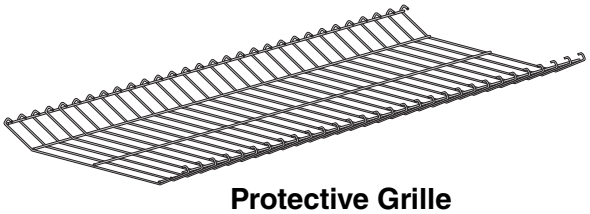

Protective Grille

S-Hook

Turnbuckle

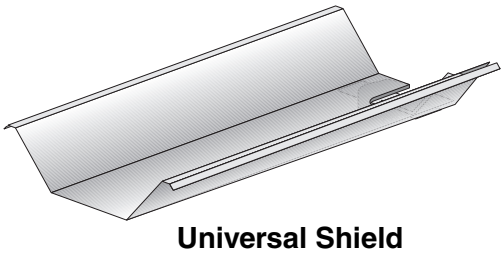

Universal Shield



Reflector Side Extension Bracket

Condensate Valve Assembly

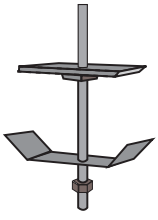

Bracket Assembly

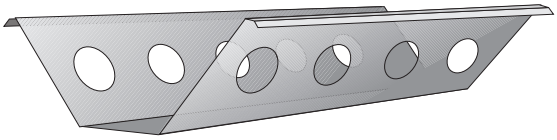

Universal Shield with Holes

FIGURE 10: Major Component Descriptions (Continued)

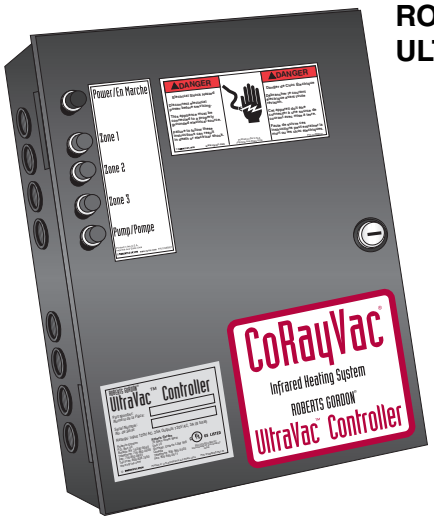

ROBERTS GORDON®
ULTRAVAC™ Controller

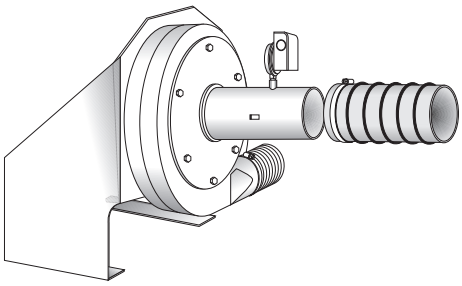

EP-100 Pump Package - 4" dia
For more information, refer to the EP-100 Installation, Operation and Service Manual (P/N 127201NA).

ROBERTS GORDON®
ULTRAVAC™
Variable Frequency Drive

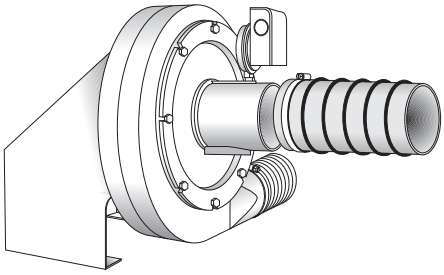

EP-201 Pump Package - 4" dia
EP-203 Pump Package - 4" dia
For more information, refer to the EP-200 Series Installation, Operation and Service Manual (P/N 127200NA).

System Control

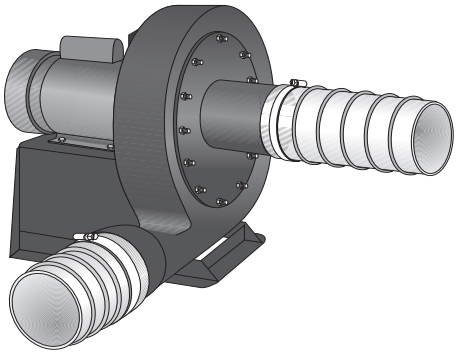

EP-301 Pump Package - 4" dia
EP-301 Pump Package - 6" dia
EP-303 Pump Package - 4" dia
EP-303 Pump Package - 6" dia
For more information, refer to the EP-300 Series Installation, Operation and Service Manual (P/N 127202NA).

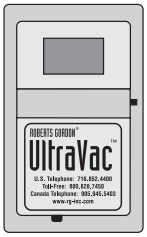

ROBERTS GORDON®
ULTRAVAC™
Adjustable Indoor Sensor



Outdoor Sensor
(P/N 10081501)

5.1 Standard Parts List

Table 1: Contents of CRV-Series Burner Carton

Part No.	Description
0270XXXX	Burner (Rate and Fuel Varies)
*91412200	Flexible Stainless Steel Gas Hose, 1/2" NPT (US models only)
013676XX	End Vent Plate
01397300	Accessory Package
01361200	Filter Support Disk
01367800	Combustion Chamber Gasket
02724901	Door Assembly w/ Hole
91115100	Screw #10 - 24 x 5/8
91119500	U-Clip
91905500	Filter Support
92123900	Nut 5/16 - 18
92511601	Wing Nut #10 - 24
96411600	Lock Washer 5/16"
01312401	Filter and Gasket

* Canadian Models: Rubber (Type 1) Gas Hoses available as an accessory. *See Page 48, Figure 28*.

Table 2: Common CRV-Series Components

Part No.	Description
Combustion Chambers	
02722300-1P	Hot Rolled Steel Combustion Chamber
02722301-1P	Heat-Treated Aluminized Steel Combustion Chamber
0272230D-1P	Porcelain Coated Steel Combustion Chamber
02721200-1P	Cast Iron Combustion Chamber

Part No.	Description
Tubing and Related Accessories	
01312700	Coupling, 4" (10 cm) Plain
01312706	Coupling, 6" (15 cm) Plain
0131270I	Coupling, 4" (10 cm) Lined
01331900	Coupling, 4" (10 cm) Damper
E0009356	Coupling, 6" (15 cm) Damper
0133022D	Tee, 4" (10 cm) Coated
01330203	Tee, 4" (10 cm) Aluminized
01330204	Tee, 6" (15 cm) Aluminized
0133092D	Cross, 4" (10 cm) Coated
01330903	Cross, 4" (10 cm) Aluminized
01330904	Cross, 6" (15 cm) Aluminized
01335801	Elbow, 4" (10 cm) Aluminized 90°
T0100320	Elbow, 6" (15 cm) Aluminized 90°
0133580D	Elbow, 4" (10 cm) Coated 90°
01336101	Elbow, 4" (10 cm) Aluminized 45°
0133610D	Elbow, 4" (10 cm) Coated 45°
91409300	Tube, Hot Rolled Steel 4" (10 cm) dia 10' (3 m)
91409403	Tube, Non-Heat Treated Aluminized 4" (10 cm) dia 10' (3 m)
91409408	Tube, Heat Treated Aluminized 4" (10 cm) dia 10' (3 m)
91409420	Tube, Non-Heat Treated Aluminized 6" (15 cm) dia 10' (3 m)
9141030D	Tube, Coated 4" (10 cm) dia 10' (3 m)
E0009105	Tube, Heat Treated Aluminized 6" (15 cm) dia 10' (3 m)

Part No.	Description
91418200	Tube Adapter, Aluminized 6" (15 cm) dia x 4" (10 cm) dia
02722100	Adapter, 4" (10 cm) Cast Iron
02726000K	Lower Tube Temperature Insert
91240010	Tube Hanger, 6" (15 cm)
91308001	High Temperature Pipe Compound, 1lb. can

Part No.	Description
Venting Accessories	
01324401	Outside Air Supply Takeoff, 4" (10 cm)
01326801	Outside Air Filter Housing
90707501	Air Supply Blower/Power Venter
91409601	Outside Air Flex Duct, 4" (10 cm) (Box of 8 - 8' [2.4 m] sections)

Part No.	Description
Reflectors and Related Accessories	
01329910	Reflector Side Extension Support
03050010	Reflector Support Package (Tubing)
02712700	Reflector Side Extension, 2 Clips, 2 Screws
02716400	Reflector Support Package (Schedule 40 Pipe)
02750303	Reflector, Aluminum
027503SS	Reflector, Stainless Steel
02750304	Reflector, Aluminum with Hole
027503SH	Reflector, Stainless Steel with Hole
02750800	Reflector End Cap, Aluminum
027508SS	Reflector End Cap, Stainless Steel
027508SH	Reflector End Cap, Stainless Steel with Hole
02750900	Reflector Joint
027509SS	Reflector Joint, Stainless Steel
027127SS	Reflector Side Extension, Stainless Steel
03090100	Tube and Reflector Hanger
02790300	Tube and Reflector Hanger, Cast Iron
91907302	S-Hook
91903201	Turnbuckle
91903300	Spring Hook
91903202	Turnbuckle with Eyebolt
02712100	Universal Shield Support
02751800	Universal Shield with Holes
02751801	Universal Shield
027518SS	Universal Shield, Stainless Steel

Part No.	Description
Control Packages and Accessories	
10001501	Water Resistant Sensor
02770002	System Control
ULTRAVAC™ Control Packages	
URVCCM	ROBERTS GORDON® ULTRAVAC™ Central Controller (with Modem Chip & Software) Includes:
URVSC	ROBERTS GORDON® ULTRAVAC™ Controller
10080142	Modem Chip
10080450	Comms Equalization Cable
10081501	Outdoor Sensor
10080410	PC Connection Cable Package

URVCCR	ROBERTS GORDON® ULTRAVAC™ Central Controller (with RS-485 Converter & Software) Includes:
Part No.	**Description**
URVSC	ROBERTS GORDON® ULTRAVAC™ Controller
10080142	Modem Chip
10080450	Comms Equalization Cable
10080430	RS-485 Converter with 9 V Power Supply
10081501	Outdoor Sensor
10080410	PC Connection Cable Package
URVCCL	ROBERTS GORDON® ULTRAVAC™ Central Controller (with TCP/IP Communication Module & Software) Includes:
URVSC	ROBERTS GORDON® ULTRAVAC™ Controller
10080142	Modem Chip
10080450	Comms Equalization Cable
10080440	TCP/IP Communication Module
10081501	Outdoor Sensor
10080410	PC Connection Cable Package
URVBNC	Controller, ROBERTS GORDON® ULTRAVAC™ BACnet®
URVSC	Controller, ROBERTS GORDON® ULTRAVAC™, 1 Pump 3 Zones (Satellite Control)
URVU	Controller, ROBERTS GORDON® ULTRAVAC™, Unitary
Variable Frequency Drive Assemblies	
VFD75115	VFD Assembly, .75 HP, 115 V, 1 Ø Input
VFD75230	VFD Assembly, .75 HP, 230 V, 1 Ø Input
VFD20230	VFD Assembly, 2 HP, 230 V, 1 Ø Input
VFD75115N4	VFD Assembly, .75 HP, 115 V, 1 Ø Input, NEMA 4
VFD75230N4	VFD Assembly, .75 HP, 230 V, 1 Ø Input, NEMA 4
VFD75460	VFD Assembly, .75 HP, 460 V, 3 Ø Input
VFD75460N4	VFD Assembly, .75 HP, 460 V, 3 Ø Input, NEMA 4
VFD20230N4	VFD Assembly, 2 HP, 230 V, 1 Ø Input, NEMA 4
VFD20460	VFD Assembly, 2 HP, 460 V, 3 Ø Input
VFD20460N4	VFD Assembly, 2 HP, 460 V, 3 Ø Input, NEMA 4
ULTRAVAC™ Accessories	
10080142	Modem, Plug-In Chip
10080410	Cable Package, PC Connection
10080430	RS-485 Converter with 9V Power Supply
10080440	TCP/IP Communication Module
10081500	Sensor, Adjustable Indoor, Deg F, ROBERTS GORDON® ULTRAVAC™ Controller
10081501	Sensor, Outdoor, ULTRAVAC™
10081502	Sensor, Adjustable Indoor, Deg C, ULTRAVAC™
90602450	Voltage Surge Suppressor 277/480 V
90602451	Voltage Surge Suppressor 120 V
90602452	Voltage Surge Suppressor 120/240 V 1 Ø 60 Hz
90602460	Line Reactor 480 V 3 Ø 60 Hz w/Enclosure (Output)
90602461	Line Reactor 230 V 3 Ø 60 Hz .75 HP (Output)
90602462	Line Reactor 230 V 3 Ø 60 Hz 2 HP (Output)
90602470	Line Reactor 480 V 3 Ø 60 Hz 4 A w/Enclosure (Input)

Part No.	Description
Thermostats	
05023000	Load Relay Package
90417600K	Transformer Relay - SPST (12 A)
90436300	Transformer Relay - SPDT (12 A)
90423000	24 V Low Voltage Thermostat (Marked 1-5)
90424300	Thermostat Guard
Part No.	**Description**
90425104	Thermostat, Modulating LonWorks®
90425105	Thermostat, Modulating
90425109	Thermostat, Modulating BACnet®
90429107	Thermostat, On/Off BACnet®
10081520	Sensor, Remote Modulating
10081521	Sensor, Outdoor Modulating

Part No.	Description
Deco Grille (2' x 4' [.6 m x 1.2 m])	
01365900	Shield Frame
01370408	Reflector Side Extension 8" x 48" (20.3 cm x 122 cm)
01370412	Reflector Side Extension 12" x 48" (30.5 cm x 122 cm)
01370416	Reflector Side Extension 16" x 48" (40.6 cm 122 cm)
91407000	Grille, Aluminum 2' x 4' (.6 m x 1.2 m)
Part No.	**Description**
Protective Grille	
08050001	Protective Grille, 40" (1 m)
08050002	Protective Grille End Cap

Part No.	Description
Shields	
02750303	Barrier Shield
02751801	Universal Shield
027518SS	Universal Shield, Stainless Steel
02751800	Universal Shield with Holes

Part No.	Description
Pump Packages and Accessories	
02719105	EP-100 Pump Package
02719100	EP-100 Pump
02724700	Accessory Package
02716305	EP-201 Pump Package
01312001	EP-201 Pump
01317805	Accessory Package
02712034	EP-203 Pump Package
01312002	EP-203 Pump
01317805	Accessory Package
02723014	EP-301 Pump Package 4"
02730101	EP-301 Pump Assembly
02730104	Accessory Package
02723016	EP-301 Pump Package 6"
02730101	EP-301 Pump Assembly
02730106	Accessory Package
02723034	EP-303 Pump Package 4"
02730103	EP-303 Pump Assembly
02730104	Accessory Package
02723036	EP-303 Pump Package 6"
02730103	EP-303 Pump Assembly
02730106	Accessory Package

Part No.	Description
Pump Accessories	
90430600K	Pressure Switch
01327001	Condensate Check Valve Assembly
02718851	Drain Cap, 4" (10 cm)
02718852	Drain Cap, 6" (15 cm)
01327002	Condensate Neutralization Tube 200
01327003	Condensate Neutralization Tube 600
01327004	Condensate Neutralization Tube 1000
01327005	Condensate Neutralization Tube 2000
01327007	Refill, Condensate Neutralization Tube 600
01327008	Refill, Condensate Neutralization Tube 1000
01327009	Refill, Condensate Neutralization Tube 2000

Part No.	Description
Contactors	
10050011	Contactor, 120 Vac for EP-203, EP-303, 3 Ø EP-100, EP-201 208/230 V, 1 Ø EP-301 208/230 V, 1 Ø
10050012	Contactor, 120 Vac for EP-301, 120 V, 1 Ø

SECTION 6: DESIGN REQUIREMENTS

The CRV-Series system's design is related to the system operation and performance required by the building being heated. Every effort should be made to follow the dimensions on the layout drawing. If deviations are necessary, either contact the company responsible for the layout design, your ROBERTS GORDON® independent distributor, or consult the CRV-Series Design Manual (P/N 127500NA).

FIGURE 13: Heater Assembly Overview

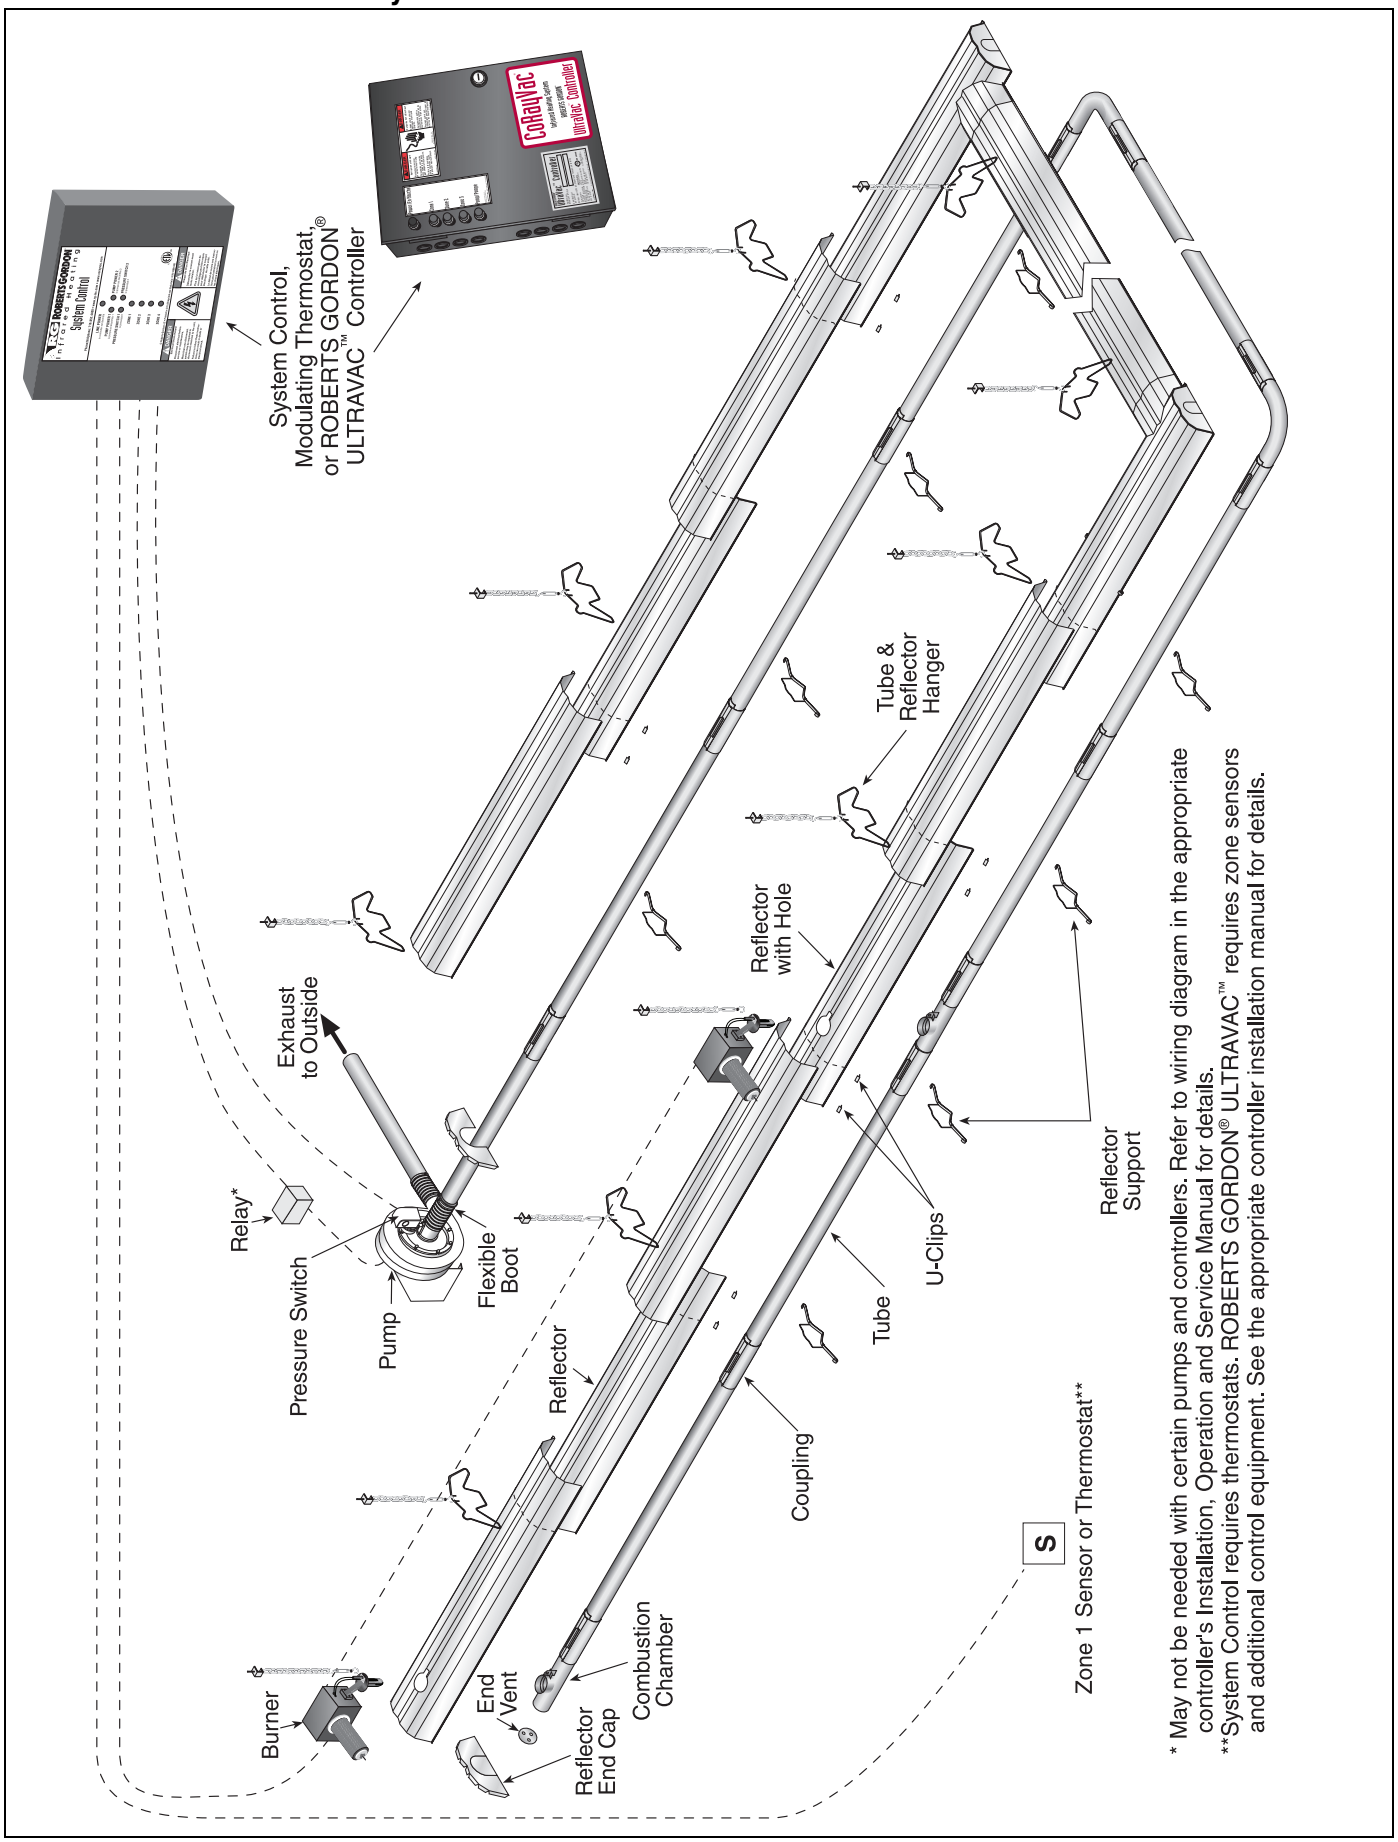

SECTION 7: HEATER INSTALLATION

⚠WARNING

Severe Injury Hazard

Secure burner to combustion chamber with nuts and lockwashers.

Hang heater with materials with a minimum working load of 75 lbs (33 kg).

Failure to follow these instructions can result in death, injury or property damage.

⚠WARNING

Cut/Pinch Hazard

Wear protective gear during installation, operation and service.

Edges are sharp.

Failure to follow these instructions can result in injury.

To ensure your safety and comply with the terms of the warranty, all units must be installed in accordance with these instructions.

The gas or the electrical supply lines must not be used to support the heater.

Do not locate the gas or electric supply lines directly over the path of the flue products from the heater.

The heater must be installed in a location that is readily accessible for servicing.

The heaters must be installed in accordance with clearances to combustibles as indicated on the rating plate and in this instruction manual.

The minimum and maximum gas inlet pressures must be maintained as indicated on the rating plate.

Typical installation configurations are shown *on Page 19, Figure 14*.

Expansion and contraction of the tube dictates that the minimum suspension lengths must be maintained.*See table on Page 19, Figure 14*.

FIGURE 14: Critical Hanger Placement

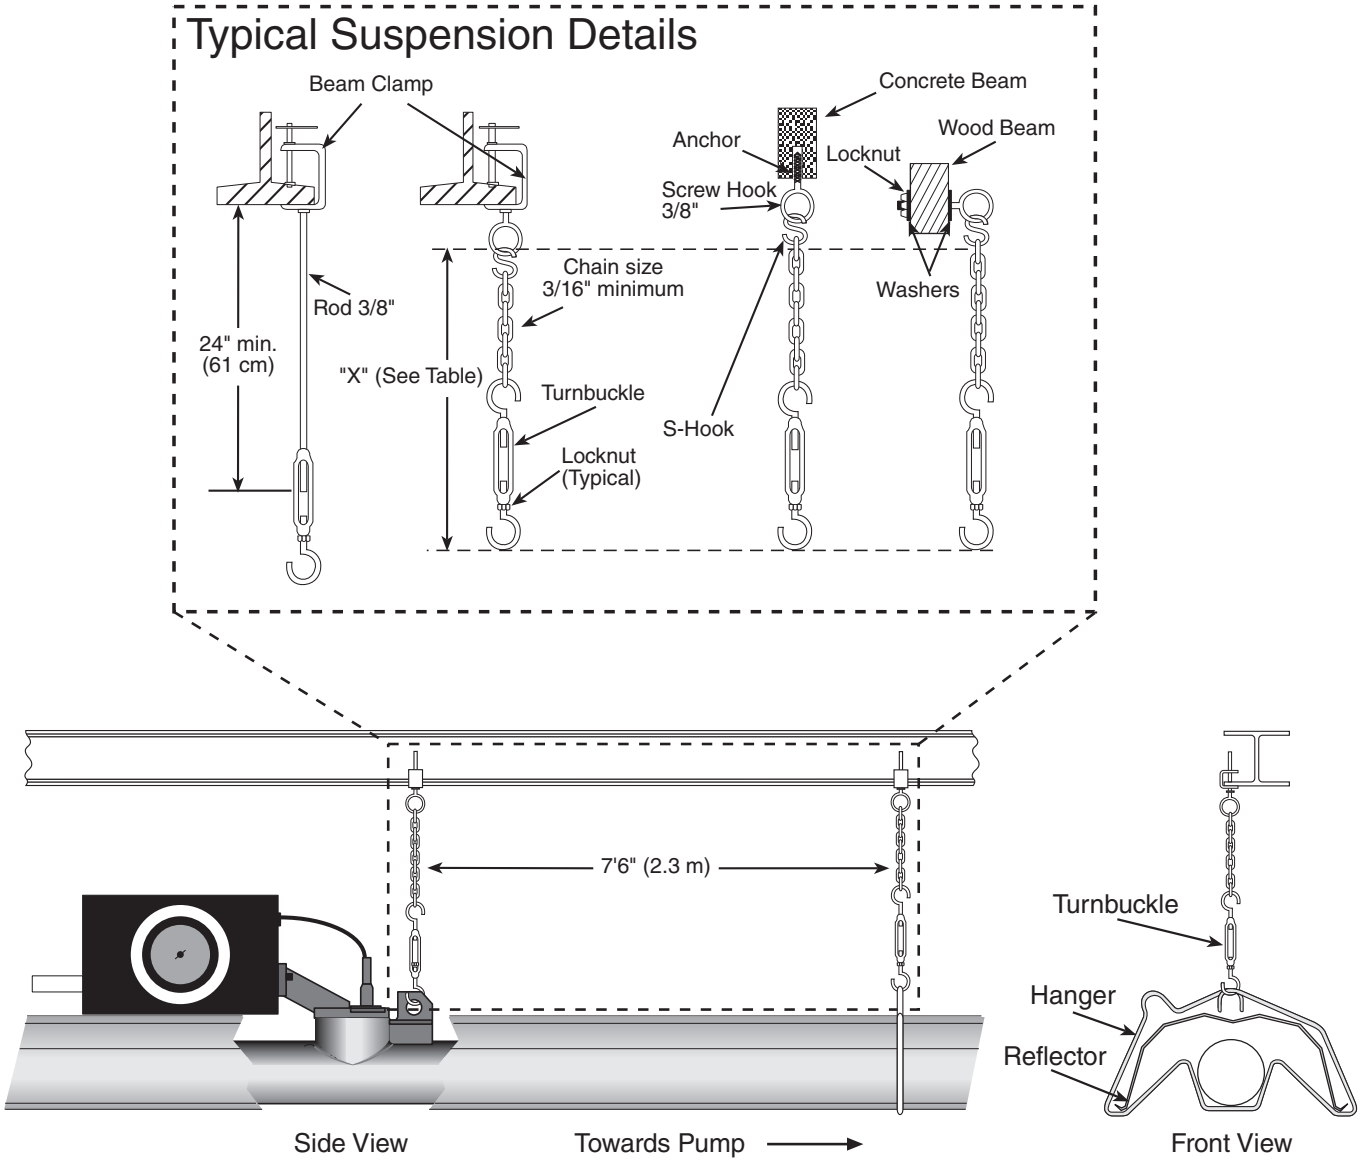

Description	Part Number
Turnbuckle	91903201
S-Hook	91907302
Tube/Reflector Hanger	03090100

Run Length	Typical Expansion	Minimum "X" Length
50' (15 m)	±1" (3 cm)	12" (30 cm)
100' (31 m)	±2" (5 cm)	24" (61 cm)
150' (46 m)	±3" (8 cm)	36" (91 cm)
200' (61 m)	±4" (10 cm)	46" (122 cm)
250' (76 m)	±5" (13 cm)	57" (145 cm)

Step 7.1 Tube Installation

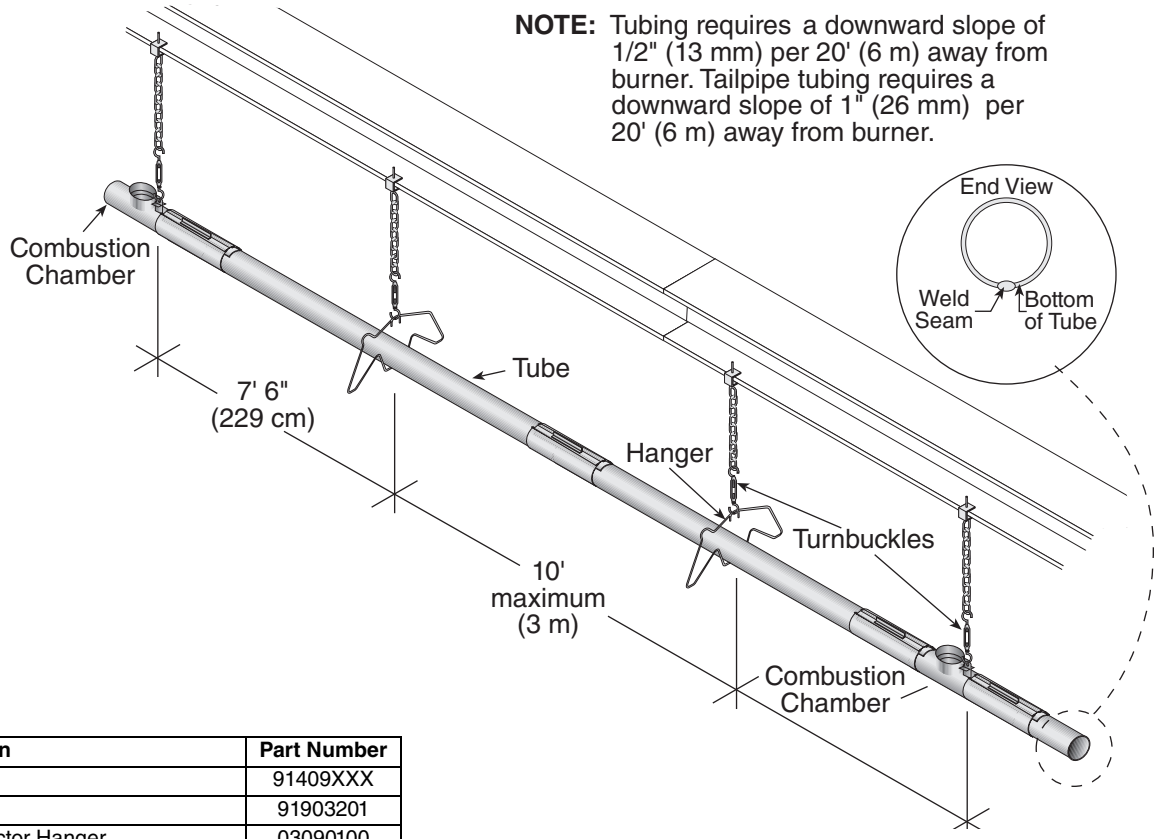
NOTE: Tubing requires a downward slope of 1/2" (13 mm) per 20' (6 m) away from burner. Tailpipe tubing requires a downward slope of 1" (26 mm) per 20' (6 m) away from burner.
End View
Weld Seam
Bottom of Tube
Combustion Chamber
Tube
7' 6" (229 cm)
Hanger
Turnbuckles
10' maximum (3 m)
Combustion Chamber

Description	Part Number
Tube	91409XXX
Turnbuckle	91903201
Tube/Reflector Hanger	03090100

Step 7.2 Coupling and Tube Assembly

A Close coupling with tab.

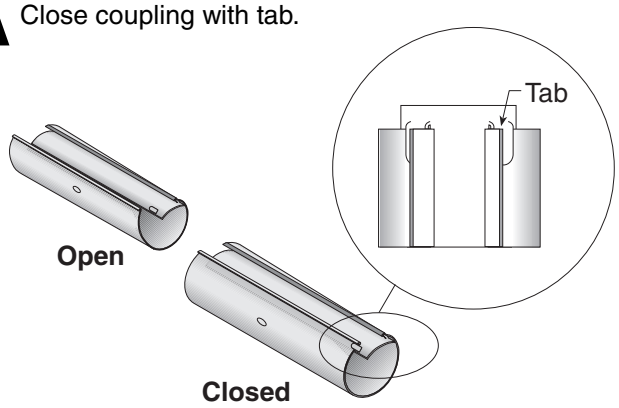

B Start slide bar/coupling lock onto coupling.

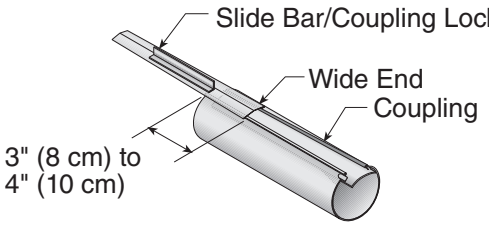

C Insert tubes into coupling.

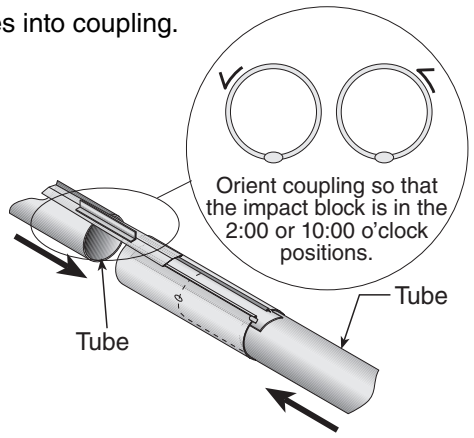

D Tighten coupling to join tubes.

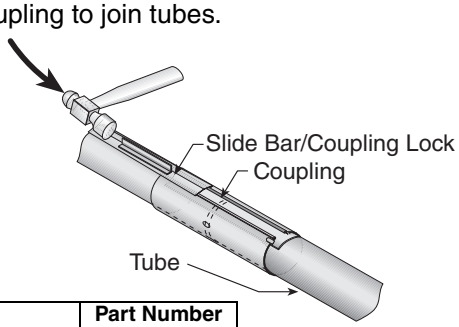

Description	Part Number
Coupling	01329600
Slide Bar/Coupling Lock	01329700
Tube	91409XXX

Step 7.2.1 Coupling and Tube Assembly (Continued)

Tighten slide bar as shown below.

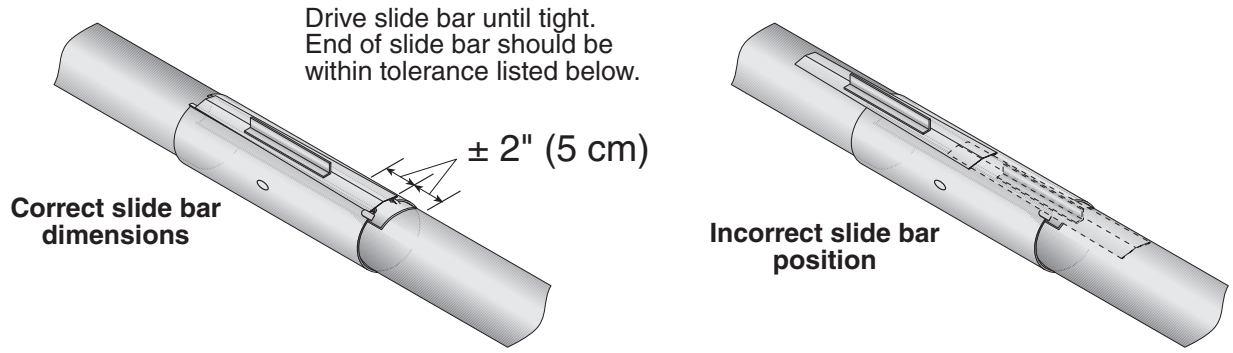

Repeat *Step 7.2*, A - D until all tubes are assembled.
NOTE: If coupling is not tight, loss of vacuum can occur.

7.3 Elbow Package Configuration

Step 7.3.1 Elbow Installation

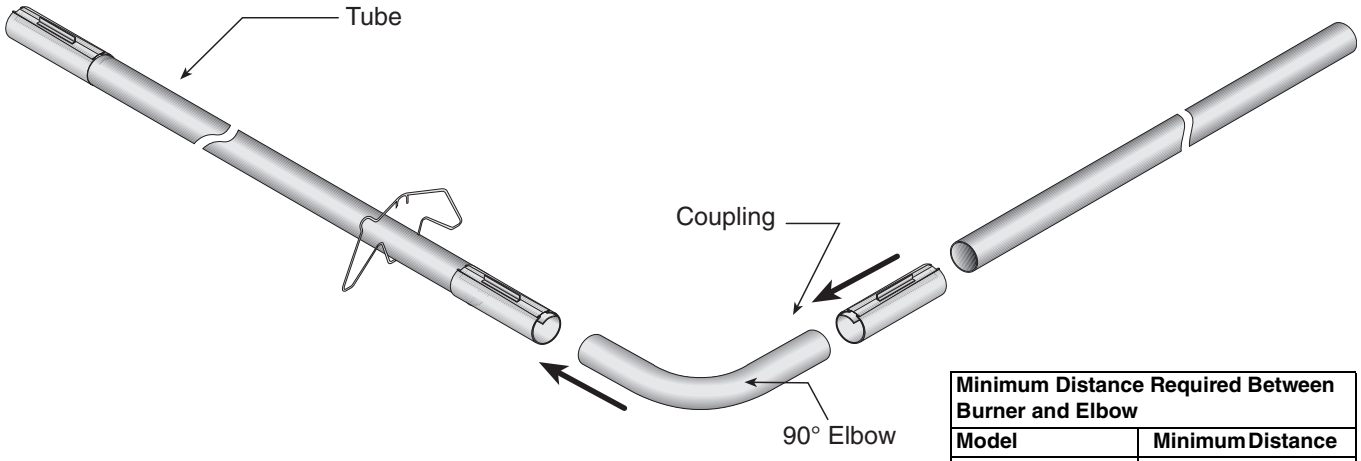

Description	Part Number
Elbow Package	**02718702**
90° Elbow	01335801
Coupling	01312700
Reflector End Cap	02750800
Reflector Joint Piece	02750900
U-Clip Package	91107720

Minimum Distance Required Between Burner and Elbow	
Model	**Minimum Distance**
CRVB-2	5' (1.5 m)
CRVB-4	5' (1.5 m)
CRVB-6	10' (3 m)
CRVB-8	10' (3 m)
CRVB-9	10' (3 m)
CRVB-10	15' (4.5 m)
CRVB-12A	15' (4.5 m)
CRVB-12	15' (4.5 m)

Step 7.3.2 Elbow Installation

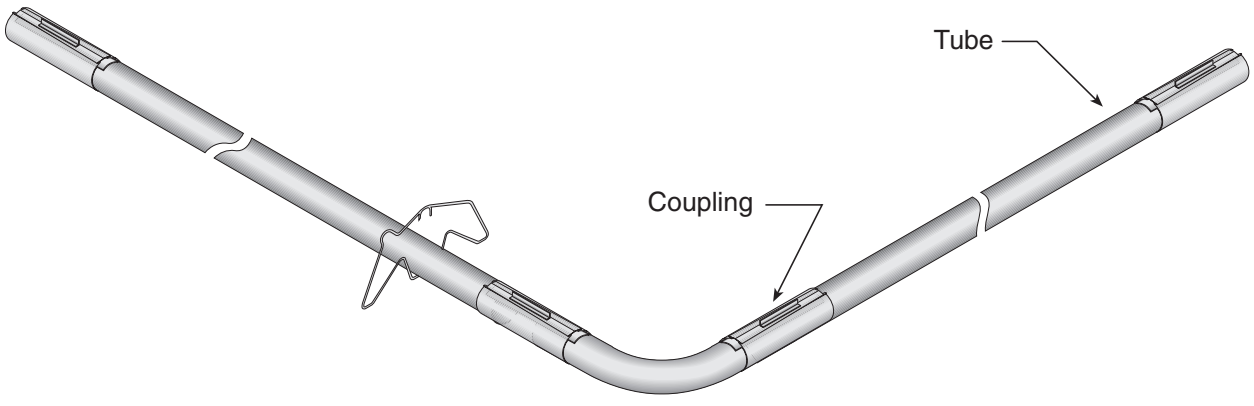

Step 7.4 Reflector Installation

⚠ WARNING

Fire Hazard

Support reflector with reflector hanger and support strap.

Reflector must not touch tube.

Failure to follow these instructions can result in death, injury or property damage.

Step 7.4.1 Reflector Installation with Hole

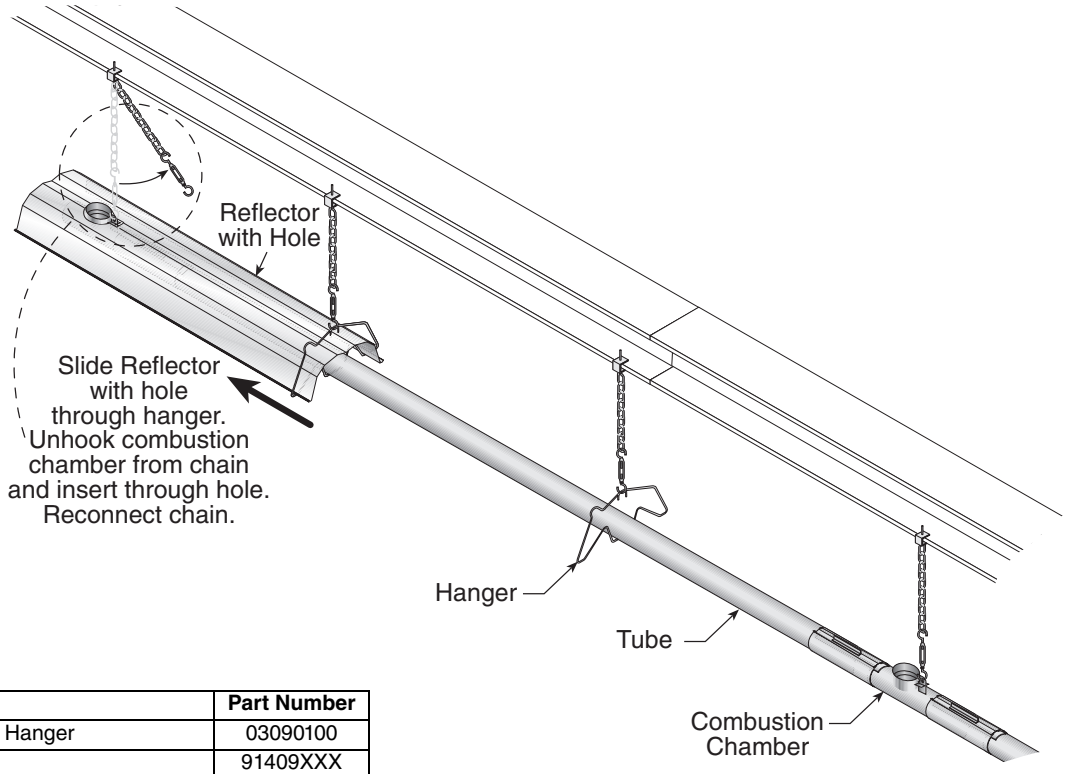
Reflector with Hole
Slide Reflector with hole through hanger. Unhook combustion chamber from chain and insert through hole. Reconnect chain.
Hanger
Tube
Combustion Chamber

Description	Part Number
Tube/Reflector Hanger	03090100
Tube	91409XXX
Reflector with Hole	02750304

Step 7.4.2 Reflector Installation

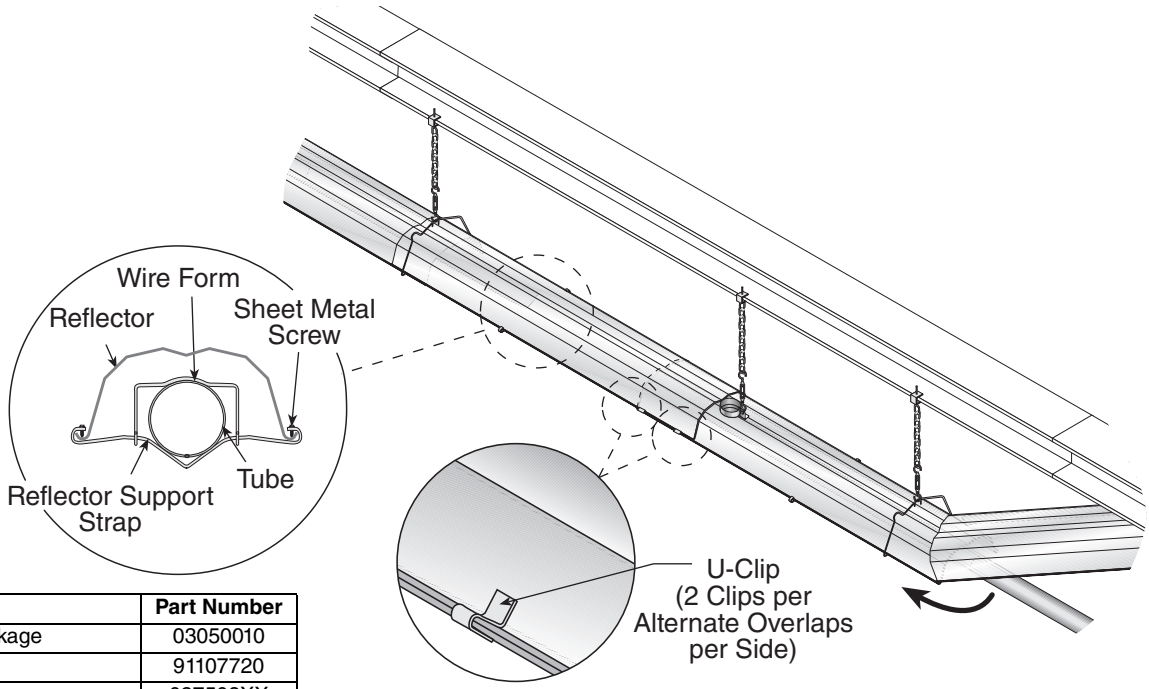

Description	Part Number
Reflector Support Package	03050010
U-Clip Package	91107720
Reflector End Cap	027508XX

Step 7.4.3 Reflector, U-Clip and Reflector Support Installation

The pictorial drawings of the heater construction in *Section 7* are schematic only and provide a general guideline of where hangers, reflector supports and U-clips are to be installed.
To ensure proper expansion and contraction movement of the reflectors, a combination of U-clips and reflector supports are used. The positioning of reflector supports and U-clips depend on the individual installation. Use either pop rivets or sheet metal screws instead of u-clips when installing end caps and joint pieces in areas where impact and high wind may be a factor. The following rules must be observed.

1. The first reflector after the burner must be affixed in the middle of the reflector with a reflector support and tight screws.

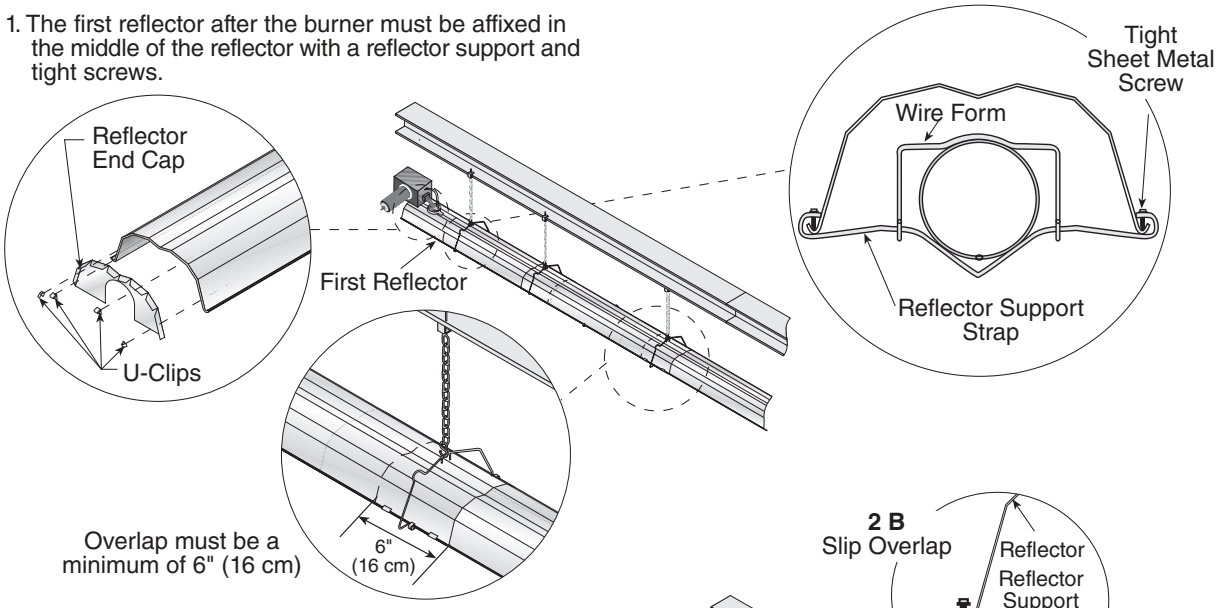

2. The overlap at the first and second reflector is a **slip overlap**. Thereafter, every third reflector joint is a slip overlap. A slip overlap is achieved by either:
   a.) both reflectors lay inside a hanger. (No reflector support needed).
   b.) using a reflector support with loose screws at the reflector overlap.

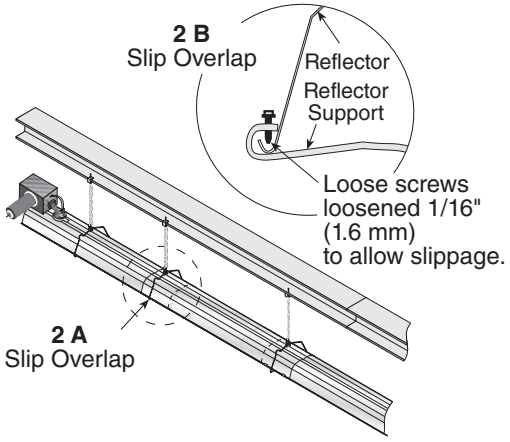

3. The remaining reflector overlaps require a **non-slip overlap connection.** To affix the reflectors together in a non-slip overlap either:
   a.) use reflector support and tight screws.
   b.) if both reflectors lay inside a hanger, u-clips or sheet metal screws may be used.

   This section of three reflectors joined together must be affixed to the tube with at least one reflector support with tight screws.

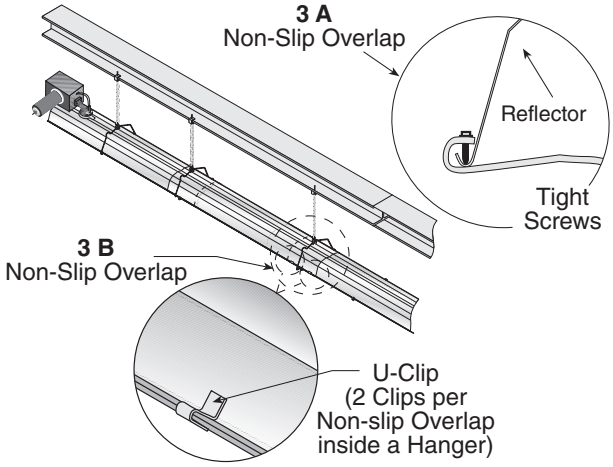

Description	Part Number
Reflector Support Package	**03050010**
Wire Form	91908004
Reflector Support Strap	03050000
Screw #8 x 3/4	94320812
U-Clip Package	91107720
Reflector End Cap	027508XX

Step 7.5 Burner Installation

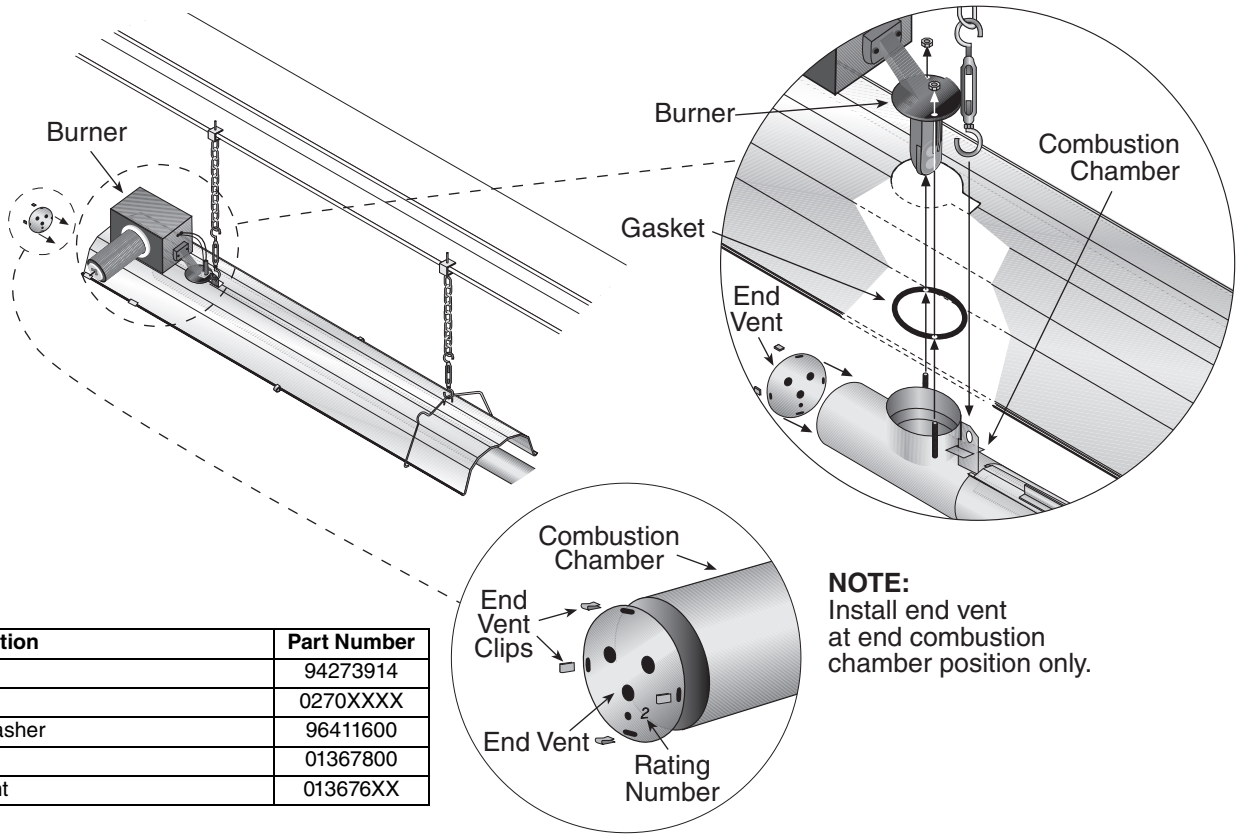

Description	Part Number
Bolt	94273914
Burner	0270XXXX
Lock Washer	96411600
Gasket	01367800
End Vent	013676XX

SECTION 8: OPTIONAL HEATER ACCESSORIES

⚠WARNING

Cut/Pinch Hazard

Wear protective gear during installation, operation and service.

Edges are sharp.

Failure to follow these instructions can result in injury.

Step 8.1 Tee Installation

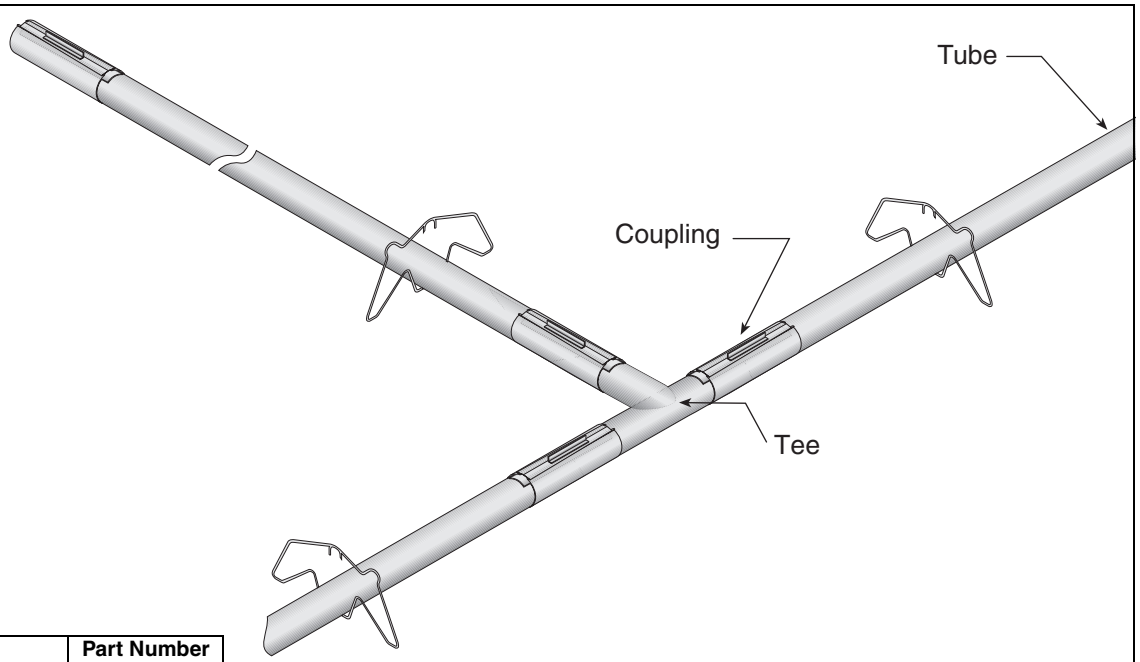

Description	Part Number
Tee	01330XXX
Tube/Reflector Hanger	03090100
Tube	91409XXX
Coupling	01312700

Step 8.2 Reflector Joint

Step 8.2.1 Reflector Joint Installation

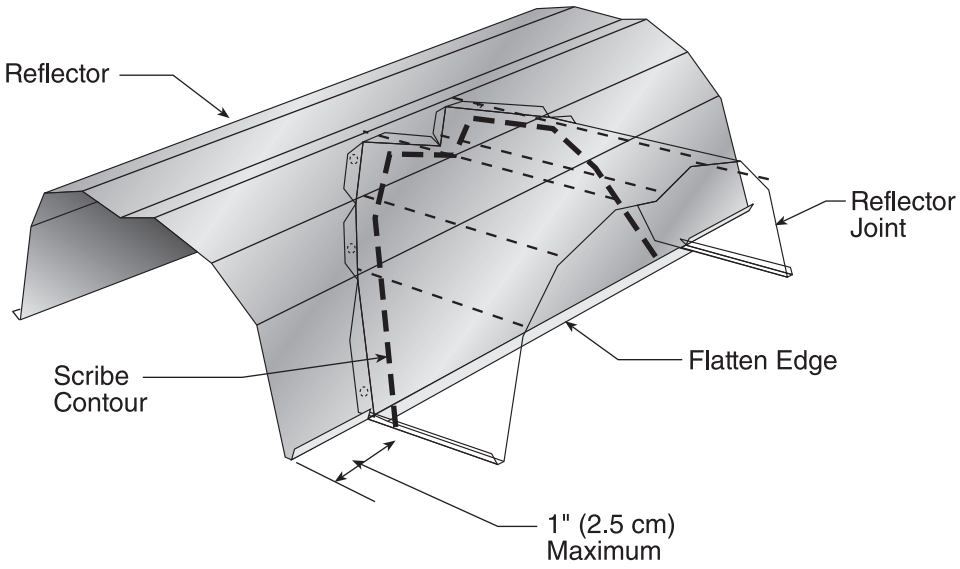

Step 8.2.2 Reflector Joint Installation

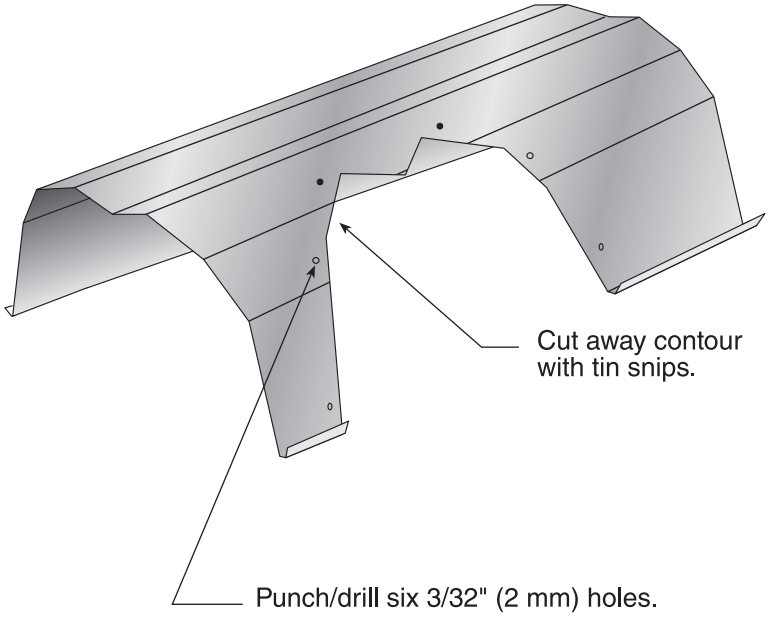

Step 8.2.3 Reflector Joint Detail

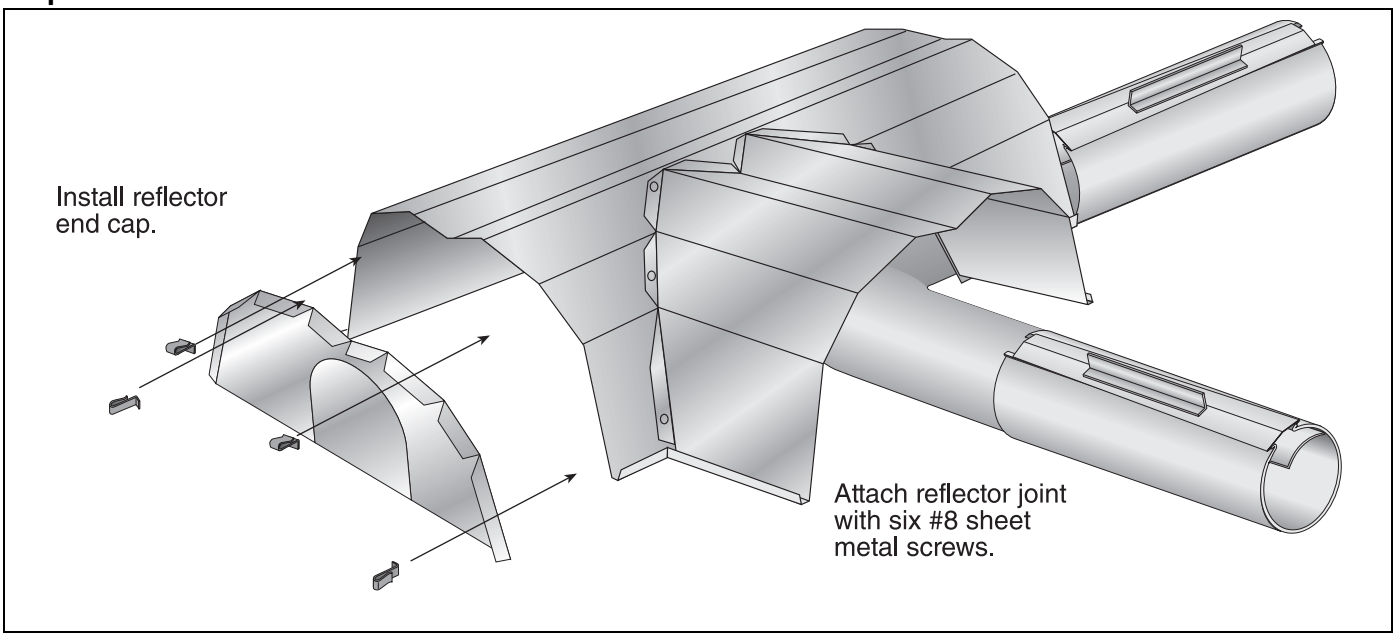

FIGURE 15: Reflector Joint Detail

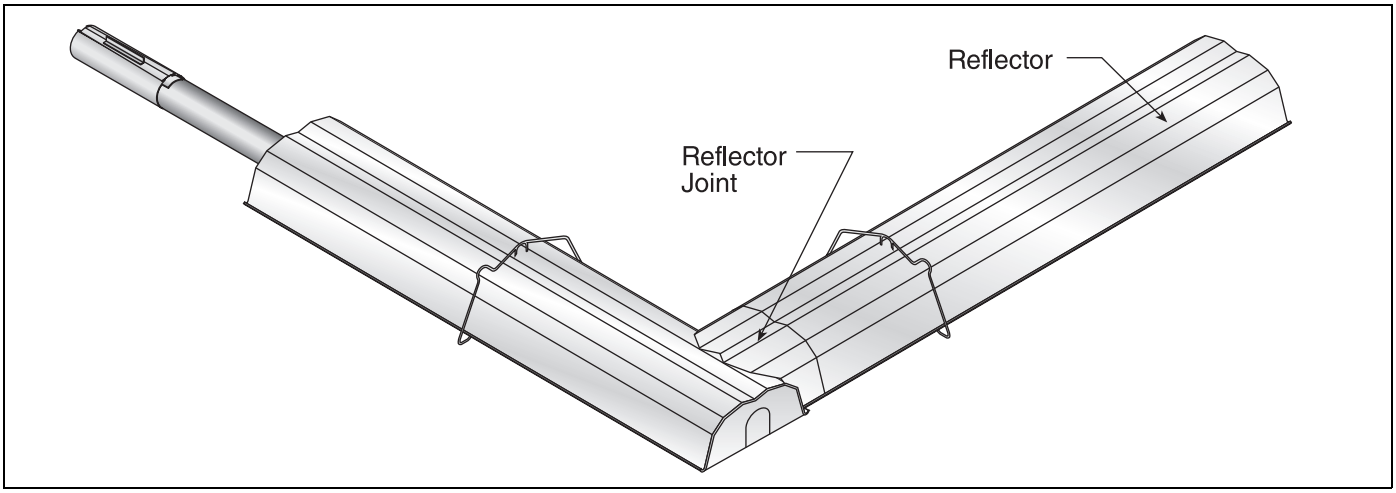

8.3 Reflector Side Extension

Step 8.3.1 Bracket Installation

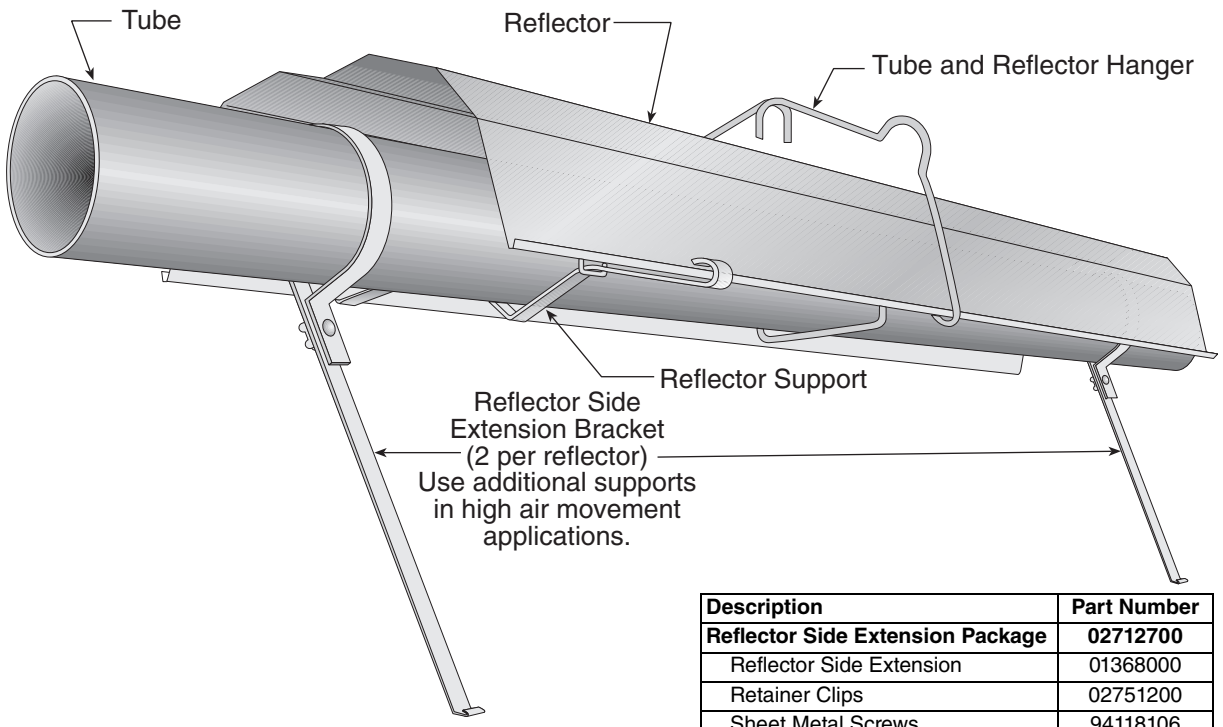

Description	Part Number
Reflector Side Extension Package	**02712700**
Reflector Side Extension	01368000
Retainer Clips	02751200
Sheet Metal Screws	94118106
Order Separately	
Reflector Side Extension Bracket	01329910

Step 8.3.2 Side Reflector Installation

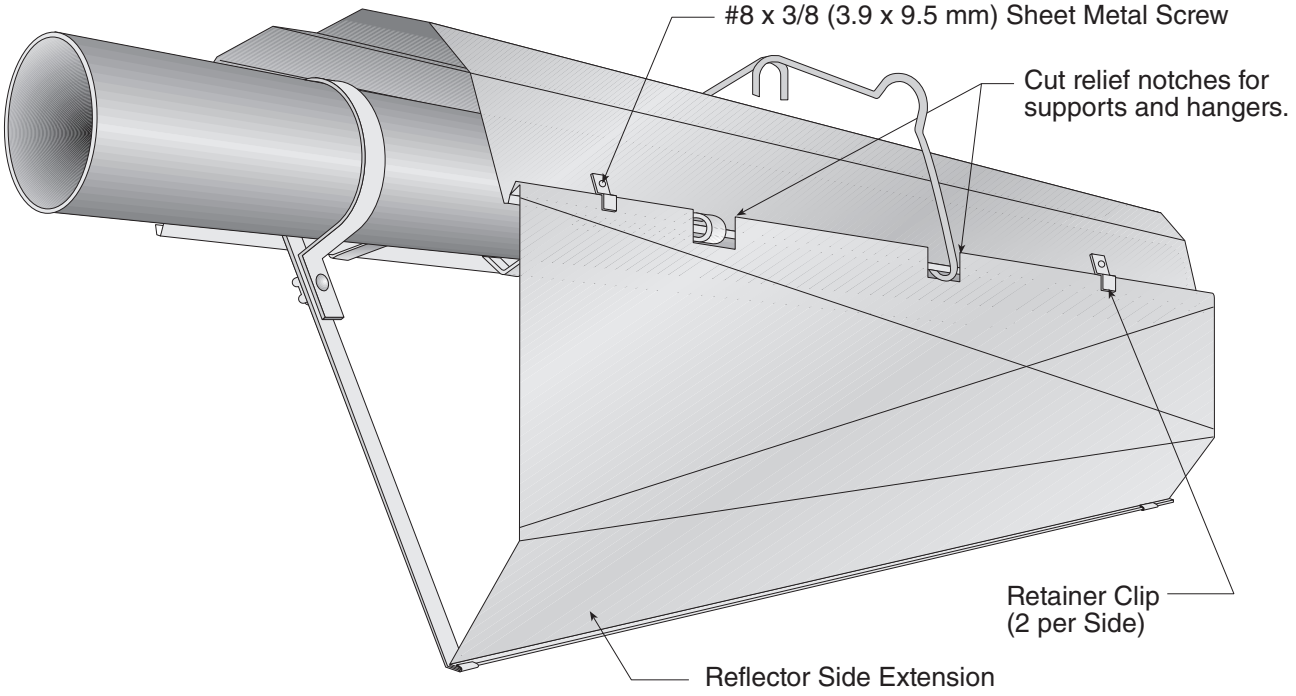
#8 x 3/8 (3.9 x 9.5 mm) Sheet Metal Screw
Cut relief notches for
supports and hangers.
Retainer Clip
(2 per Side)
Reflector Side Extension

8.4 Universal Shield

Universal shields are adjustable aluminum reflectors whose angle and height can be adjusted to direct heat to or away from a desired area. *See Page 7, Figure 6 through Page 7, Figure 8* for positions.

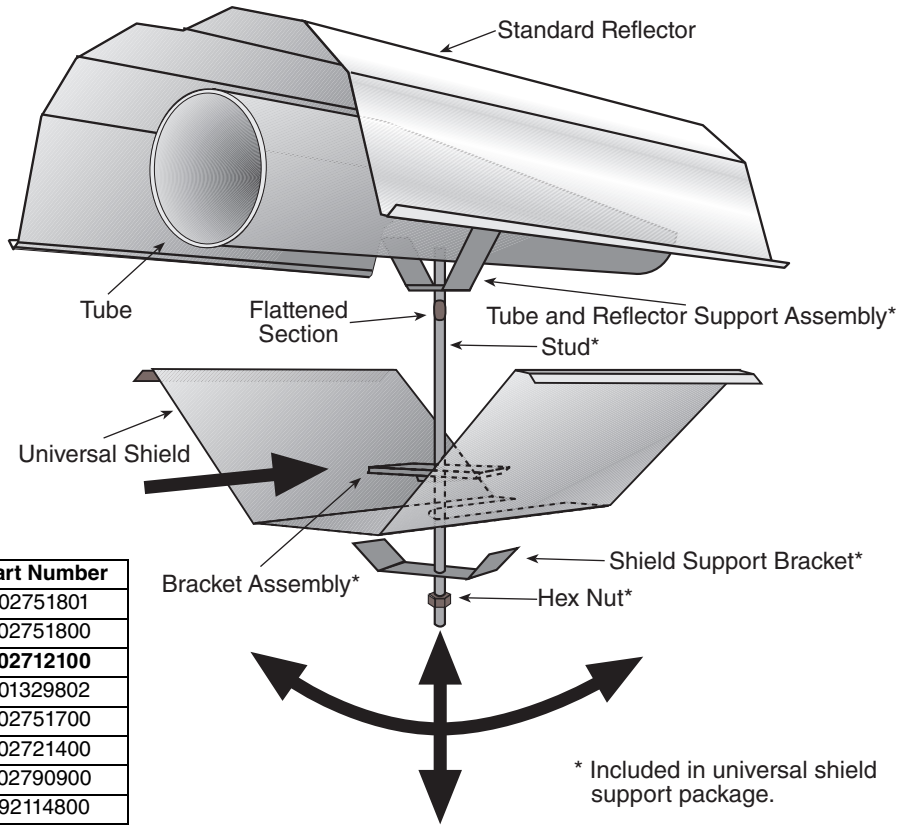

Description	Part Number
Universal Shield	02751801
Universal Shield with Holes	02751800
Universal Shield Support Package	**02712100**
Tube and Reflector Support Assembly	01329802
Universal Shield Support	02751700
Shield Bracket Assembly	02721400
Stud	02790900
Hex Nut	92114800

8.5 Barrier Shield

Do not install barrier shield less than 20' (6 m) downstream of any burner.
Do not attach end caps to the ends of the barrier shields. For lengths greater than 8' (2.6 m), use universal shields.
Do not use barrier shields for burner sizes larger than 80,000 Btu/h.

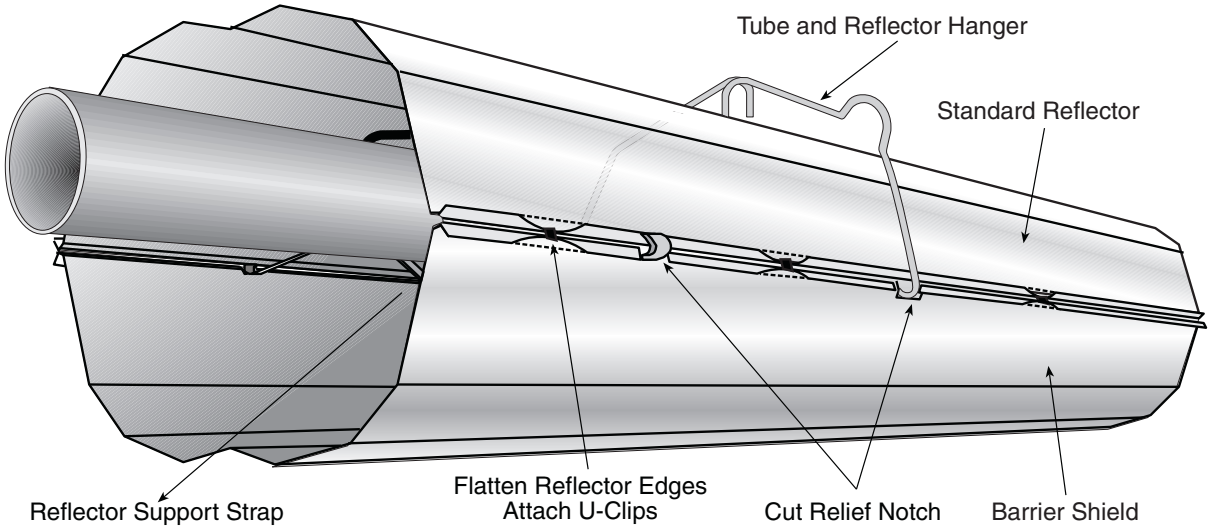

Description	Part Number
Barrier Shield	02750303
U-Clip Package	91107720

8.6 Two-Foot Decorative Grille Installation

Step 8.6.1 Grille Installation

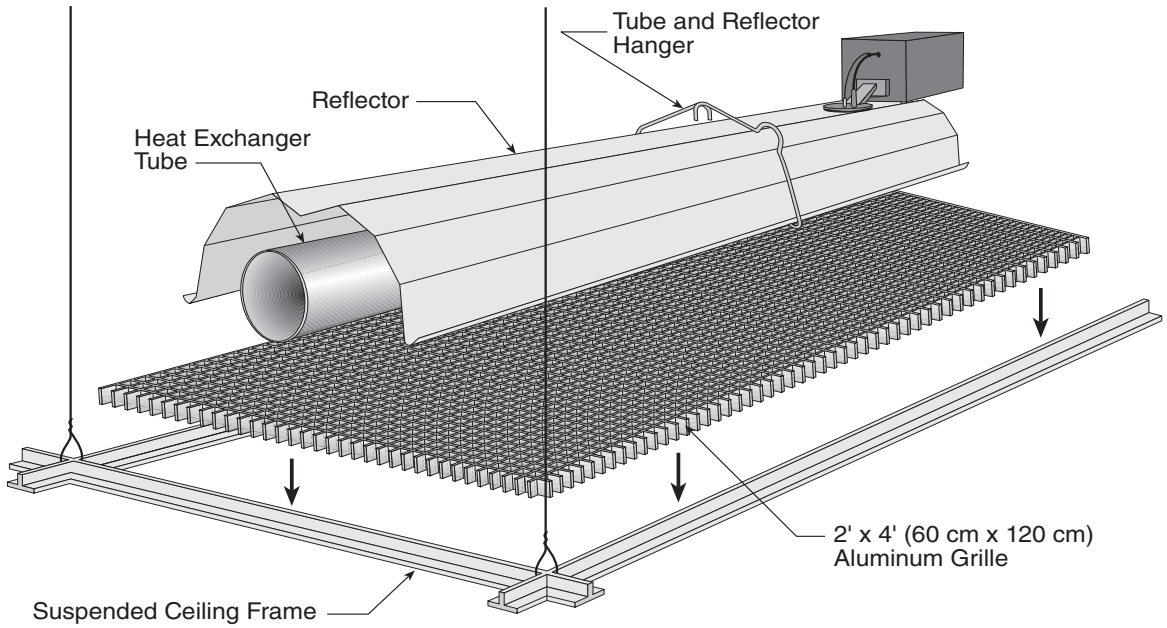

Description	Part Number
Aluminum Grille 2' x 4' (60 cm x 120 cm)	91407000

Step 8.6.2 Frame Shield Installation

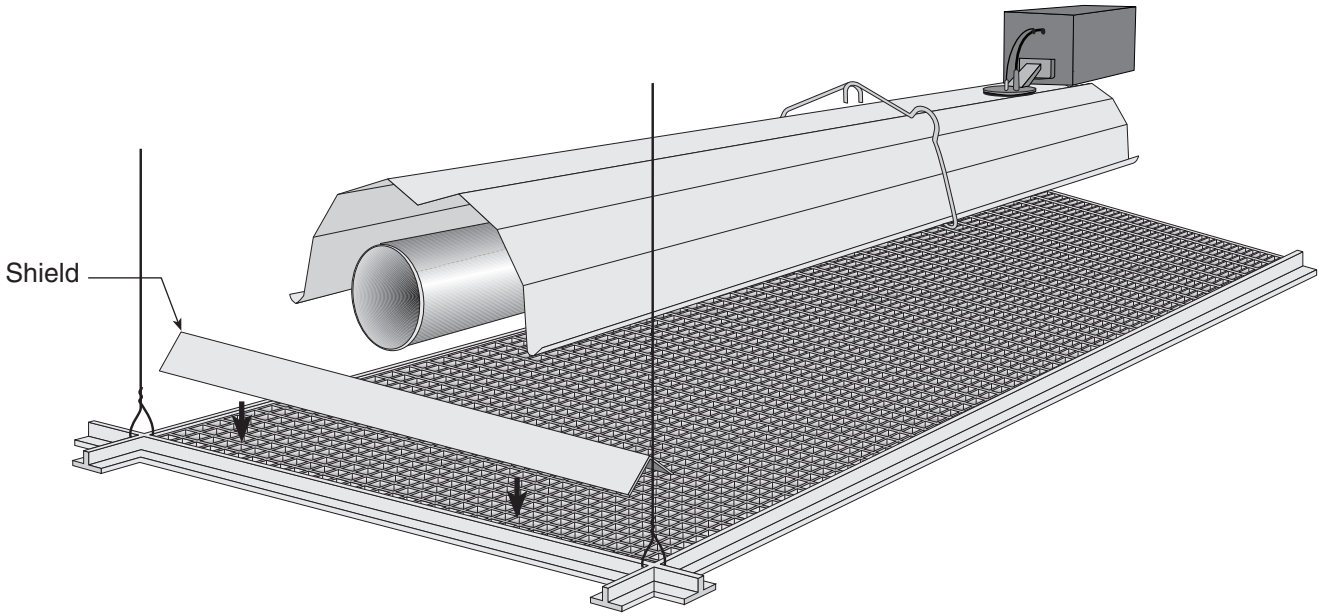

Description	Part Number
Deco Grille Shield	01365900

Step 8.6.3 Reflector Side Extension Installation for Decorative Grilles

NOTE: If the decorative grille system is to be installed in an area with considerable air movement, it is recommended that one #8 x 3/8" sheet metal screw be installed per reflector extension to prevent it from blowing over.

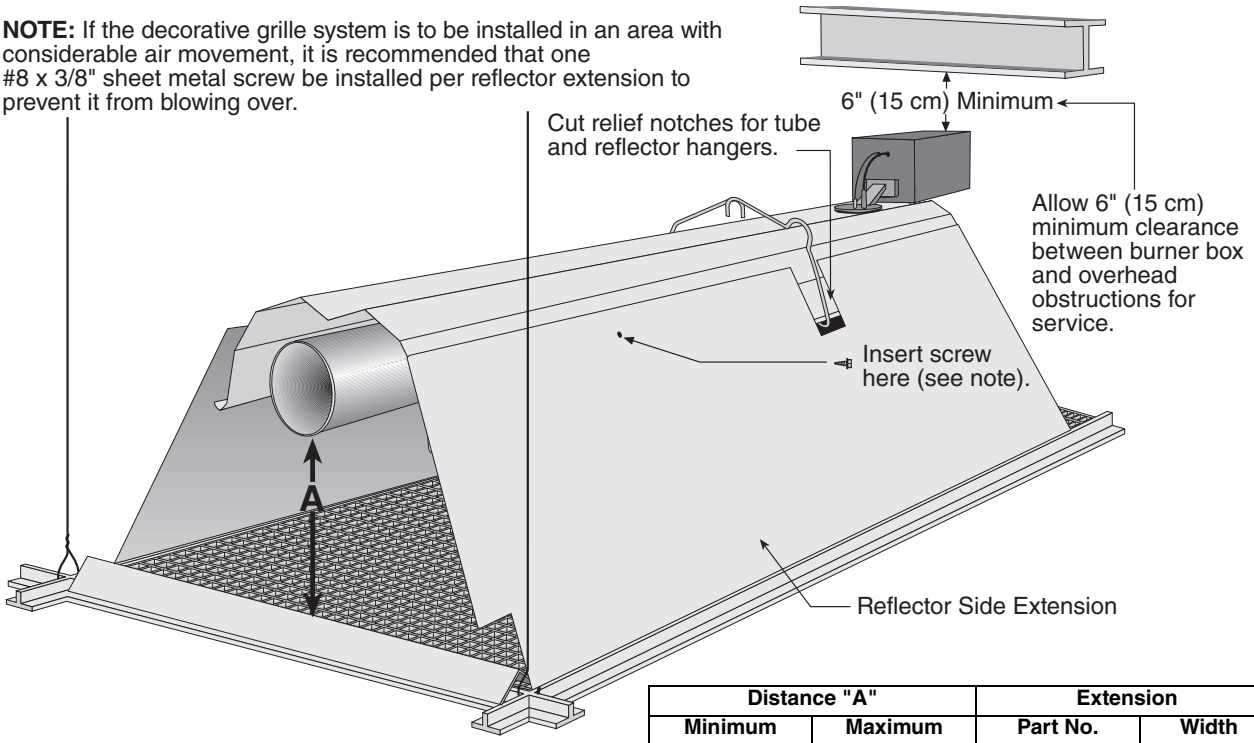
6" (15 cm) Minimum
Cut relief notches for tube and reflector hangers.
Allow 6" (15 cm) minimum clearance between burner box and overhead obstructions for service.
Insert screw here (see note).
A
Reflector Side Extension

Description	Part Number
Reflector Side Extension	01370412

Distance "A"		Extension	
Minimum	Maximum	Part No.	Width
2" (4 cm)	6" (15 cm)	01370408	8" (20 cm)
6" (15 cm)	10" (26 cm)	01370412	12" (30 cm)
10" (26 cm)	14" (37 cm)	01370416	16" (40 cm)

8.7 Protective Grille Installation

Step 8.7.1 Silicone Cap Installation

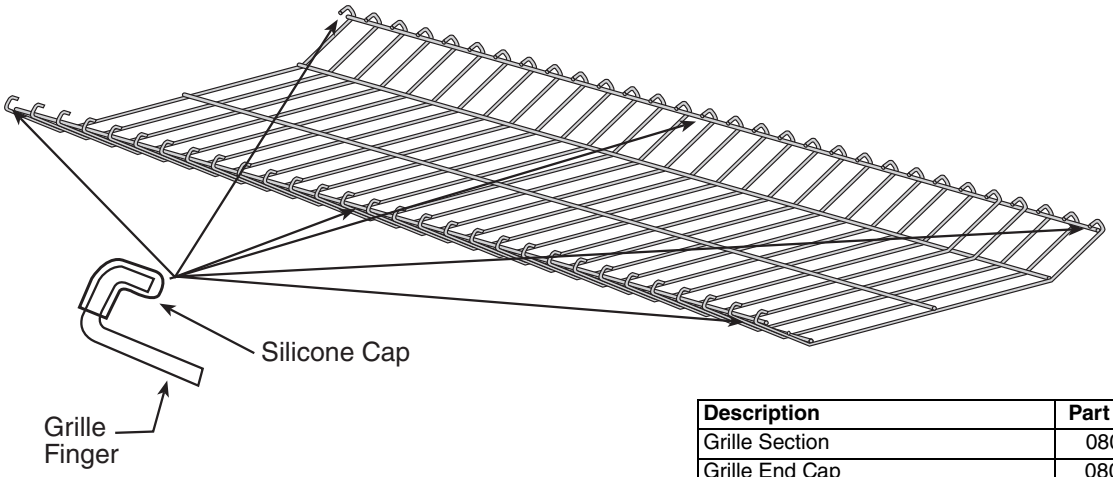

Description	Part Number
Grille Section	08050001
Grille End Cap	08050002
Silicone Cap	91915951-6P

Step 8.7.2 Grille End Cap Installation

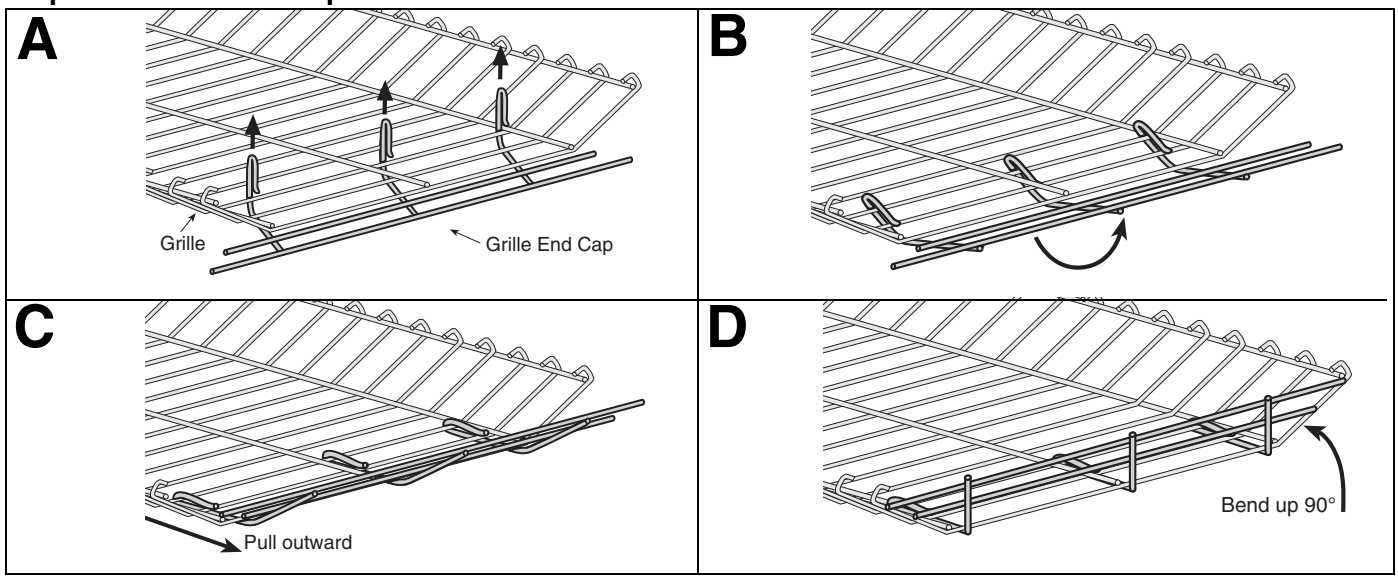

Step 8.7.3 Grille Installation

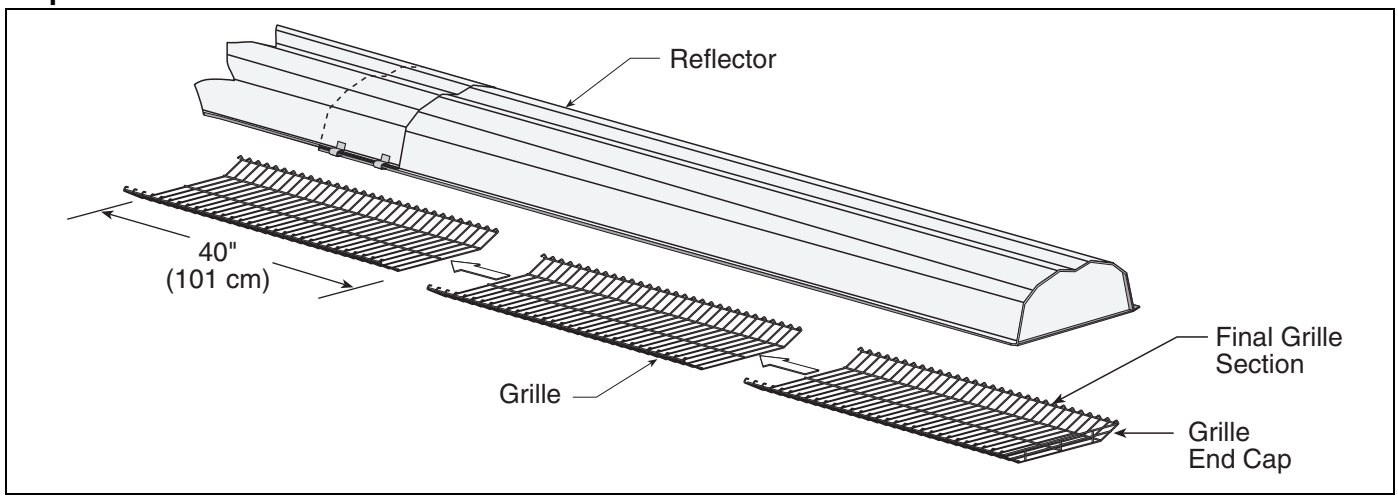

Step 8.8 Classic Cast-Iron Components

⚠WARNING

Severe Injury Hazard

Hang heater with materials with a minimum working load of 750 lbs. (340 kg).

Use special tube and reflector hangers when suspending the schedule 40 steel pipe system.

Schedule 40 steel pipe is heavy and will fall if not supported properly.

Distance between supports must be 7' (2.13 m) or less.

Failure to follow these instructions can result in death, injury or property damage.

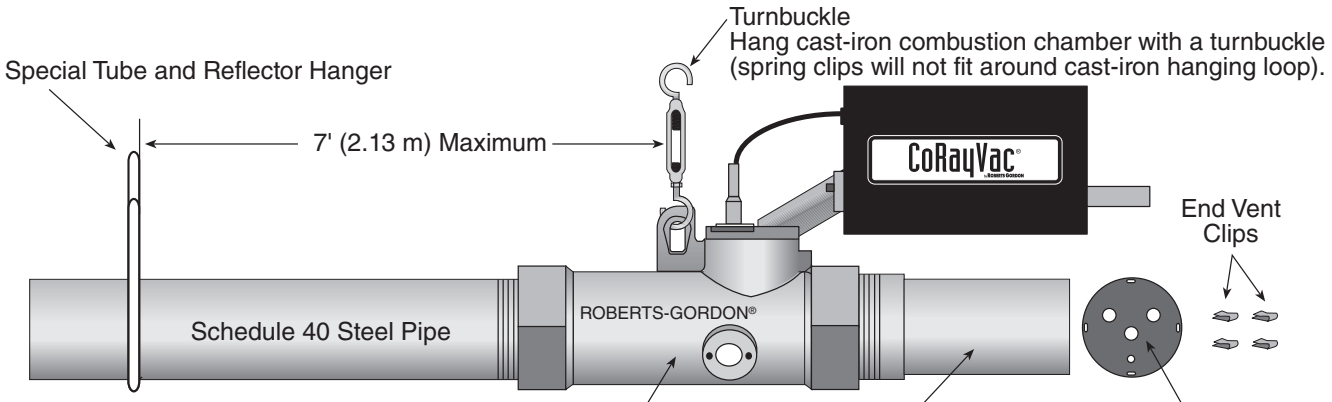
Turnbuckle
Hang cast-iron combustion chamber with a turnbuckle (spring clips will not fit around cast-iron hanging loop).
Special Tube and Reflector Hanger
7' (2.13 m) Maximum
CoRayVac
End Vent Clips
Schedule 40 Steel Pipe
ROBERTS-GORDON®
Cast-Iron Adapter
End Vent Plate for End Burner Only
CORAYVAC® Classic Cast-Iron Combustion Chamber

Cast-Iron Combustion Chamber with Schedule 40 Steel Pipe
The total weight of each burner and combustion chamber is 40.25 lbs (18 kg). 4" Schedule 40 pipe weighs 10.9 lbs. (5 kg) per foot.

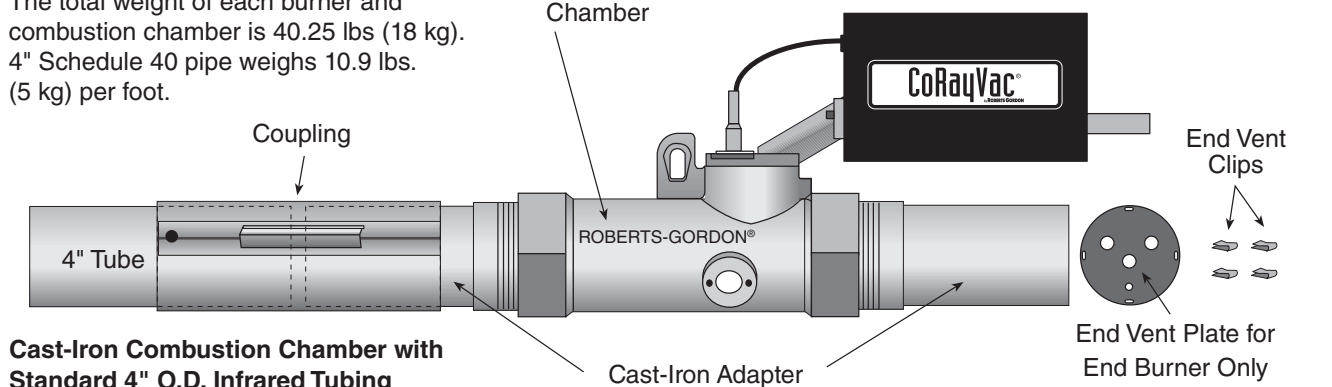

Cast-Iron Combustion Chamber with Standard 4" O.D. Infrared Tubing
The total weight of each burner and combustion chamber is 40.25 lbs (18 kg). 4" O.D. 16 Ga. tubing weighs 2.8 lbs. (1.3 kg) per foot.

Description	Part Number
Special Tube & Reflector Hanger	02790300
Turnbuckle	91903201
Cast-Iron Combustion Chamber	02721200-1P
Cast-Iron Adapter	02722100
Coupling	01312700

SECTION 9: PUMP INSTALLATION AND VENTING

⚠WARNING

Carbon Monoxide Hazard

Heaters installed unvented must be interlocked with sufficient building exhaust.

Heaters must be installed according to the installation manual.

Failure to follow these instructions can result in death or injury.

⚠WARNING

Cut/Pinch Hazard

Wear protective gear during installation, operation and service.

Edges are sharp.

Failure to follow these instructions can result in injury.

9.1 Pump Installation

For complete pump installation, including wiring and venting, please refer to the EP-100, EP-200 or EP-300 Series Installation, Operation and Service Manuals, latest edition.

FIGURE 16: EP-200 Condensate Valve Assembly

Description	Part Number
Condensate Valve Assembly	01327001

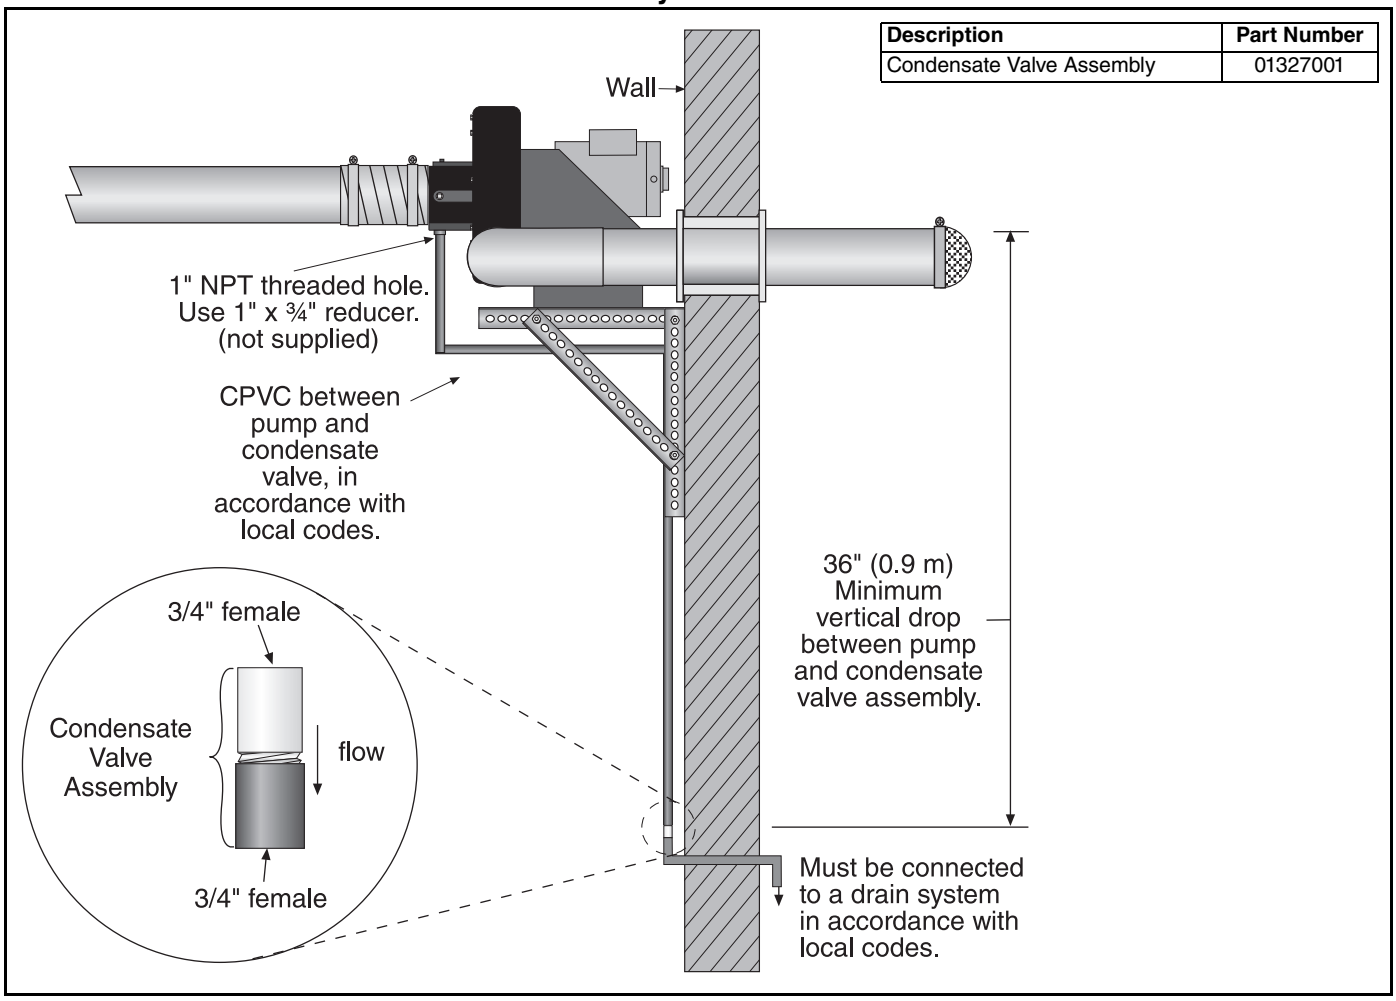
Wall
1" NPT threaded hole. Use 1" x ¾" reducer. (not supplied)
CPVC between pump and condensate valve, in accordance with local codes.
36" (0.9 m) Minimum vertical drop between pump and condensate valve assembly.
3/4" female
Condensate Valve Assembly
flow
3/4" female
Must be connected to a drain system in accordance with local codes.

9.1.1 Condensate Neutralization Tube (optional)

If a condensate neutralization tube is specified to be used with the heating system, follow the steps below to choose the proper condensate neutralization tube. *See Page 37, Figure 17*.

Step 1: Condensate flow (gal/h) per 100,000 Btu/h installed

You will need to know the tailpipe length per flow unit and the total input (Btu/h) on the heating system. Please refer to the following chart to determine the condensate flow (gal/h) per 100,000 Btu/h installed:

Radiant Tube Length (average distance between burners)	**Tailpipe Length per Flow Unit**			
	Minimum	Recommended	1.7 ft/flow unit	Maximum
Minimum	N/A	0.1	0.3	0.6
Recommended	0.1	0.3	0.6	0.8
Maximum	0.3	0.6	0.8	0.8

Step 2: Total condensate

Determine the total condensate (gal/h) using the follow calculation:

Total condensate (gal/h) = Total Input (Btu/h) / 100,000 (Btu/h) x condensate flow (gal/h)

Step 3: Choose the condensate neutralization tube

Choose the condensate neutralization tube which is closest to and higher than the calculated gal/h value.

Calculated gal/h	**Description**	**Part Number**
Less than 2	Condensate Neutralization Tube 200	01327002
Less than 6	Condensate Neutralization Tube 600	01327003
Less than 10	Condensate Neutralization Tube 1000	01327004
Less than 20	Condensate Neutralization Tube 2000	01327005

Example:

CORAYVAC® system has a total input of 600,000 Btu/h. The radiant tube length and tailpipe are set-up according to the RECOMMENDED specifications.

Step 1: Condensate flow (gal/h) per 100,000 Btu/h installed

Select 0.3 from the Condensate flow chart.

Radiant Tube Length (average distance between burners)	**Tailpipe Length per Flow Unit**			
	Minimum	**Recommended**	1.7 ft/flow unit	Maximum
Minimum	N/A	0.1	0.3	0.6
Recommended	0.1	**0.3**	0.6	0.8
Maximum	0.3	0.6	0.8	0.8

Step 2: Total condensate

Multiply the total input Btu/h / 100,000 by the condensate flow (gal/h) per 100,000 (Btu/h) (600,000/100,000) x 0.3 = 1.8 (gal/h)

Step 3: Choose the condensate neutralization tube

Choose the condensate neutralization tube which is closest to and higher than the calculated gal/h value. For this example, the total condensate is 1.8 (gal/h), the condensate neutralization tube which is closest to and higher than the calculated gal/h value is P/N 01327002.

Calculated gal/h	**Description**	**Part Number**
Less than 2	**Condensate Neutralization Tube 200**	**01327002**
Less than 6	Condensate Neutralization Tube 600	01327003
Less than 10	Condensate Neutralization Tube 1000	01327004
Less than 20	Condensate Neutralization Tube 2000	01327005

NOTE: Condensate neutralization tubes must be replaced yearly (every 2000 operating hours) or check condensate water pH level. If it is below pH 6, replace tube.

To order replacement, see the chart below:

Description	**Part Number**
Condensate Neutralization Tube 200	01327002
Condensate Neutralization Tube 600	01327003
Condensate Neutralization Tube 1000	01327004
Condensate Neutralization Tube 2000	01327005
Refill, Condensate Neutralization Tube 600	01327007
Refill, Condensate Neutralization Tube 1000	01327008
Refill, Condensate Neutralization Tube 2000	01327009

FIGURE 17: Condensate Neutralization Tube

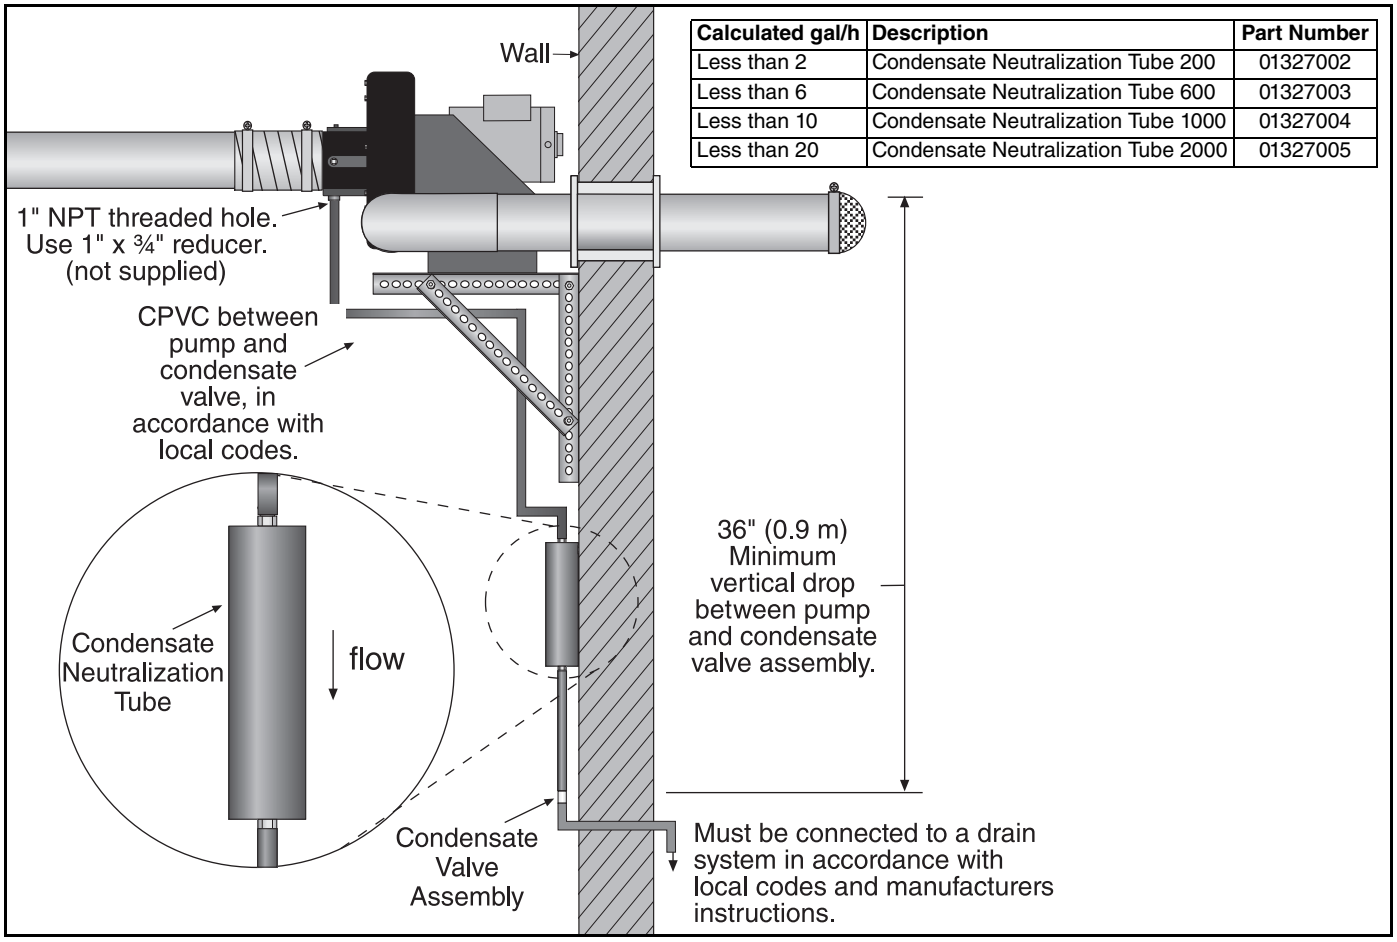

Calculated gal/h	Description	Part Number
Less than 2	Condensate Neutralization Tube 200	01327002
Less than 6	Condensate Neutralization Tube 600	01327003
Less than 10	Condensate Neutralization Tube 1000	01327004
Less than 20	Condensate Neutralization Tube 2000	01327005

9.2 General Venting Requirements Model EP-100, EP-200 and EP-300 Series Pumps

This heater must be vented in accordance with the rules contained in this manual and with the following national codes and any state, provincial or local codes which may apply:

United States: Refer to National Fuel Gas Code NFPA 54/ANSI Z223.1 - latest revision.

Canada: Refer to Natural Gas and Propane Installation Code CSA B149.1 - latest revision.

Any portion of vent pipe passing through a combustible wall must have an approved thimble to conform with the above listed codes.

Vent pipe must be sloped downward away from the pump ¼" every 10' (3 m).

The bottom of the vent or air intake terminal shall not be located less than 1' (0.3 m) above grade level.

The vent shall not terminate less than 7' (2.1 m) above grade where located adjacent to public walkways.

Vent terminal must be installed at a height sufficient to prevent blockage by snow, and building materials protected from degradation by flue gases.

Secure all joints with #8 x 3/8 sheet metal screws.

Seal all joints with high temperature silicone sealant.

Vent terminal must be beyond any combustible overhang.

9.2.1 United States Requirements

Vent must terminate at least 3' (0.9 m) above any forced air inlet located within 10' (3.1 m).

Vent must terminate at least 4' (1.2 m) below, 4' (1.2 m) horizontally from, or 1' (0.3 m) above any door, operable window, or gravity air inlet into any building.

9.2.2 Canadian Requirements

The vent shall not terminate within 6' (1.8 m) of a mechanical air supply inlet to any building.

The vent shall not terminate within 3' (0.9 m) of a window or door that can be opened in any building, any non-mechanical air supply inlet to any building, or of the combustion air inlet of any other appliance.

9.2.3 Vertical Venting

See Page 39, Figure 18 for recommended vertical venting options.

9.2.4 Horizontal Venting

See Page 40, Figure 19 through Page 42, Figure 21 for recommended horizontal venting options.

9.2.5 Length Requirements

See EP-100, EP-200 or EP-300 Pump Series Installation, Operation and Service Manuals for complete venting options.

Vent lengths are allowed as follows:

Vent Length	EP-300 Vent Size	EP-200 Vent Size	EP-100 Vent Size
Up to 10' (3 m)	6" (15 cm) - 1 elbow	4" (10 cm) - 1 elbow	-
Up to 25' (8 m)	7" (18 cm) - 3 elbow	5" (12.7 cm) - 3 elbows	4" (10 cm) - 3 elbows
Up to 50' (15 m)	8" (20 cm) - 3 elbow	6" (15 cm) - 3 elbows	5" (12.7 cm) - 3 elbows

Seal all pipe joints with high temperature silicone sealant in the vent pipe. Insulation and additional sealing measures will be required.

Optional heat exchanger lengths are considered as vent length for length determination.

Subtract 15' (4.6 m) of maximum allowed vent or outside air duct length per vent elbow if more than three are used.

9.2.6 Vent Material Recomendations

Vent recommendations in order of preferred use:

1. Porcelain coated tubing 4'' (10 cm) O.D. (P/N 9141030D)
2. Heat treated aluminized tubing 4'' (10 cm) O.D. (P/N 91409408)
   Heat treated aluminized tubing 6'' (15 cm) O.D. (P/N E0009105)
3. Single wall flue pipe - minimum 26 ga. (Not suitable for modulating and condensing system designs.)

FIGURE 18: Vertical Venting Configuration

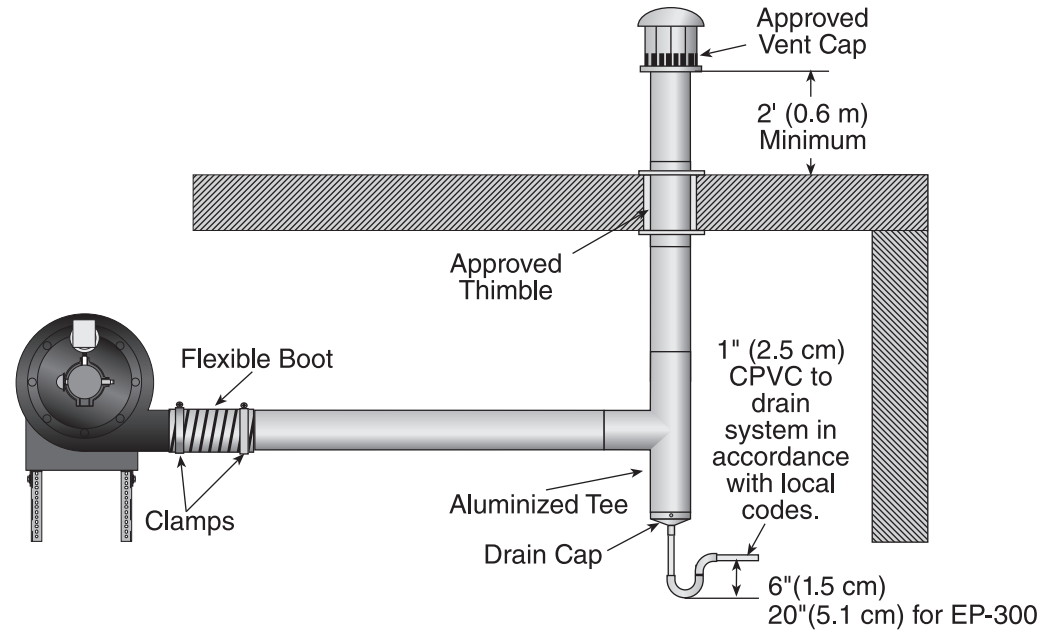

Part Number	Description
01330203	Tee, 4" (10 cm) Aluminized
01330204	Tee, 6" (15 cm) Aluminized
01331900	Damper Coupling, 4" (10 cm)
01335801	Elbow, 4" (10 cm) Aluminized 90°
02718851	Drain Cap, 4" (10 cm)
02718852	Drain Cap Assembly, 6" (15 cm)
01327002	Condensate Neutralization Tube 200
01327003	Condensate Neutralization Tube 600
01327004	Condensate Neutralization Tube 1000
01327005	Condensate Neutralization Tube 2000
90502300	Vent Cap, 4" (10 cm) Metalbestos

Part Number	Description
90502302	Vent Cap, 6" (15 cm) Metalbestos
91409403	Tube, Aluminized 4" (10 cm) dia. 10' (3 m)
91409420	Tube, Aluminized 6" (15 cm) dia. 10' (3 m)
91412800	Flexible Boot, 4" (10 cm)
91412801	4 - Flexible Boot, 1/2" (1.3 cm)
91412802	Flexible Boot, 6" (15 cm)
91901300	Boot Clamp, 4" (10 cm)
91913703	Boot Clamp, 6" (15 cm)
E0009356	Damper Coupling, 6" (15 cm)
T0100320	Elbow, 6" (15 cm) Aluminized 90°

9.3 Horizontal Venting 4" (10 cm) Pipe

FIGURE 19: EP-100 Horizontal Venting Configurations

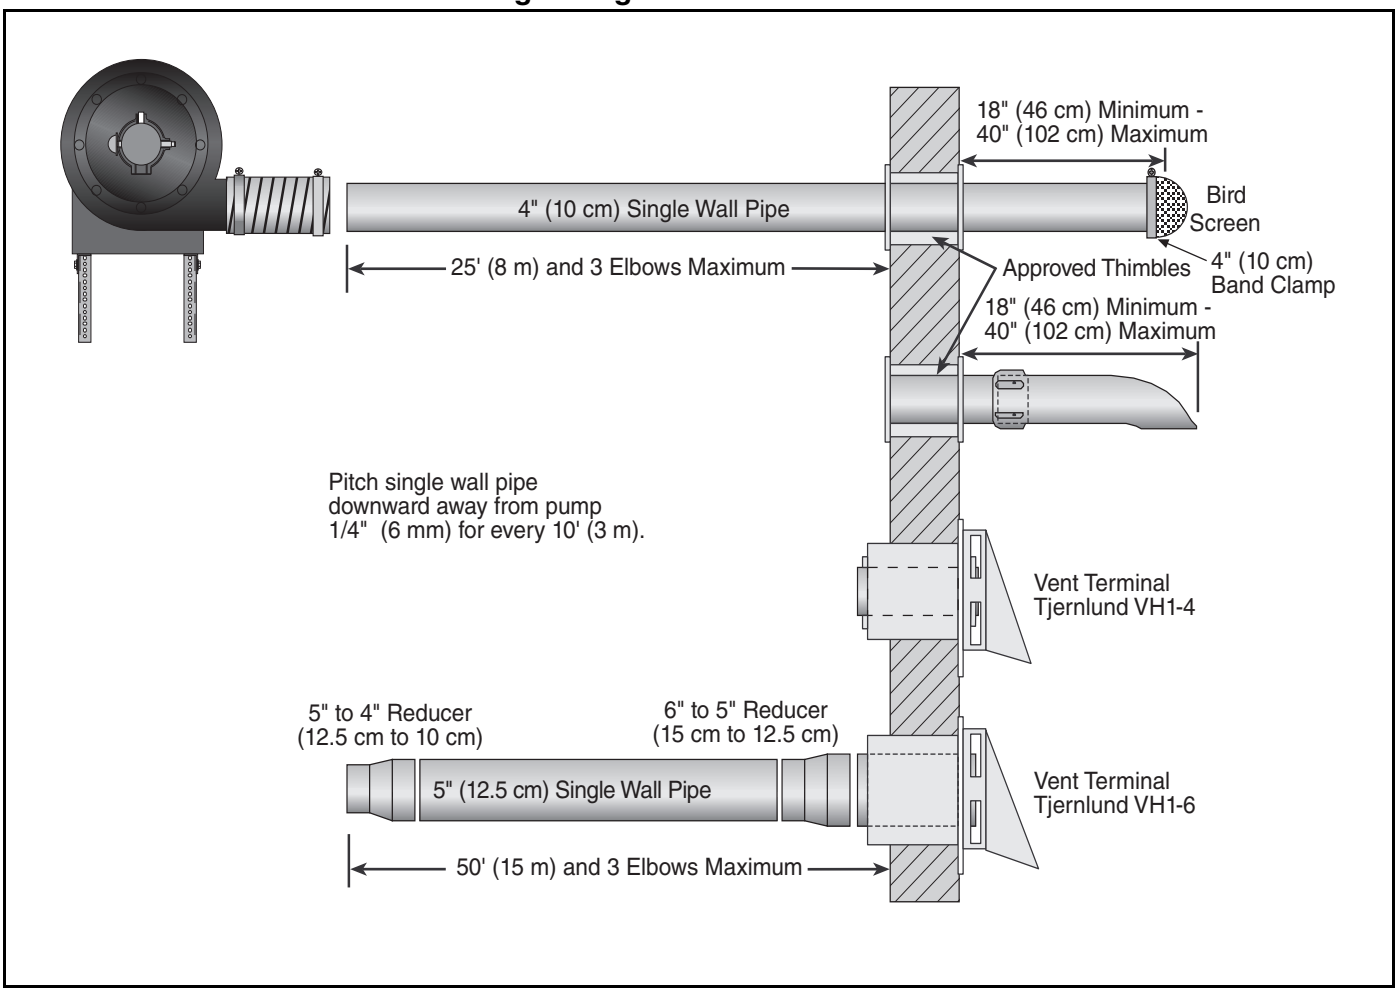
18" (46 cm) Minimum -
40" (102 cm) Maximum
4" (10 cm) Single Wall Pipe
Bird
Screen
25' (8 m) and 3 Elbows Maximum
Approved Thimbles
4" (10 cm)
Band Clamp
18" (46 cm) Minimum -
40" (102 cm) Maximum
Pitch single wall pipe
downward away from pump
1/4" (6 mm) for every 10' (3 m).
Vent Terminal
Tjernlund VH1-4
5" to 4" Reducer
(12.5 cm to 10 cm)
6" to 5" Reducer
(15 cm to 12.5 cm)
5" (12.5 cm) Single Wall Pipe
Vent Terminal
Tjernlund VH1-6
50' (15 m) and 3 Elbows Maximum

Part Number	Description
01330203	Tee, 4" (10 cm) Aluminized
01331900	Damper Coupling, 4" (10 cm)
01335801	Elbow, 4" (10 cm) Aluminized 90°
01365400	Bird Screen, 4" (10 cm)
02537801-1P	Vent Terminal (Non-Combustible Wall)
02718851	Drain Cap, 4" (10 cm)
01327002	Condensate Neutralization Tube 200
01327003	Condensate Neutralization Tube 600
01327004	Condensate Neutralization Tube 1000

Part Number	Description
01327005	Condensate Neutralization Tube 2000
90502100	Vent Terminal, 4" (10 cm) (Combustible Wall)
90502101	Vent Terminal, 6" (15 cm) (Combustible Wall)
91409403	Tube, Aluminized 4" (10 cm) dia. 10' (3 m)
91412800	Flexible Boot, 4" (10 cm)
91901300	Boot Clamp, 4" (10 cm)
Not Supplied	Tube, Aluminized 5" (12.7 cm) dia. 10' (3 m)
Not Supplied	Tube Adapter, 5" (12.7 cm) dia. x 4" (10 cm) dia.
Not Supplied	Tube Adapter, 6" (15.2 cm) dia. x 5" (12.7 cm) dia.

FIGURE 20: EP-200 Series Horizontal Venting Configurations

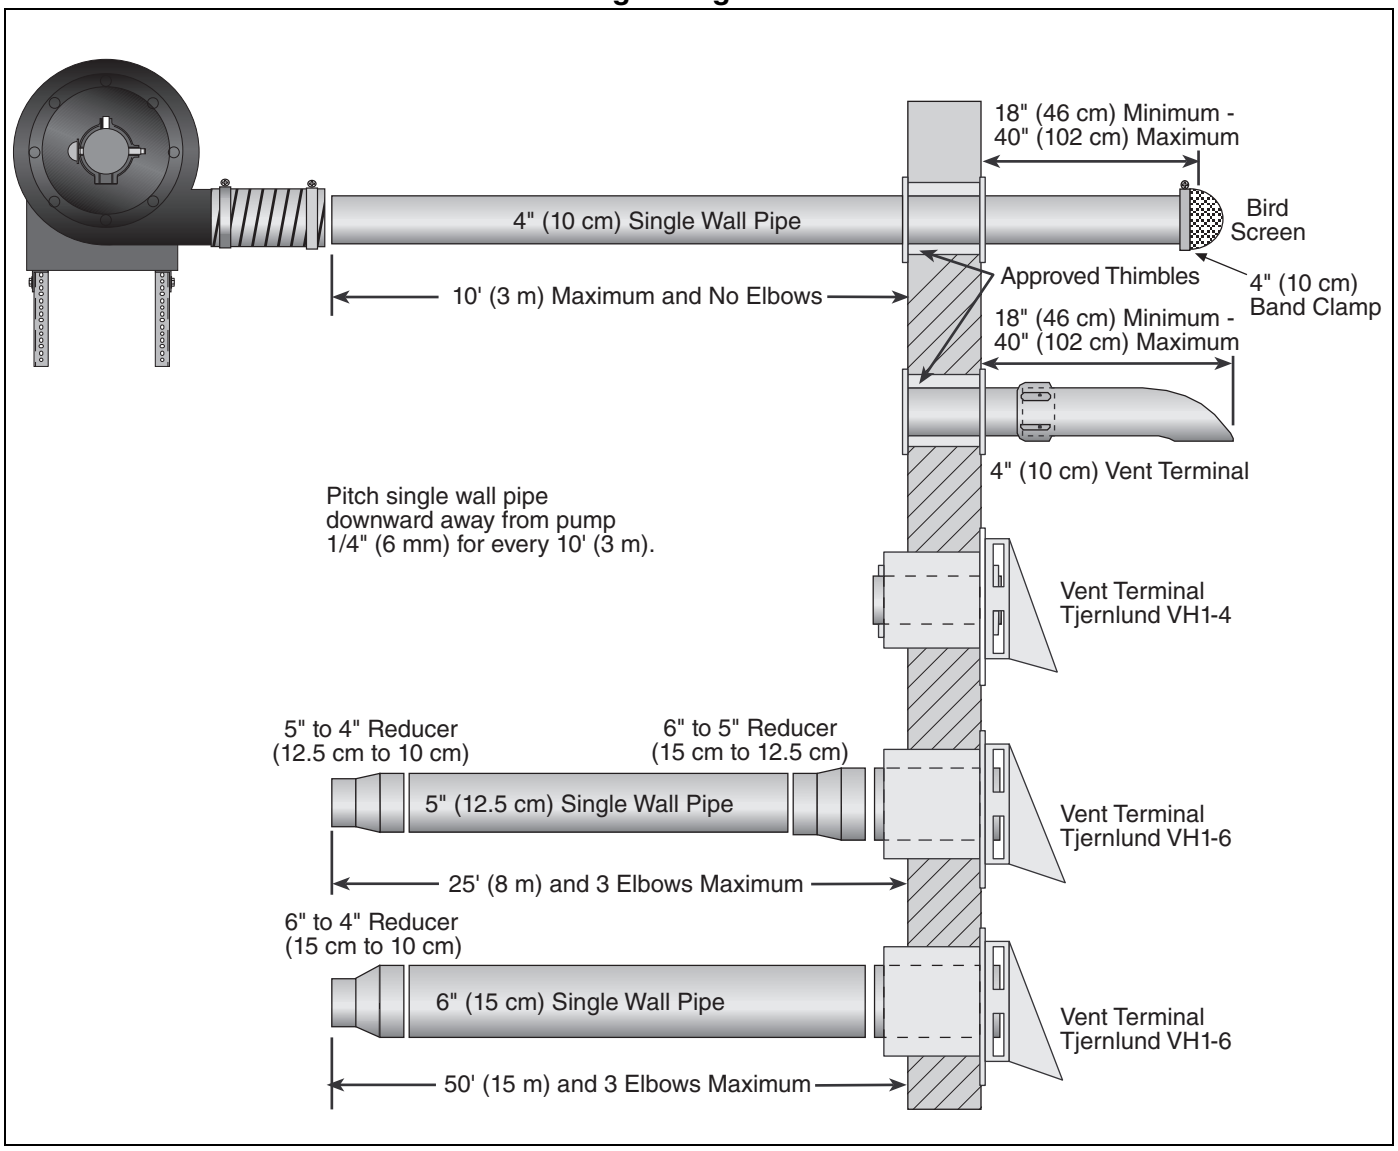
18" (46 cm) Minimum -
40" (102 cm) Maximum
4" (10 cm) Single Wall Pipe
Bird
Screen
Approved Thimbles
4" (10 cm)
Band Clamp
10' (3 m) Maximum and No Elbows
18" (46 cm) Minimum -
40" (102 cm) Maximum
4" (10 cm) Vent Terminal
Pitch single wall pipe
downward away from pump
1/4" (6 mm) for every 10' (3 m).
Vent Terminal
Tjernlund VH1-4
5" to 4" Reducer
(12.5 cm to 10 cm)
6" to 5" Reducer
(15 cm to 12.5 cm)
5" (12.5 cm) Single Wall Pipe
Vent Terminal
Tjernlund VH1-6
25' (8 m) and 3 Elbows Maximum
6" to 4" Reducer
(15 cm to 10 cm)
6" (15 cm) Single Wall Pipe
Vent Terminal
Tjernlund VH1-6
50' (15 m) and 3 Elbows Maximum

Part Number	Description
01330203	Tee, 4" (10 cm) Aluminized
01331900	Damper Coupling, 4" (10 cm)
01335801	Elbow, 4" (10 cm) Aluminized 90°
01365400	Bird Screen, 4" (10 cm)
02537801-1P	Vent Terminal (Non-Combustible Wall)
02718851	4" Drain Cap
01327002	Condensate Neutralization Tube 200
01327003	Condensate Neutralization Tube 600
01327004	Condensate Neutralization Tube 1000
01327005	Condensate Neutralization Tube 2000
90502100	Vent Terminal, 4" (10 cm) (Combustible Wall)

Part Number	Description
90502101	Vent Terminal, 6" (15 cm) (Combustible Wall)
91409403	Tube, Aluminized 4" (10 cm) dia. 10' (3 m)
91409420	Tube, Aluminized 6" (15 cm) dia. 10' (3 m)
91412801	4 - Flexible Boot, 1/2" (1.3 cm)
91418200	Tube Adapter, 6" (15.2 cm) dia. x 4" (10 cm) dia.
91901300	Boot Clamp, 4" (10 cm)
91906900	Silicone Ring
Not Supplied	Tube, Aluminized 5" (12.7 cm) dia. 10' (3 m)
Not Supplied	Tube Adapter, 5" (12.7 cm) dia. x 4" (10 cm) dia.
Not Supplied	Tube Adapter, 6" (15.2 cm) dia. x 5" (12.7 cm) dia.

FIGURE 21: EP-300 Series Horizontal Venting Configurations

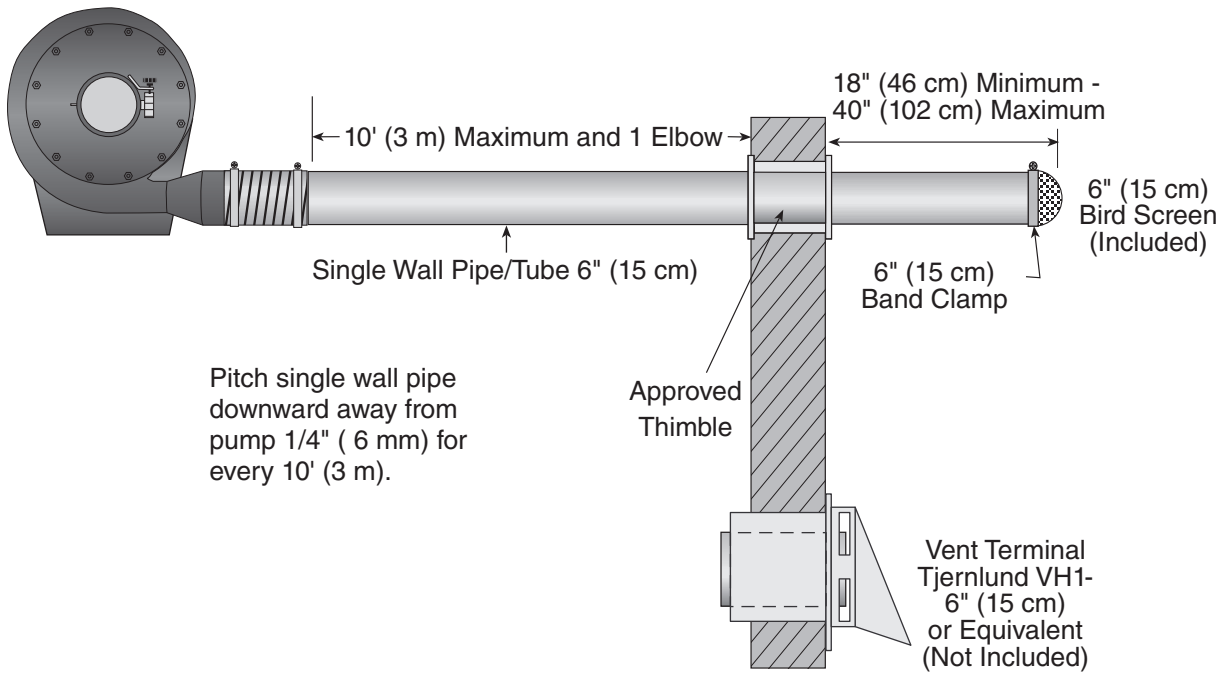

Part Number	Description
01330203	Tee, 4" (10 cm) Aluminized
01330204	Tee, 6" (15 cm) Aluminized
01331900	Damper Coupling, 4" (10 cm)
01335801	Elbow, 4" (10 cm) Aluminized 90°
01397400	Bird Screen, 6" (15 cm)
02537801-1P	Vent Terminal (Non-Combustible Wall)
02718851	Drain Cap, 4" (10 cm)
02718852	Drain Cap, 6" (15 cm)
01327002	Condensate Neutralization Tube 200
01327003	Condensate Neutralization Tube 600
01327004	Condensate Neutralization Tube 1000
01327005	Condensate Neutralization Tube 2000

Part Number	Description
90502100	Vent Terminal, 4" (10 cm) (Combustible Wall)
90502101	Vent Terminal, 6" (15 cm) (Combustible Wall)
90502302	Vent Cap, 6" (15 cm) Metalbestos
91409403	Tube, Aluminized 4" (10 cm) dia. 10' (3 m)
91409420	Tube, Aluminized 6" (15 cm) dia. 10' (3 m)
91412800	Flexible Boot, 4" (10 cm)
91412802	Flexible Boot, 6" (15 cm)
91418200	Tube Adapter, 6" (15.2 cm) dia. x 4" (10 cm) dia.
91901300	Boot Clamp, 4" (10 cm)
91913703	Boot Clamp, 6" (15 cm)
E0009356	Damper Coupling, 6" (15 cm)
T0100320	Elbow, 6" (15 cm) Aluminized 90°

SECTION 10: OUTSIDE AIR SUPPLY

⚠ CAUTION

Product Damage Hazard

Do not use heater in area containing corrosive chemicals.

Refer to appropriate Material Safety Data Sheets (MSDS).

Failure to follow these instructions can result in product damage.

The CRV-Series system is approved for use with an outside air system. Halogenated hydrocarbons or other corrosive chemicals in the air can be drawn into the equipment and seriously damage the system components. Avoid the use of such chemical compounds near the air inlet to the heaters.
IMPORTANT: If the building has a slight negative pressure or corrosive contaminants are present in the air, an outside combustion air supply to the heater is required.
All joints and seams in the air supply system must be airtight. Attach the filter housing to the burner assembly using the wing nut provided.

10.1 Pressurized

See Page 46, Figure 26 for a typical layout of a pressurized air supply system.
For pressurized outside air supplies, the outside air blower motor has a pressure switch that must be used. Wire this switch in series with the pump pressure switch. When using an outside air blower with a ROBERTS GORDON® System Control or ROBERTS GORDON® ULTRAVAC™ control or relay transformer, a separate load relay package is required. Wire the control for the relay in parallel with the pump. The outside air blower must have a separate 20 A, 120 V power supply. *See Page 44, Figure 23* for outside air blower internal wiring requirements. The outside air blower has an adjustable internal damper that should be wide open. On smaller systems (about 3 burners) this damper might need to be closed up to half way if the pressure switch does not make.

10.2 Non-Pressurized

For a non-pressurized outside air supply, a 4" (O.D.) single wall pipe duct may be attached to the burner and end vent. For length and duct sizing requirements, see duct design rules in *Figure 22*. To prevent condensation, insulate the outside air duct.

FIGURE 22: Duct Sizing

Outside Air System Design Requirements:

Blower Performance (90707501K):
112 Flow Units
One outside air blower is required per each EP-100 or EP-200 series pump and two outside air blowers may be required for each EP-300 series pump. Outside air blowers cannot be shared between two separate CRV-Series systems.

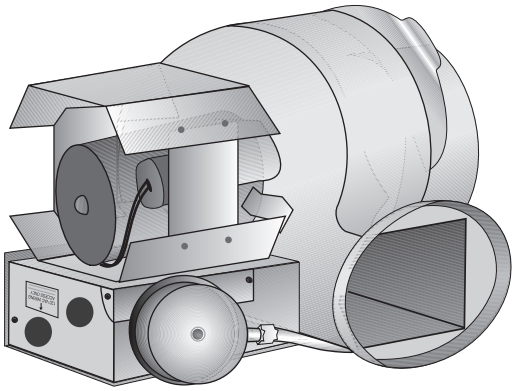

Duct Design Rules:
- System should be designed so that the blower is positioned closest to the highest flow requirements (end vents).
- When a duct is carrying more than 40 flow units, it must be at least 6" (15 cm) diameter.

Pressurized Systems
- 6" (15 cm) diameter duct must not exceed 120' (36 m) total per system.
- 4" (10 cm) diameter duct must not exceed 120' (36 m) per radiant branch.

Non Pressurized
- 6" (15 cm) diameter duct must not exceed 90' (27 m) maximum 100 flow units
- 4" (10 cm) diameter duct must not exceed 90' (27 m)
- Elbows are equivalent to 10' (3 m) of duct length.

10.3 Outside Air Blower Internal Wiring

FIGURE 23: Outside Air Blower Internal Wiring Diagram

The outside air blower is shipped with the blower manufacturer's standard internal wiring. For use with ROBERTS GORDON® heaters, the outside air blower must be rewired with existing wires by the electrical contractor. See diagram.

NOTE: The internal 24 V relay provided will not be used and can be discarded.

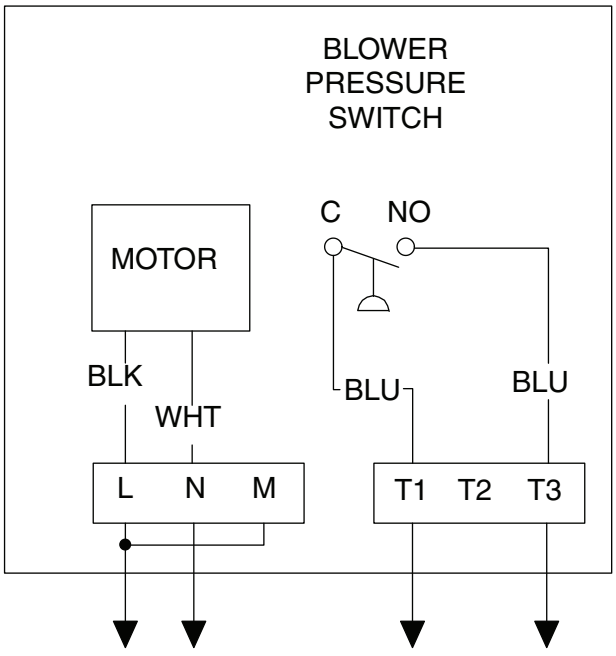

FIGURE 24: Filter Housing Assembly

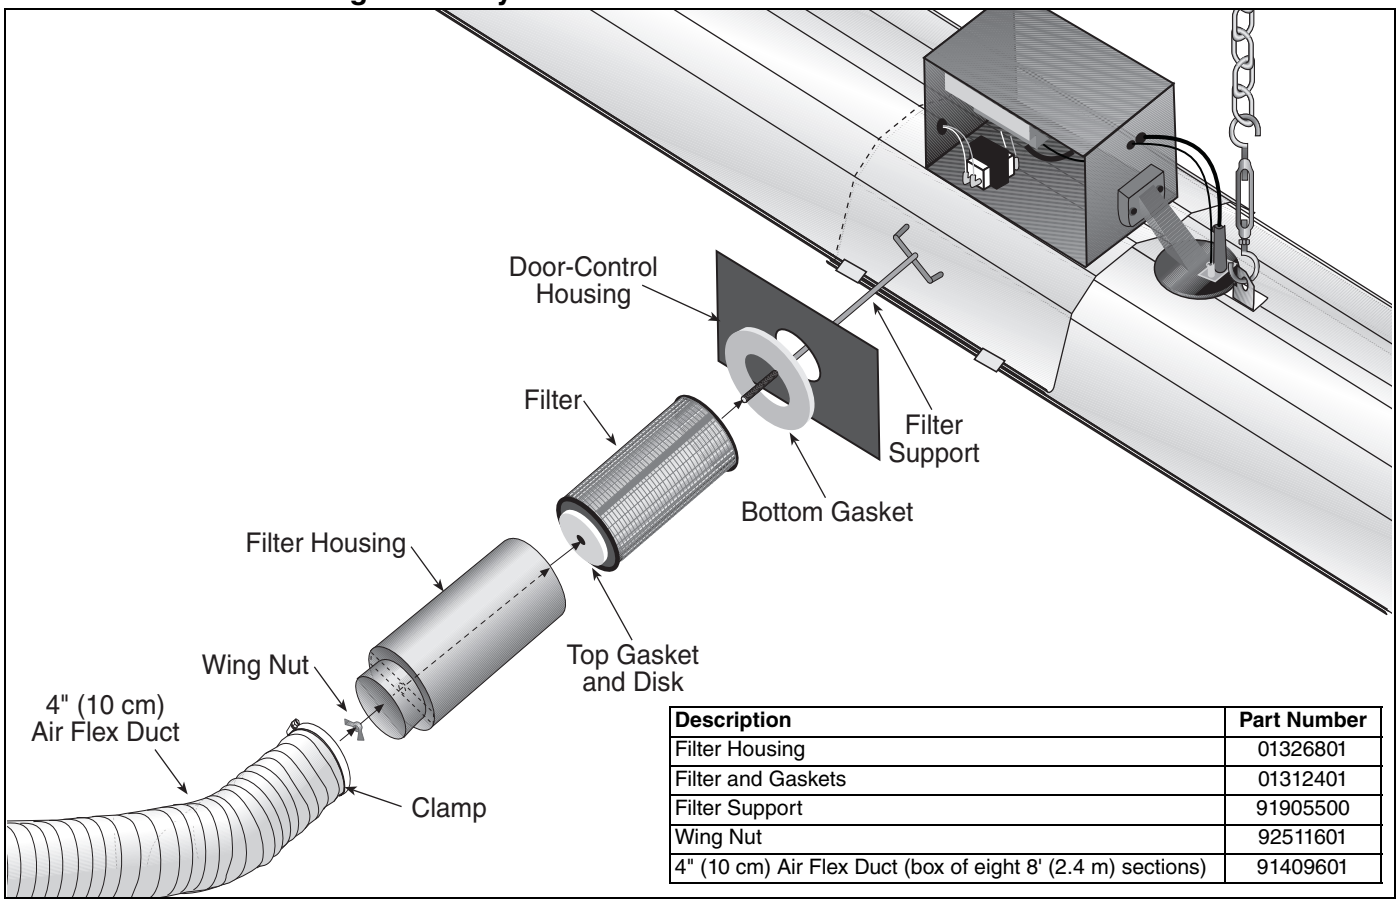

Description	Part Number
Filter Housing	01326801
Filter and Gaskets	01312401
Filter Support	91905500
Wing Nut	92511601
4" (10 cm) Air Flex Duct (box of eight 8' (2.4 m) sections)	91409601

FIGURE 25: Air Supply Blower Support

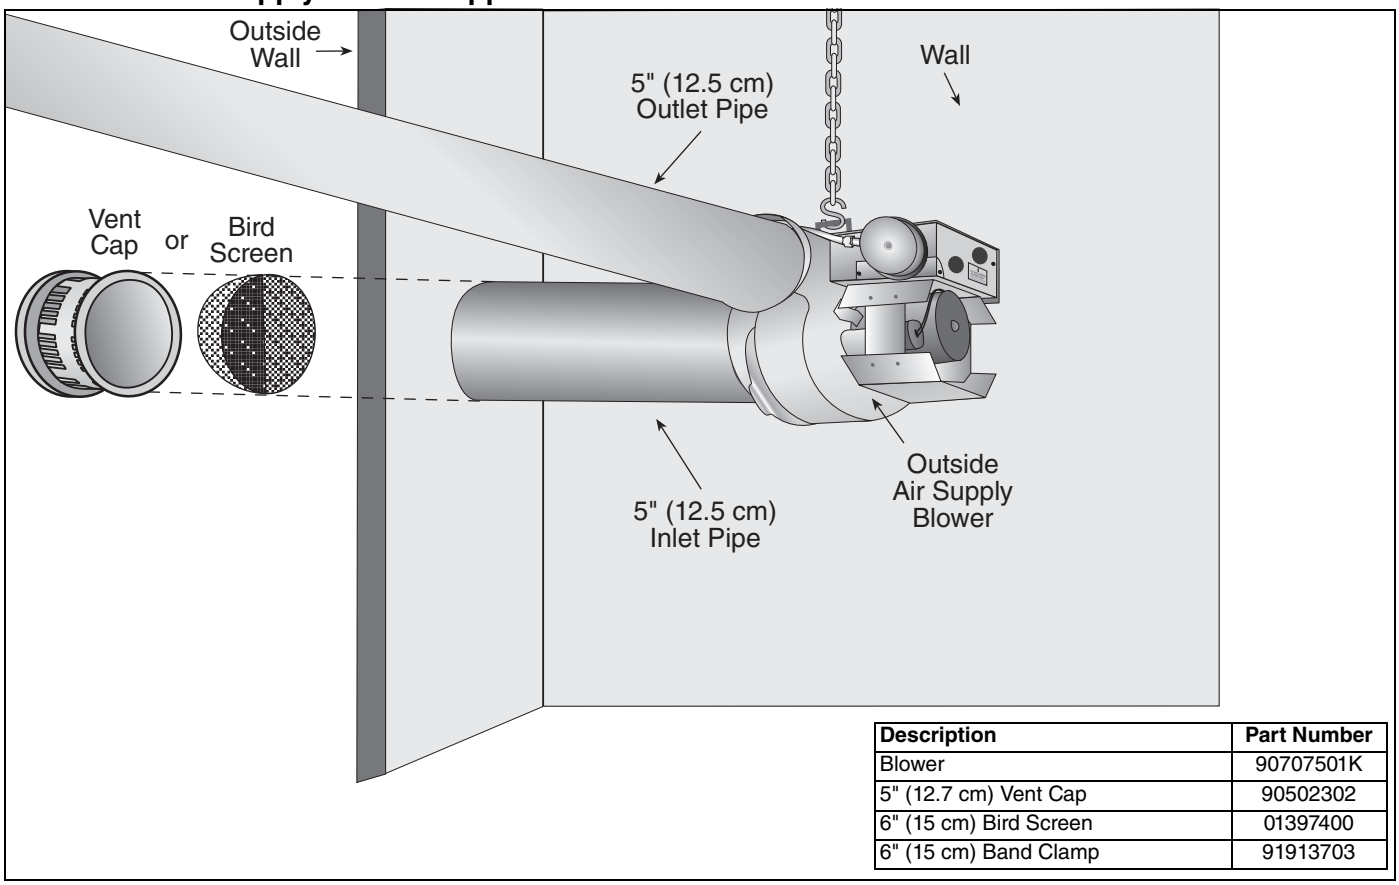

Description	Part Number
Blower	90707501K
5" (12.7 cm) Vent Cap	90502302
6" (15 cm) Bird Screen	01397400
6" (15 cm) Band Clamp	91913703

FIGURE 26: Pressurized Outside Air Supply

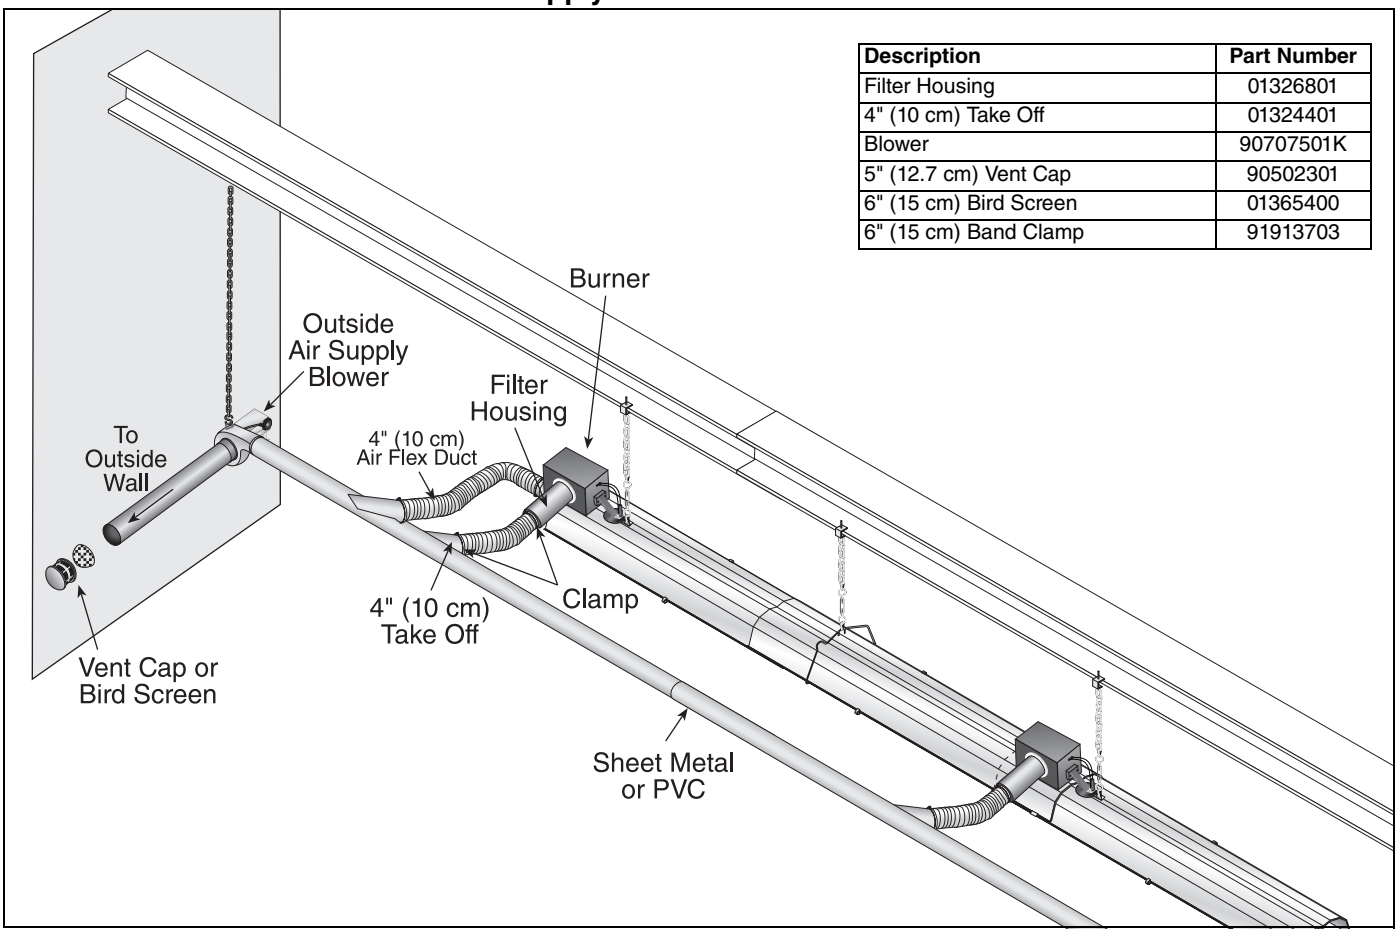

Description	Part Number
Filter Housing	01326801
4" (10 cm) Take Off	01324401
Blower	90707501K
5" (12.7 cm) Vent Cap	90502301
6" (15 cm) Bird Screen	01365400
6" (15 cm) Band Clamp	91913703

FIGURE 27: Non-Pressurized Outside Air Supply

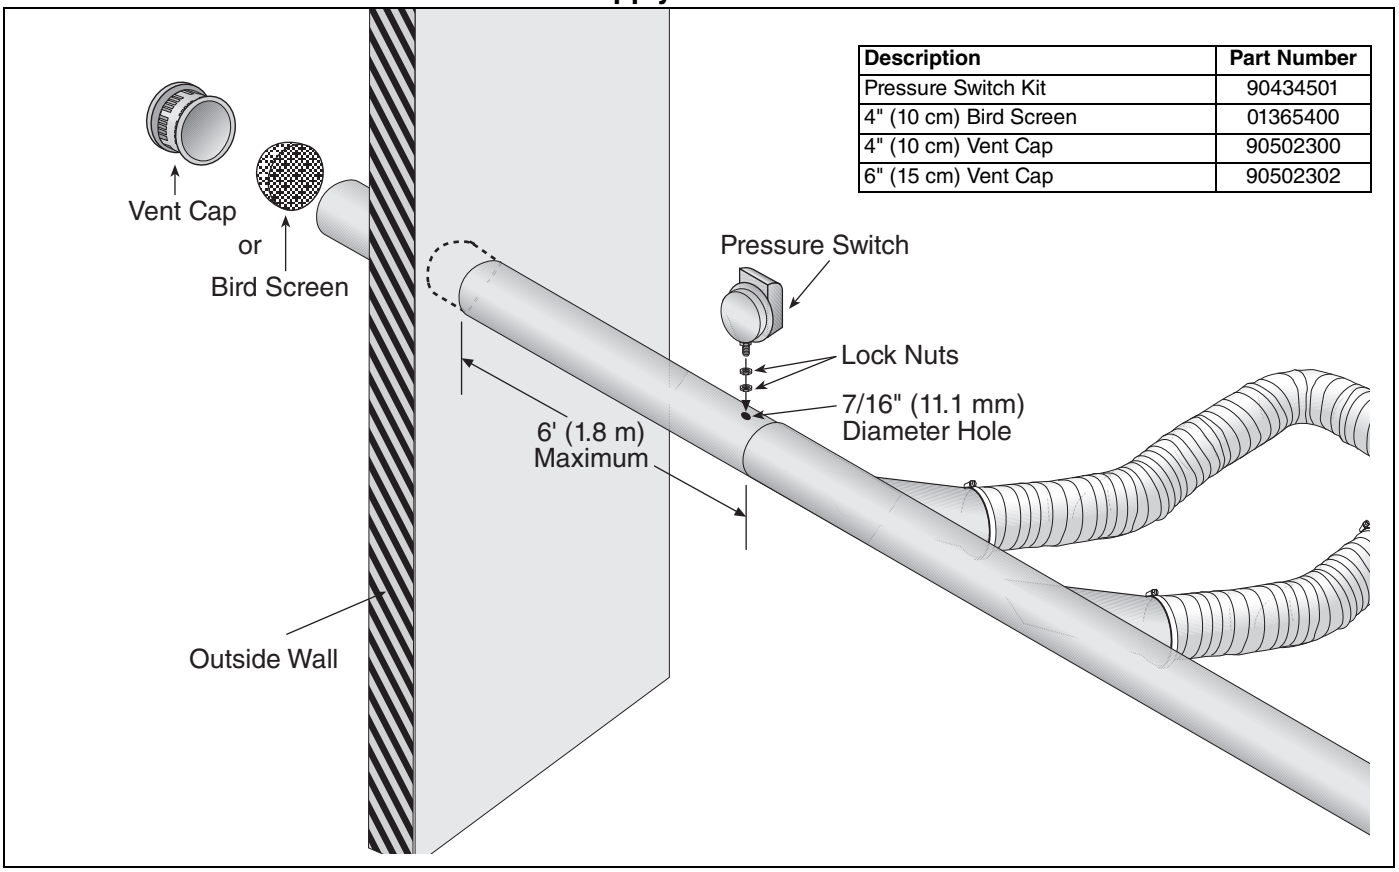

Description	Part Number
Pressure Switch Kit	90434501
4" (10 cm) Bird Screen	01365400
4" (10 cm) Vent Cap	90502300
6" (15 cm) Vent Cap	90502302

SECTION 11: GAS PIPING

⚠ WARNING

Fire Hazard

Tighten gas hose fittings to connect gas supply according to Figure 28.

Gas hose can crack when twisted.

Gas hose moves during normal operation.

Use only 36" (91 cm) long connector of 1/2" or 3/4" nominal ID.

Connector supplied with heater for U.S. models (not with Canadian models).

Failure to follow these instructions can result in death, injury or property damage.

⚠ WARNING

Explosion Hazard

Leak test all components of gas piping before operation.

Gas can leak if piping is not installed properly.

Do not high pressure test gas piping with heater connected.

Failure to follow these instructions can result in death, injury or property damage.

Install the gas hose as shown *on Page 48, Figure 28*. The gas hose accommodates expansion of the heating system and allows for easy installation and service of the burner. Before connecting the burners to the supply system, verify that all high pressure testing of the gas piping has been completed.

There is an expansion of the tube with each firing cycle. This will cause the burner to move with respect to the gas hose. This can cause a gas leak resulting in an unsafe condition if the gas connection is not made in strict accordance with *Figure 28*.
Meter and service must be large enough to handle all the burners being installed plus any other connected load. The gas hose which feeds the system must be large enough to supply the required gas with a maximum pressure drop of 1/2" wc. When gas piping is not included in the layout drawing, the local gas supplier will usually help in planning the gas piping.

Gas lines must meet applicable codes:
United States: The Flexible Stainless Steel Gas Hose (US models) supplied with the heater is certified per the Standard for Connectors for Gas Appliances, ANSI Z21.24/CSA 6.10 - latest revision.
Canada: The Rubber Type 1 Gas Hose (Canadian models) optional with the heater is certified as being in compliance with the Standard for Elastomeric Composite Hose and Hose Couplings for Conducting Propane and Natural Gas, CAN/CGA 8.1 - Latest revision.

- **Check the pipe and tubing ends for leaks before placing heating equipment into service. When checking for gas leaks, use a soap and water solution; never use an open flame.**

FIGURE 28: Gas Connection with Flexible Gas Hose

CORRECT POSITIONS

⚠ CAUTION

Product Damage Hazard

Hold gas nipple securely with pipe wrench when attaching gas hose.

Failure to follow these instructions can result in product damage.

Shut-Off Valve (included with gas hose) must be parallel to burner gas inlet. The 3" (8 cm) displacement shown is for the cold condition. This displacement may reduce when the system is fired.

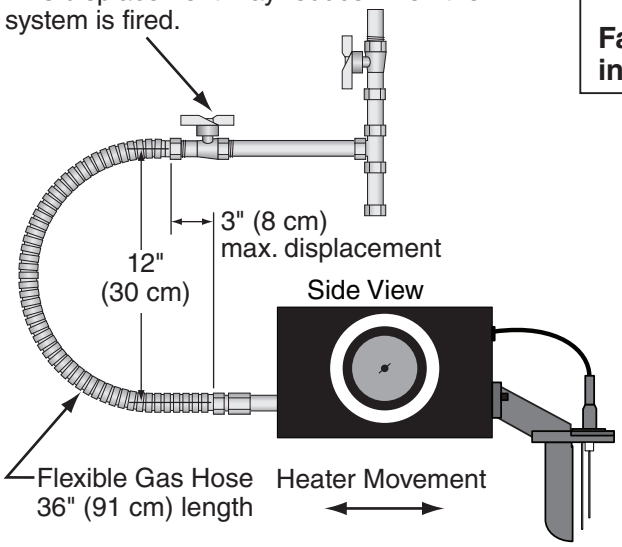

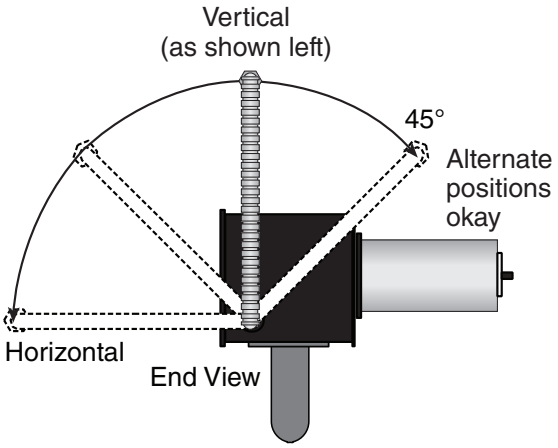

INCORRECT POSITIONS (WRONG INSTALLATION)

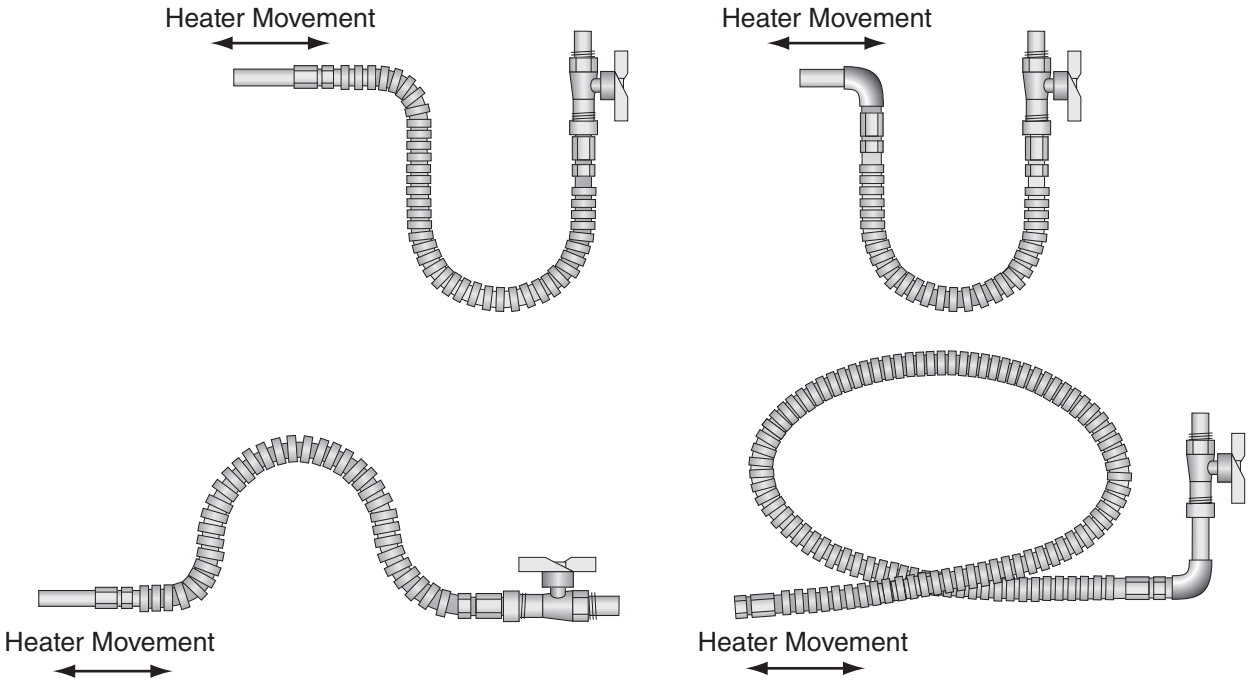

Description	Part Number
1/2" Flexible Stainless Steel Gas Hose (US Models)	91412200
3/4" Flexible Stainless Steel Gas Hose (US Models)	91412204
1/2" Rubber (Type 1) Gas Hose (Canadian Models)	91412206
3/4" Rubber (Type 1) Gas Hose (Canadian Models)	91412207

SECTION 12: CONTROL METHODS

⚠ DANGER

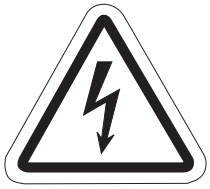

Electrical Shock Hazard

Disconnect electric before service or maintenance.

More than one disconnect switch may be required to disconnect electric to the unit.

Control must be properly grounded to an electrical source.

Failure to follow these instructions can result in death or electrical shock.

⚠ WARNING

Explosion Hazard

Turn off gas supply to heater before service.

Failure to follow these instructions can result in death, injury or property damage.

There are several methods of controlling CRV-Series systems. The options are as follows:

12.1 ROBERTS GORDON® System Control

The System Control is an electronic control panel designed to control CRV-Series heating systems. The System Control wiring is shown *on Page 56, Figure 33 through Page 58, Figure 36* and in the System Control Installation Manual (P/N 10091601NA).
The System Control can be used to control an EP-100 or EP-201 pump from the control panel. Other pumps such as the EP-301 and 3 Ø models may be controlled in conjunction with a relay or motor starter.
The System Control can control up to four zones of burners and up to two vacuum pumps.
The electrical circuit is a 120 Vac (20 A) supply.
The output for the thermostat is 24 Vac.
A System Control operated system has two minutes post purge pump operation to completely exhaust products of combustion from the system. A system control provides indication of power to the pump and zones and indicates the status of the pressure switch with lights.
The System Control is ETL listed in accordance with UL873 – Standard for Temperature Indicating and Regulating Equipment.

12.2 ROBERTS GORDON® ULTRAVAC™

The ROBERTS GORDON® ULTRAVAC™ is a micro-processor based control package designed for modulating control of CRV-Series heaters based on outdoor temperatures. The controls offer full modulation between 60% and 100% of system maximum rated input.
This controller is capable of giving control outputs to one pump and three heating zones. The controller also features inputs which are used for indoor and outdoor signal condition monitoring.
System status and settings are viewed and altered from a PC (not supplied) running ROBERTS GORDON® ULTRAVAC™ Software.
ROBERTS GORDON® ULTRAVAC™ Software requires a PC (not supplied) running Windows® 95 or higher, with a Pentium® class processor and at least 64k of RAM. For complete installation details, please refer to the ROBERTS GORDON® ULTRAVAC™ Installation, Operation and Service Manual (P/N 10081601NA), latest revision.
Special design requirements apply for CRV-Series systems using the ROBERTS GORDON® ULTRAVAC™ Controller.
Buildings today demand all sorts of control options based on the user's preference. ULTRAVAC™ controls offer a host of communication options for integration with controls' networks to best serve individual needs:
ULTRAVAC™ BMS Link: Interface ULTRAVAC™ with other building management control platforms using BACnet® or MODBUS® protocol which communicates via our ULTRAVAC™ BMS Link option.
TCP/IP (LAN): Connect to ULTRAVAC™ via your local area network of computers. Load ULTRAVAC™ software onto any computer on the network and control and view your heating system from your computer via static IP address.
MODEM: Dial into ULTRAVAC™ from anywhere in the world via modem. Supplied as standard on all central controllers!
RS-485: Hard wire ULTRAVAC™ directly to your computer.

12.3 CORAYVAC® Modulating Controls

For a ROBERTS GORDON® CORAYVAC® Modulating system, combine a modulating thermostat, a thermostat relay (P/N 90417600K) and any one of the existing ROBERTS GORDON® VFD

assemblies. The result will be a one pump, one zone CORAYVAC® Modulating system. The system will modulate based on the temperature sensed at the modulating thermostat, not outdoor temperature. The modulating controls offer many features like 7 day programmability, four time periods per day (2 occupied, 2 unoccupied), temporary temperature setpoint override, keypad lockout security and more. Remote sensors or outdoor sensors are optional, not required. Remote sensors will allow for zone temperature averaging, if required.

12.3.1 Analog Signal Modulating Thermostat

A programmable, 7-day programming, modulating thermostat can be installed to supply an analog (4-20mA) or (2-10Vdc with 500 Ohm resistor) control signal to dictate the speed of the pump. For thermostat wiring, *See Page 59, Figure 37*. Optional room sensors (P/N 10081520) and outdoor air sensors (P/N 10081521) are available.

Room temperature averaging networks can be created with up to nine room sensors (P/N 10081520). Refer to thermostat installation instructions for wiring.

12.3.2 Analog Signal Modulating Thermostat with LonWorks® Communication

If LonWorks® communication is required, a modulating thermostat can be installed to supply an analog (4-20 mA or 2-10 Vdc) signal to control the pump speed. For thermostat wiring, *See Page 59, Figure 37* and *Page 60, Figure 38*. An optional room sensor (P/N 10081520) and outdoor air sensors (P/N 10081521) are available for this thermostat as well.

The modulating thermostat with LonWorks® provides networking capability in a LonWorks® system. With communications port running at 78 kilobits per second (kbs), this thermostat can be configured to perform a variety of activities in which data is sent or received via LonWorks®. Information that can be shared, viewed and modified with the network includes:

- Current year, month, day, hour, minute, second.
- System Mode.
- Space Temperature
- Outdoor air temperature
- Current setpoint
- Occupied/Unoccupied schedule commands.
- Space Temperature

12.3.3 Analog signal Modulating with BACnet® Programmable Thermostat

If BACnet® communication is required, a BACnet® enabled modulating thermostat can be installed to supply an analog output (0-10VDC) signal control to dictate the speed of the pump. For thermostat wiring, *See Page 61, Figure 39*.

This thermostat is a flexible, wall-mounted stand-alone control with combined controller/sensor. BACnet® connections allow integral peer to peer BACnet® MS/TP LAN network communications with configurable baud rates and can easily integrate with a building automation system.

MS/TP Wiring

Connect the -A terminal in parallel with all other -A terminals on the network and the +B terminal in parallel with other +B terminals. Connect the shield of cable (Belden cable #82760 or equivalent). Connect the cable shield to a good earth ground **at one end only.**

12.3.4 Cable Requirement

Table 3, *on Page 51,* lists wiring types, sizes and distances for modulating thermostat communication.

Power Requirement

Programmable thermostats requires 24 volt, AC power.

Table 3: Modulating Thermostat Cable Requirements

Wire Function	Recommended Wire Size (Minimum)	Specification or Requirement	Distance (Maximum)
Digital Outputs	18 AWG (0.75 sq mm)	Standard thermostat wire	1000 ft (304 m)
Modulating Outputs	18 AWG (0.75 sq mm)	1 pair	500 ft (152 m)
Outdoor Air Temperature Sensor	18 AWG (0.75 sq mm)	1 pair	500 ft (152 m)
Remote Sensor	18 to 22 AWG (0.75 to 0.34 sq mm)	Twisted pair wire	1000 ft (304 m)
Power Wiring	18 to 14 AWG (0.75to 2.0 sq mm)	NEC Class II 140ºF (60°C)	Limited by line-loss effects on power consumption.
LonWorks® (P/N 90424104 only)	18 AWG (0.75 sq mm) nonshielded	1 pair	Refer to E-bus Wiring Guide 74-2865 for maximum length and generic cable specifications.
MS/TP (P/N 90425109)	18 AWG (0.75 sq mm) Shield	Belden cable #82760 or equivalent	Refer to Thermostat Installation Guide

12.3.5 Sequence of Operation

Depending on the space temperature, the thermostat will control the heat output based on demand signal communicated from the thermostat program. The thermostat will close contact on the transformer relay (P/N 90417600K). The VFD run command is energized by the transformer relay. When the VFD energizes the pump and the vacuum has been established, the pressure switch will close and energize the burners. At high heat, a demand signal will turn the pump speed to a maximum frequency and burner(s) ON at maximum firing rate. As the space temperature gets closer to the set point, the thermostat program will slow the pump speed and burner(s) firing rate down until the room temperature reaches the thermostat set point.

NOTE:

To obtain Analog 0-10VDC signal, connect as shown *on Page 61, Figure 39* and set standard speed source (parameter 05 inside VFD menu) to 03.

12.3.6 Analog Signal

An Analog Signal 2-10 Vdc (with 500 ohm resistor) or 4-20 mA output from a modulating thermostat controls the ROBERTS GORDON® VFD. The VFD supplies a variable frequency output signal to the pump that will vary based on the signal from the modulating thermostat.

The ROBERTS GORDON® CORAYVAC® with modulating thermostat wiring diagram is shown *on Page 59, Figure 37*. When the temperature falls below the setpoint, the modulating thermostat will generate a demand signal to the VFD. The VFD will output a signal to the pump to run at the desired heater(s) firing rate. There are two means to set up the analog signal from the modulating thermostat to the VFD (*See Page 51, Figure 29*):

1. To obtain 4-20 mA signal, connect as shown *on Page 60, Figure 38* and set standard speed source (parameter 05 inside VFD menu) to 04.
2. To obtain 2-10 Vdc (with 500 ohm resistor) signal, connect as shown *on Page 59, Figure 37* and set standard speed source (parameter 05 inside VFD menu) to 03.

FIGURE 29: VFD Terminal Strip

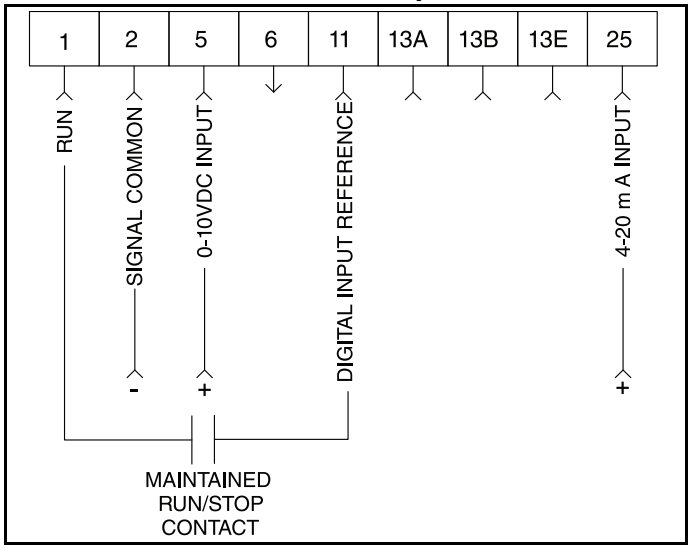

As the pump receives the analog signal from the VFD, the heater(s) modulate to the corresponding firing rate. As sensed air temperature rises closer to

the temperature setpoint, the modulating thermostat and the VFD will reduce the signal output, in turn reducing the heater firing rate. Upon satisfying temperature setpoint, the modulating thermostat and the VFD will either:

1. Turn off heater.
2. Reduce the signal so that the minimum heating firing rate is maintained until the sensed temperature rises above the setpoint to a cut-off limit temperature when the modulating thermostat turns off the heater.

12.4 SPST Transformer Relay Kit (P/N 90417600K)

The transformer relay wiring diagram is shown *on Page 53, Figure 30*. The transformer relay can be used to control an EP-100 or EP-201 pump CORAYVAC® system. The single pole relay can only be used to control one zone of burners. The electrical circuit is a 120 V AC (20 A) supply. The transformer 24 V AC output for the thermostat is rated at 40 V A. Thermostats used with the transformer must not exceed this power requirement.
A transformer relay operated system will not give any post purge pump operation to completely exhaust products of combustion from the system or provide indication of operating conditions.

12.5 SPDT Transformer Relay (P/N 90436300)

The transformer relay wiring diagram is shown *on Page 55, Figure 32*. The transformer relay can be used to control an EP-100 or EP-201 pump CORAYVAC® system. The double pole relay can only be used to control two zones of burners. The electrical circuit is a 120 V AC (20 A) supply. The transformer 24 V AC output for the thermostat is rated at 40 VA. Thermostats used with the transformer must not exceed this power requirement.
A transformer relay operated system will not give any post purge pump operation to completely exhaust products of combustion from the system or provide indication of operating conditions.

FIGURE 30: One Zone Operation without Control Panel (optional)

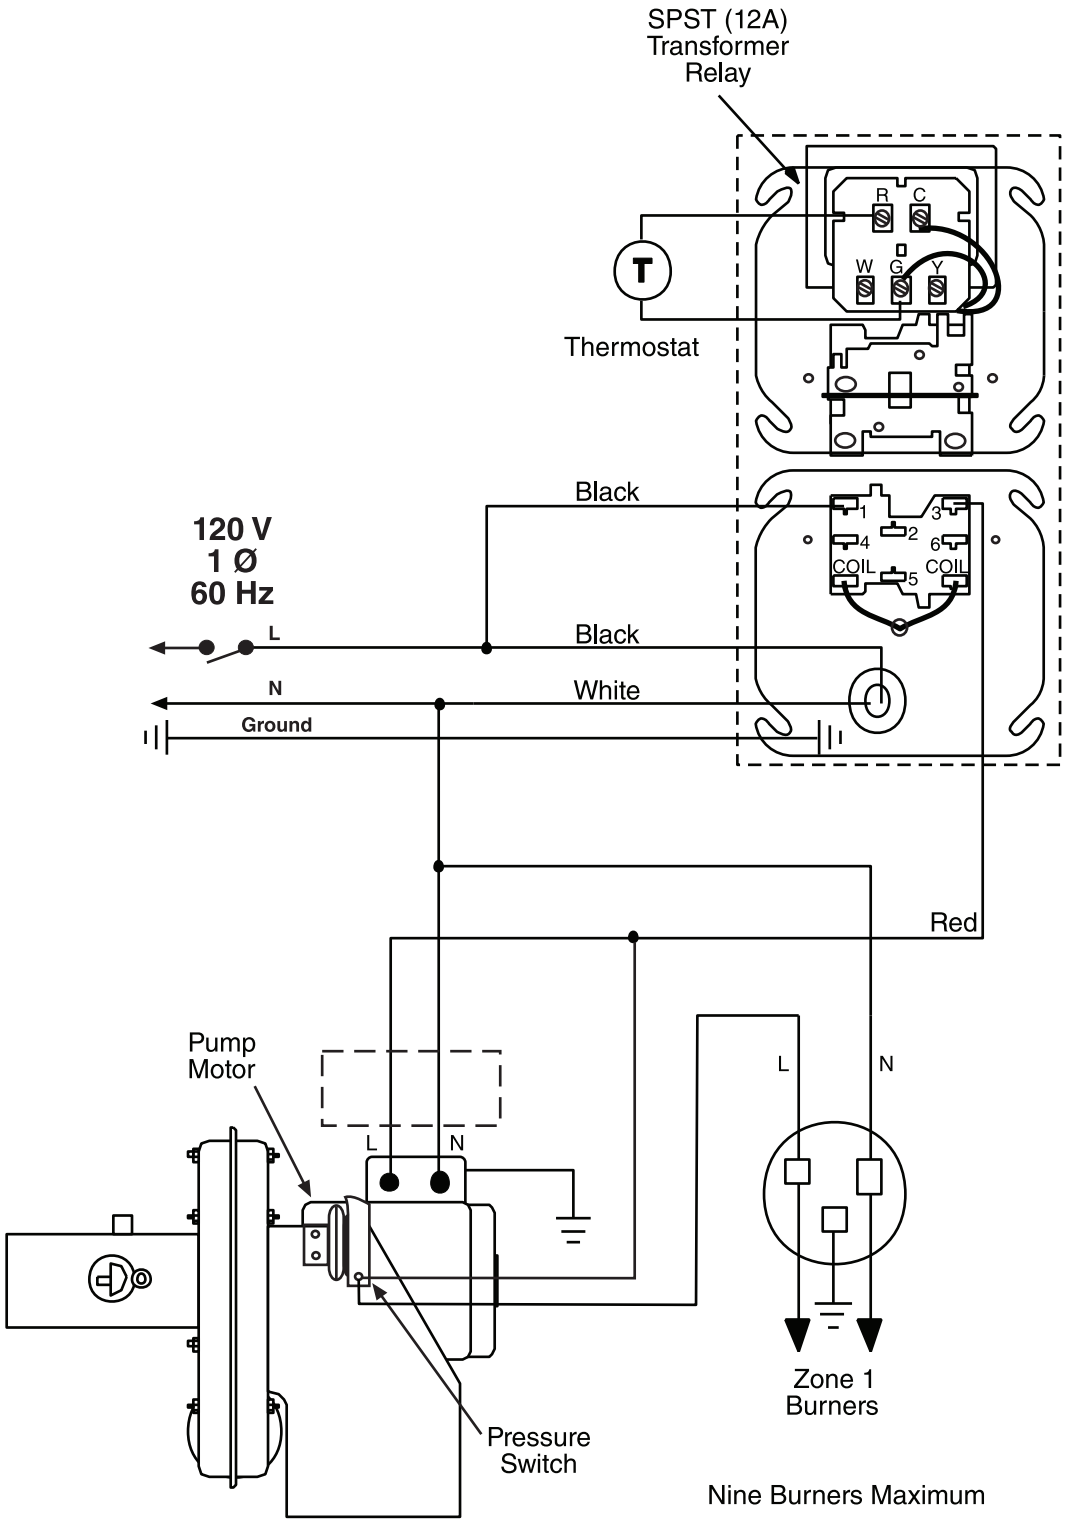

Description	Part Number
SPST Transformer Relay	90417600K

FIGURE 31: One Zone Operation (with Outside Air Blower) without Control Panel (optional)

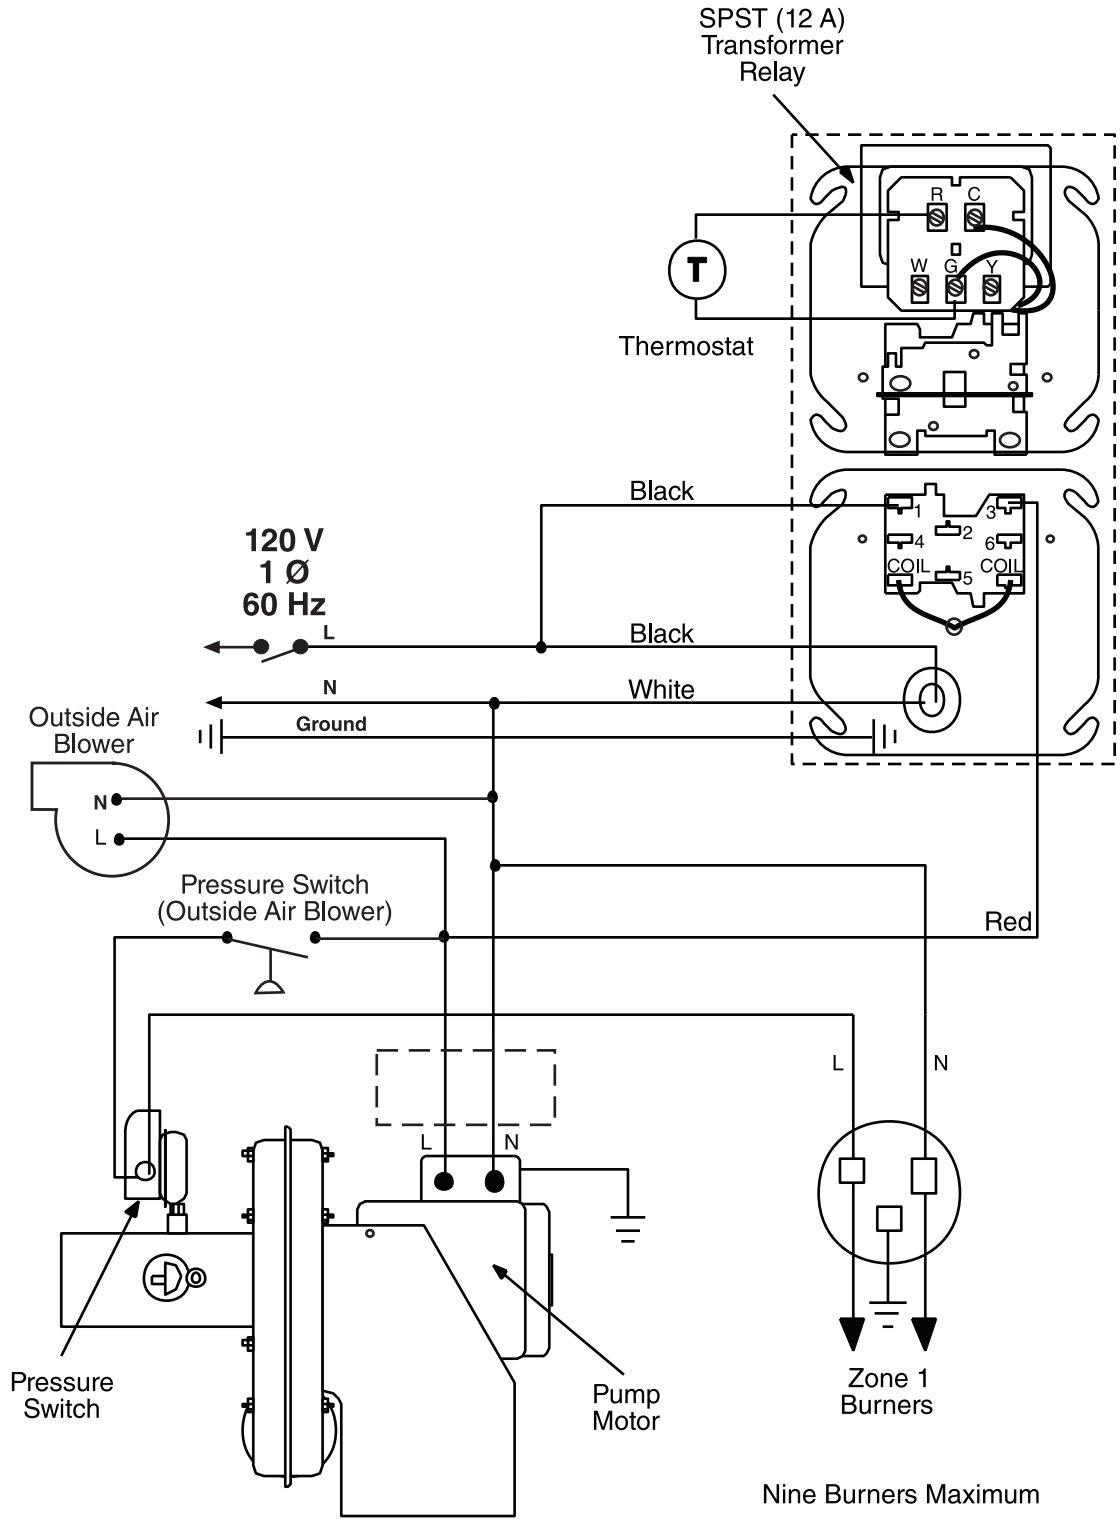

FIGURE 32: Two Zone Operation without Control Panel (optional)

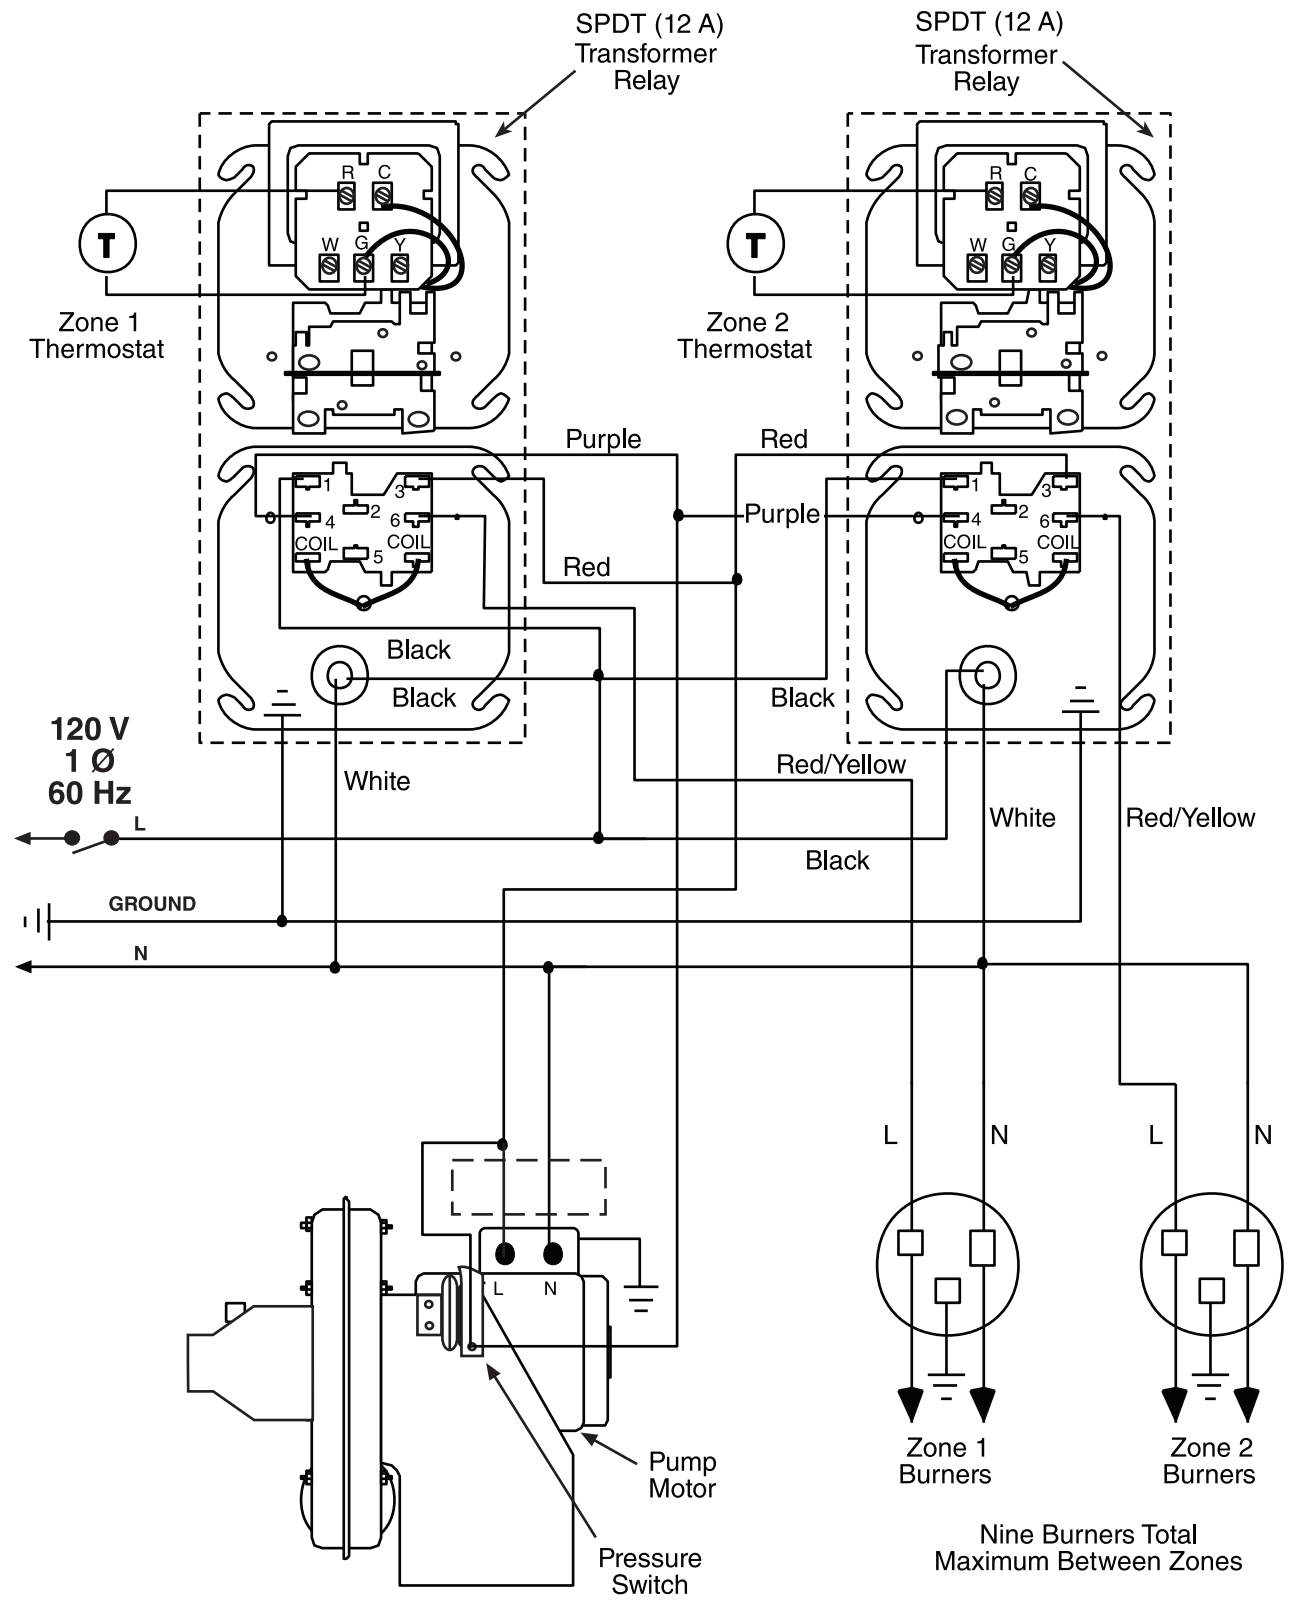

Description	Part Number
SPDT Transformer Relay	90436300

FIGURE 33: General System Wiring

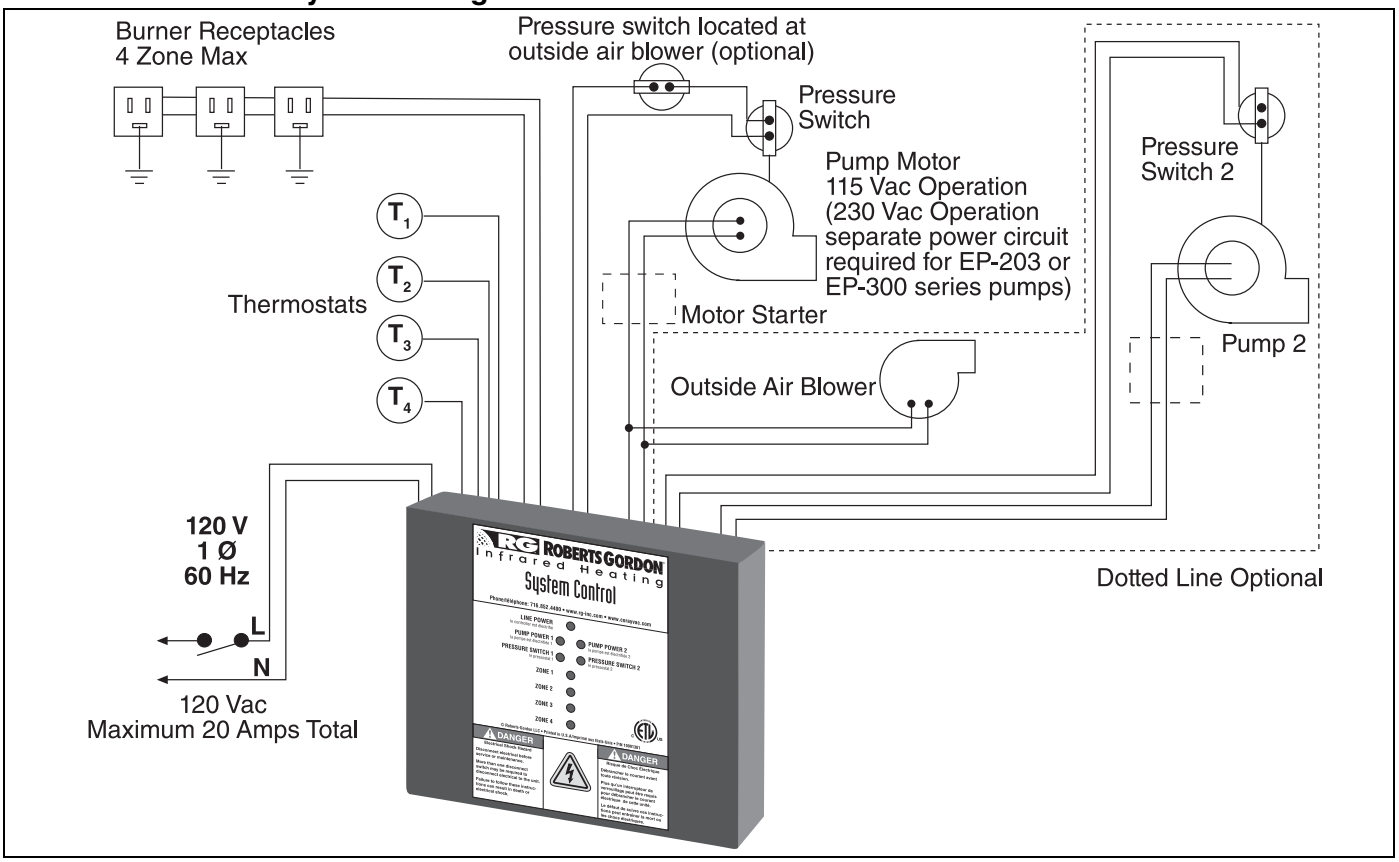

FIGURE 34: External Wiring Diagram EP-100 and EP-201 120 V 1 Ø Pump

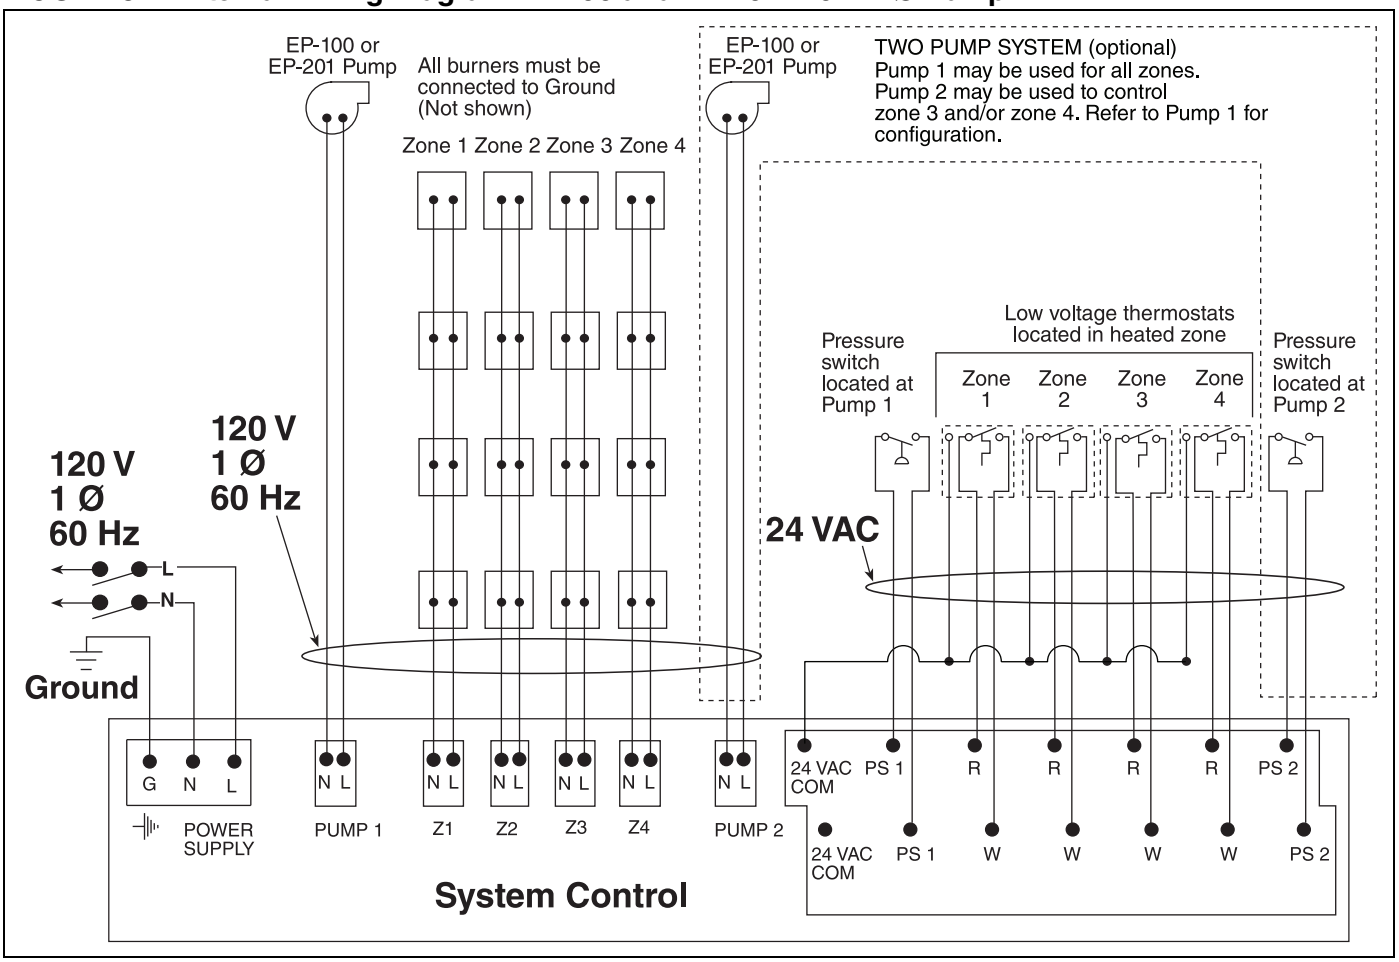

FIGURE 35: External Wiring Diagram EP-100, EP-201 or EP-301 230 V 1 Ø Pump (optional)

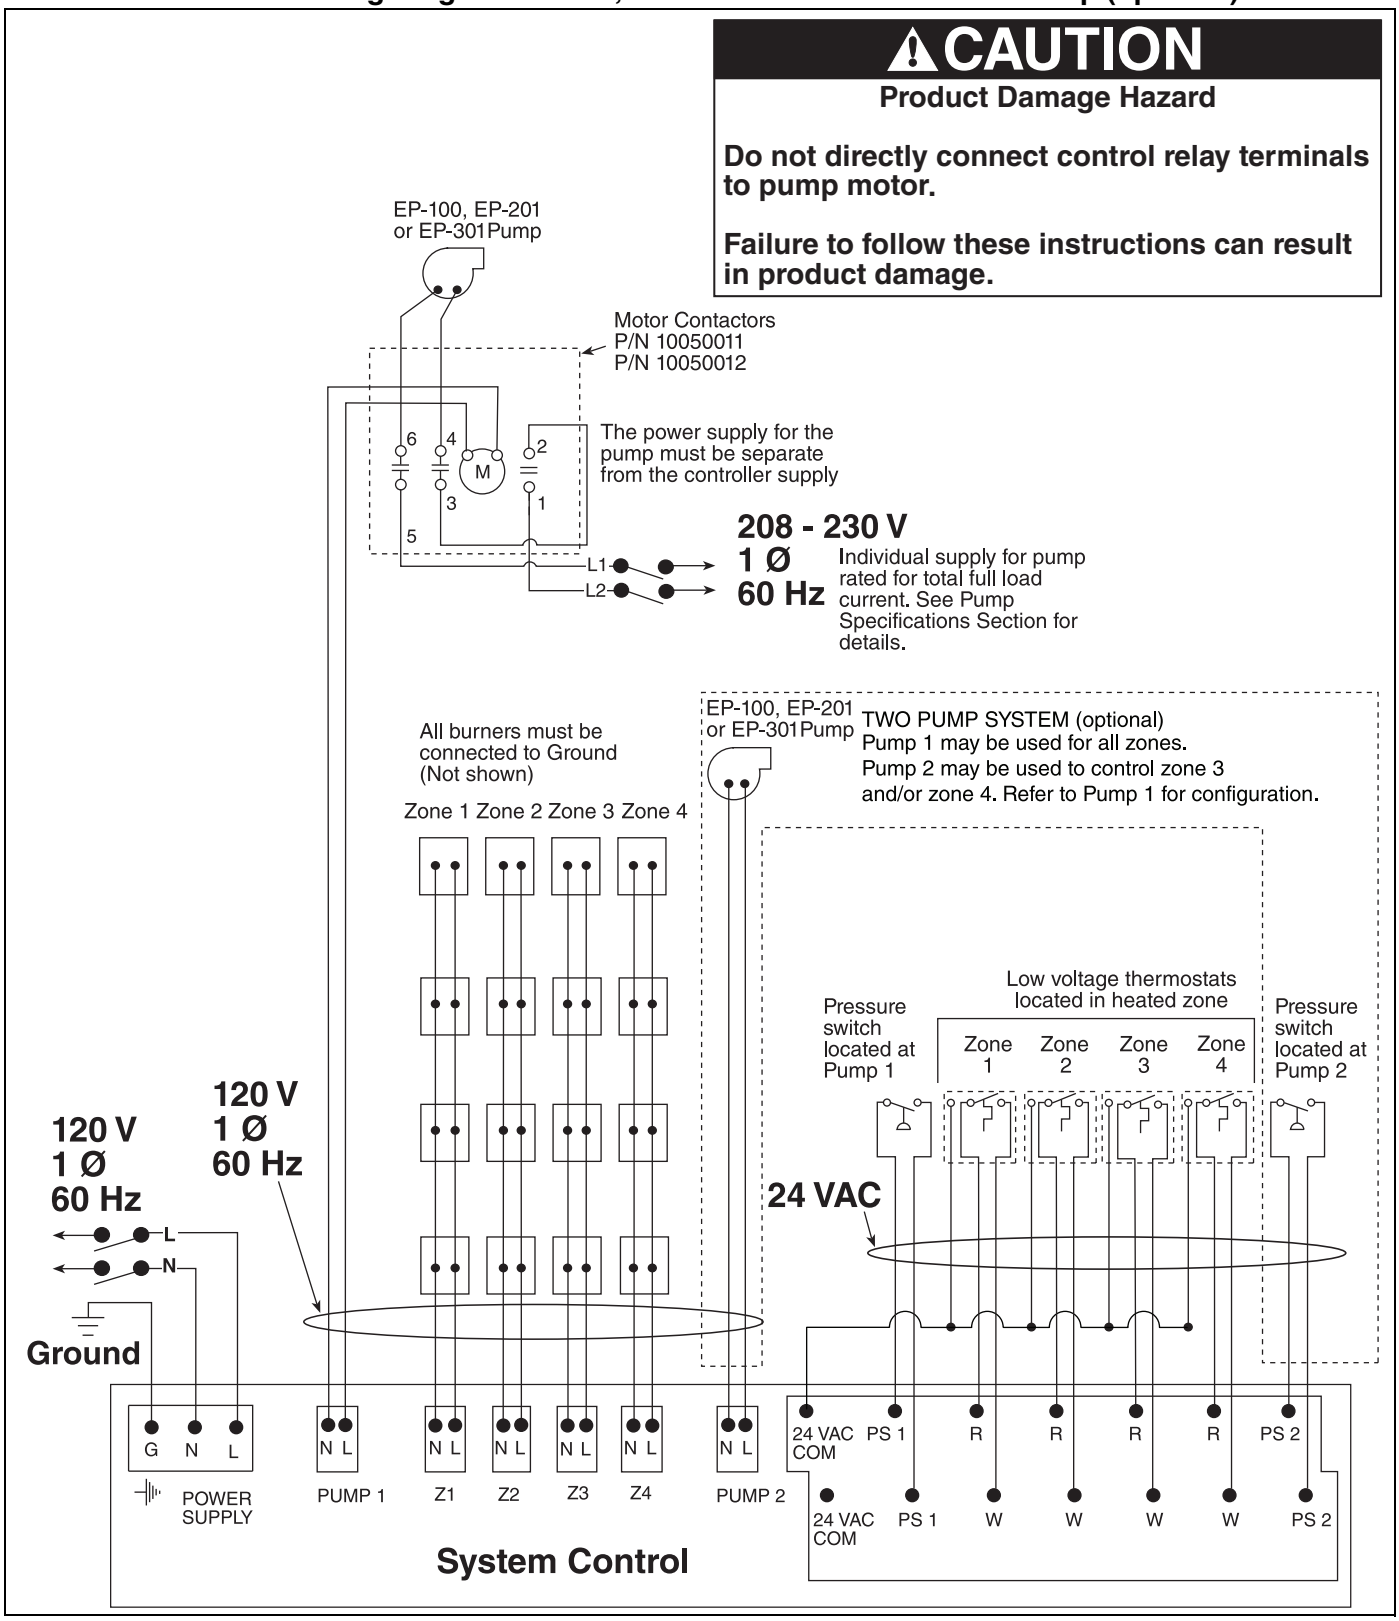

FIGURE 36: External Wiring Diagram EP-203 or EP-303 208 - 230 V (or 460 V) 3 Ø Pump (optional)

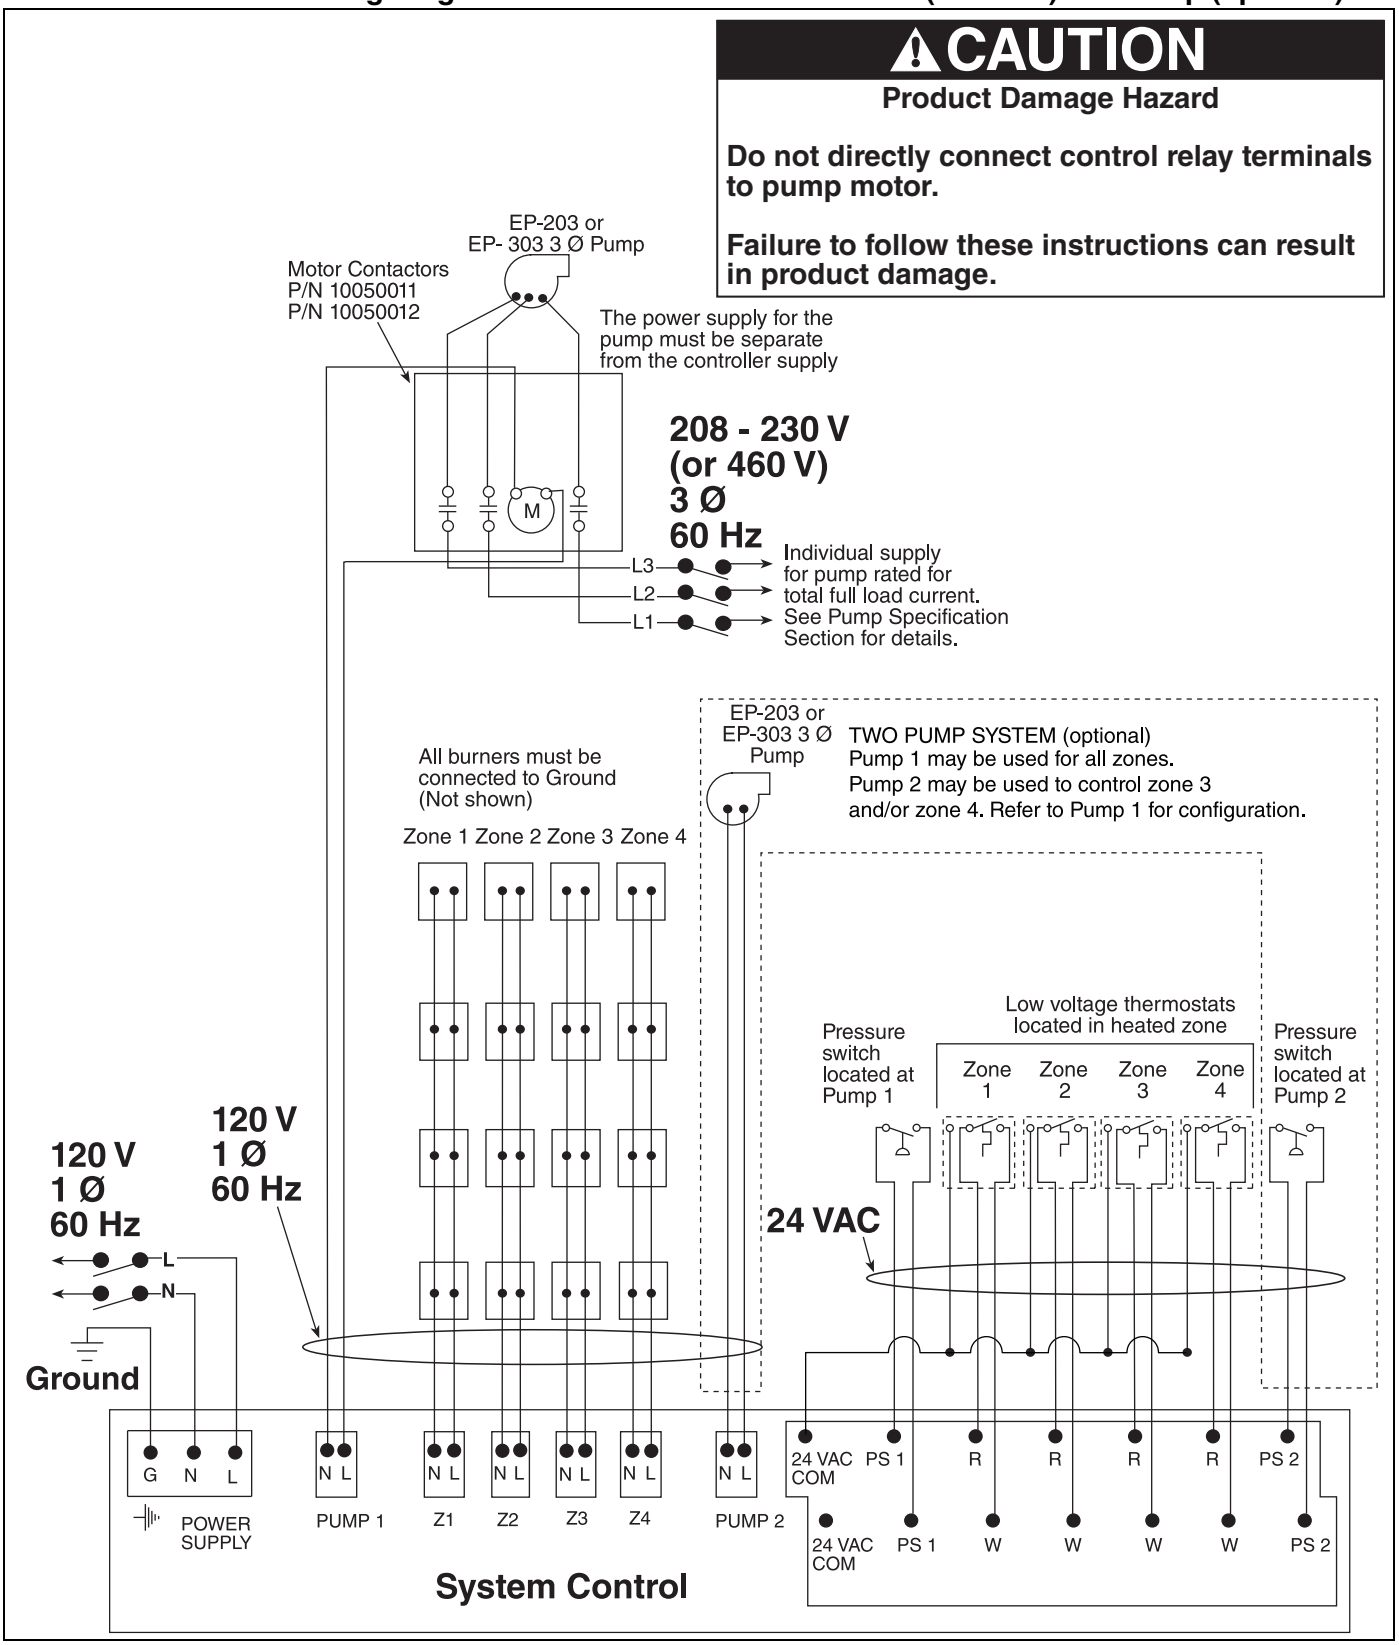

FIGURE 37: CORAYVAC® Modulating Wiring Diagram [LonWorks® (2-10 Vdc with 500 ohm resistor) optional]

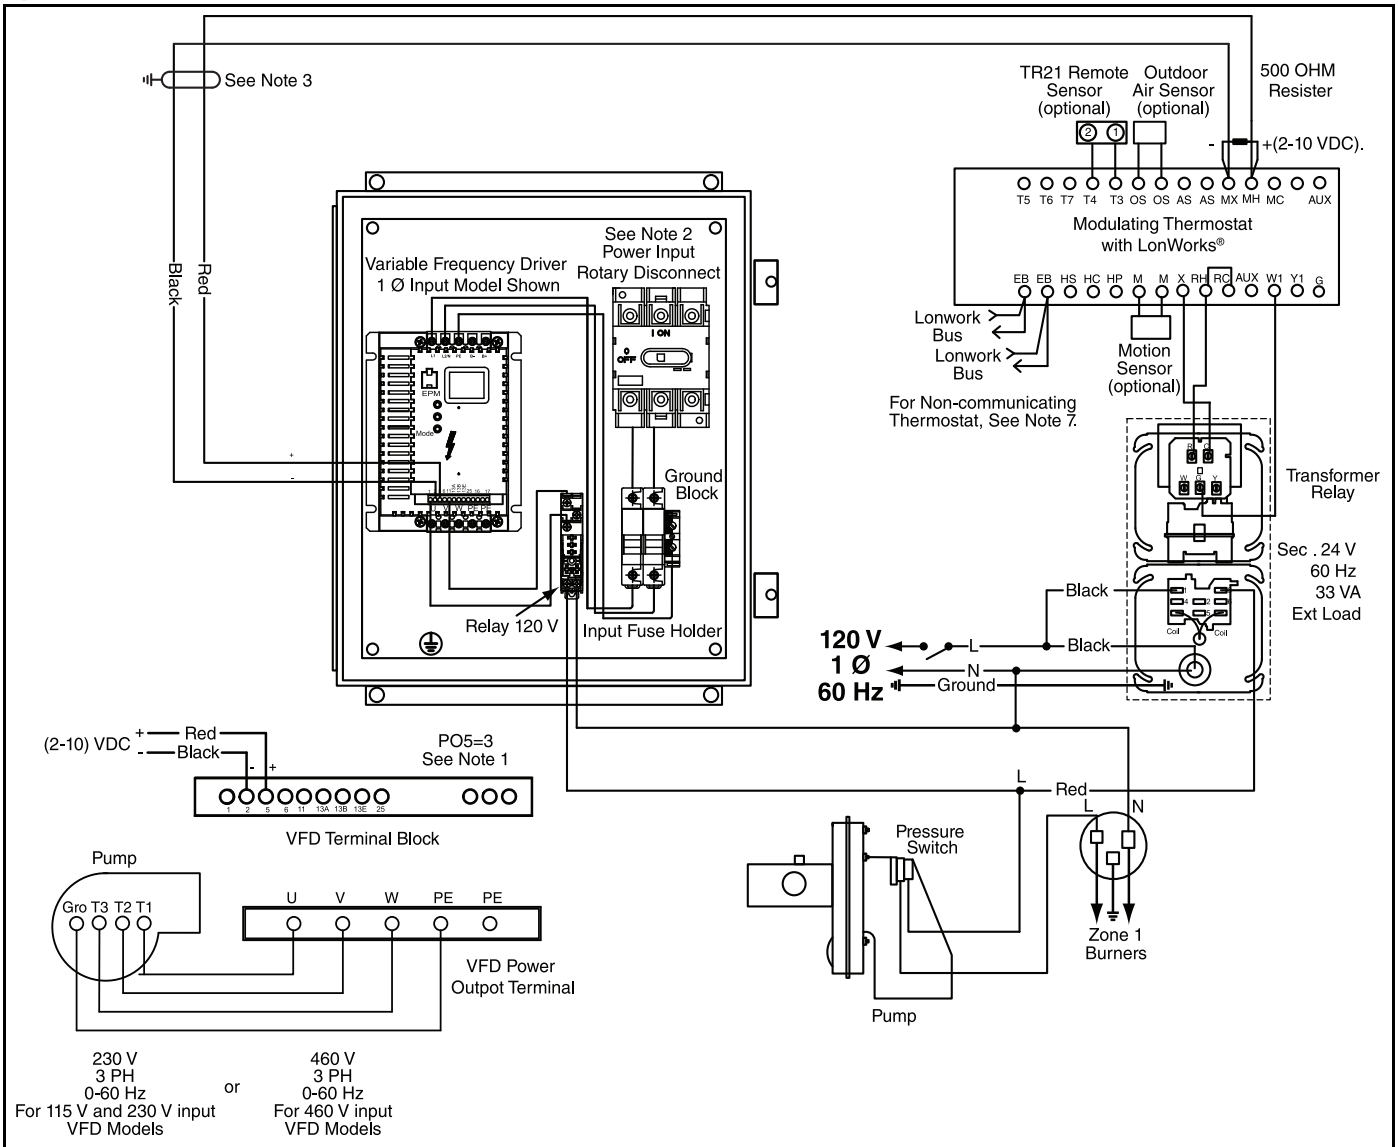

NOTES:
1. For 2-10 VDC Speed Control, Set standard speed source (parameter 05) to (03).
2. See VFD rating plate for required input.
   A) 120 V 1 Ø 60 Hz supply for 120 V VFD model.
   B) 230 V 1 Ø 60 Hz supply for 230 V VFD model.
3. Ground only one end of the shielded cable.
4. Control wire to be a minimum of 20 AWG type Beldon 5401 FE CMR 75° C shielded or equivalent.
5. Wire over 24 VAC to be a minimum of 16 AWG flexing type MTW, 105° C, 600 V or equivalent.
   A) 120 VAC colors: Phase = Red, Neutral = White, Ground = Green.
   B) 24 VAC colors: Blue
6. All three power wires from terminals U, V and W to the pump motor must be kept tightly bundled and run in a separate conduit away from all other power and control wiring.
7. For Non-communicating thermostats without LonWorks® bus, thermostat terminals marked "EB" will be marked "_ _" and no LonWorks® bus communication wires are used.

Description	Part Number
SPST Transformer Relay	90417600K
Thermostat, Modulating LonWorks®	90425104
Thermostat, Modulating	90425105
Sensor, Remote Modulating	10081520
Sensor, Outdoor Modulating	10081521

FIGURE 38: CORAYVAC® Modulating Wiring Diagram [LonWorks® (4-20 mA) optional]

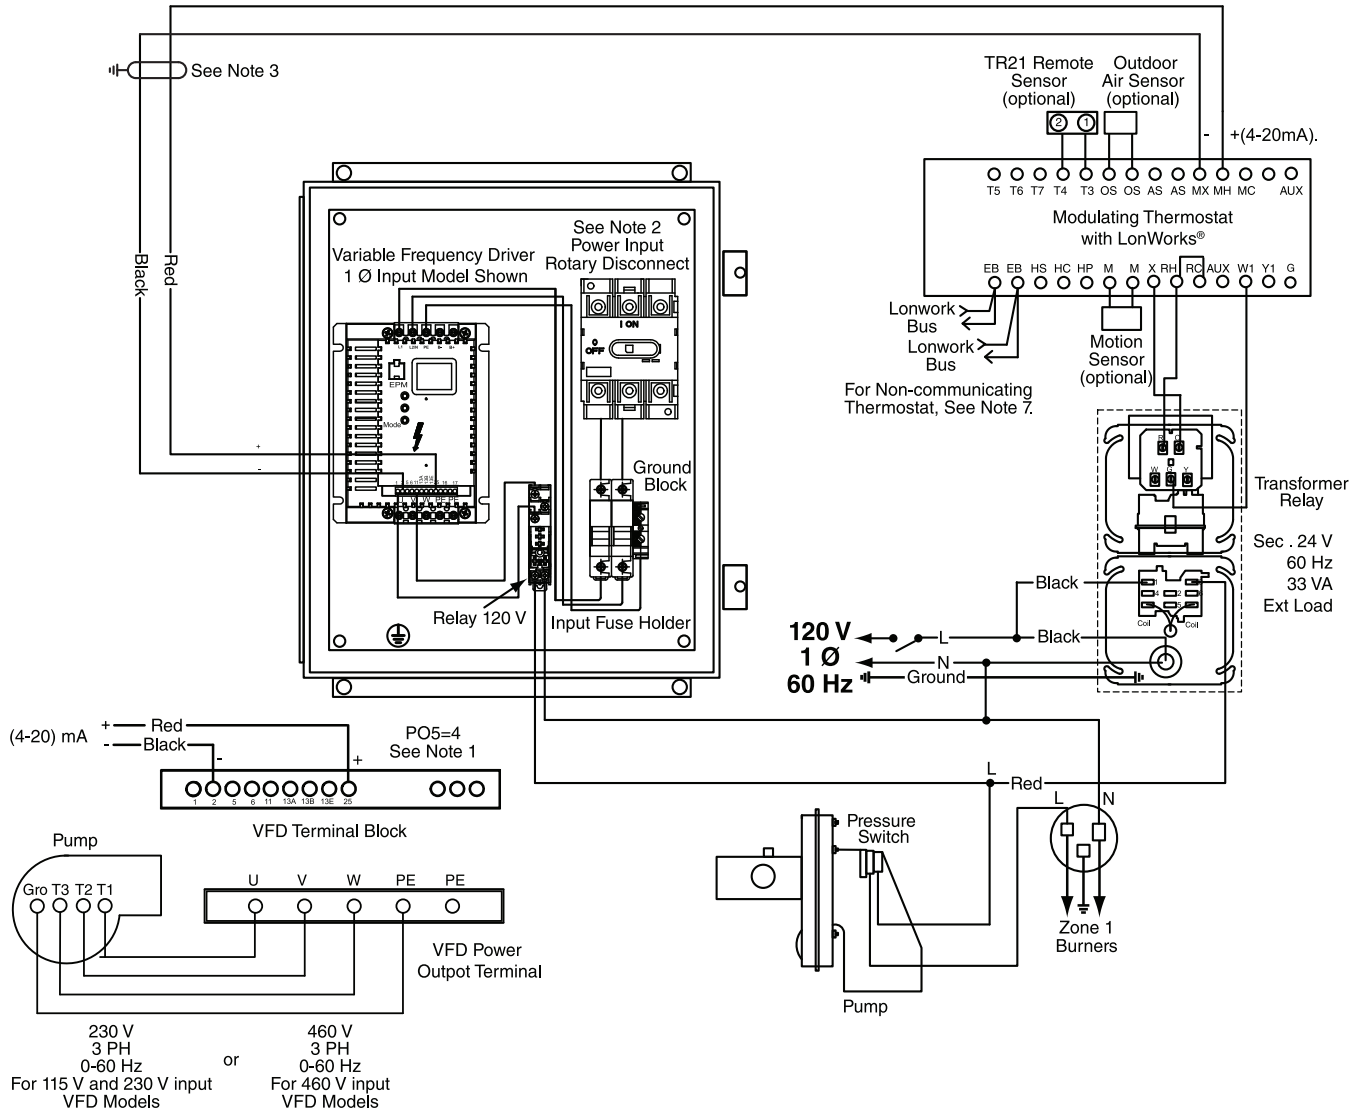

NOTES:
1. For 4-20 mA Speed Control, Set standard speed source (parameter 05) to (04).
2. See VFD rating plate for required input.
   A) 120 V 1 Ø 60 Hz supply for 120 V VFD model.
   B) 230 V 1 Ø 60 Hz supply for 230 V VFD model.
3. Ground only one end of the shielded cable.
4. Control wire to be a minimum of 20 AWG type Belden 5401 FE CMR 75° C shielded or equivalent.
5. Wire over 24 VAC to be a minimum of 16 AWG flexing type MTW, 105° C, 600 V or equivalent.
   A) 120 VAC colors: Phase = Red, Neutral = White, Ground = Green.
   B) 24 VAC colors: Blue
6. All three power wires from terminals U, V and W to the pump motor must be kept tightly bundled and run in a separate conduit away from all other power and control wiring.
7. For Non-communicating thermostats without LonWorks® bus, thermostat terminals marked "EB" will be marked "_ _" and no LonWorks® bus communication wires are used.

Description	Part Number
SPST Transformer Relay	90417600K
Thermostat, Modulating LonWorks®	90425104
Thermostat, Modulating	90425105
Sensor, Remote Modulating	10081520
Sensor, Outdoor Modulating	10081521

FIGURE 39: CORAYVAC® Modulating with BACnet® Wiring Diagram (optional)

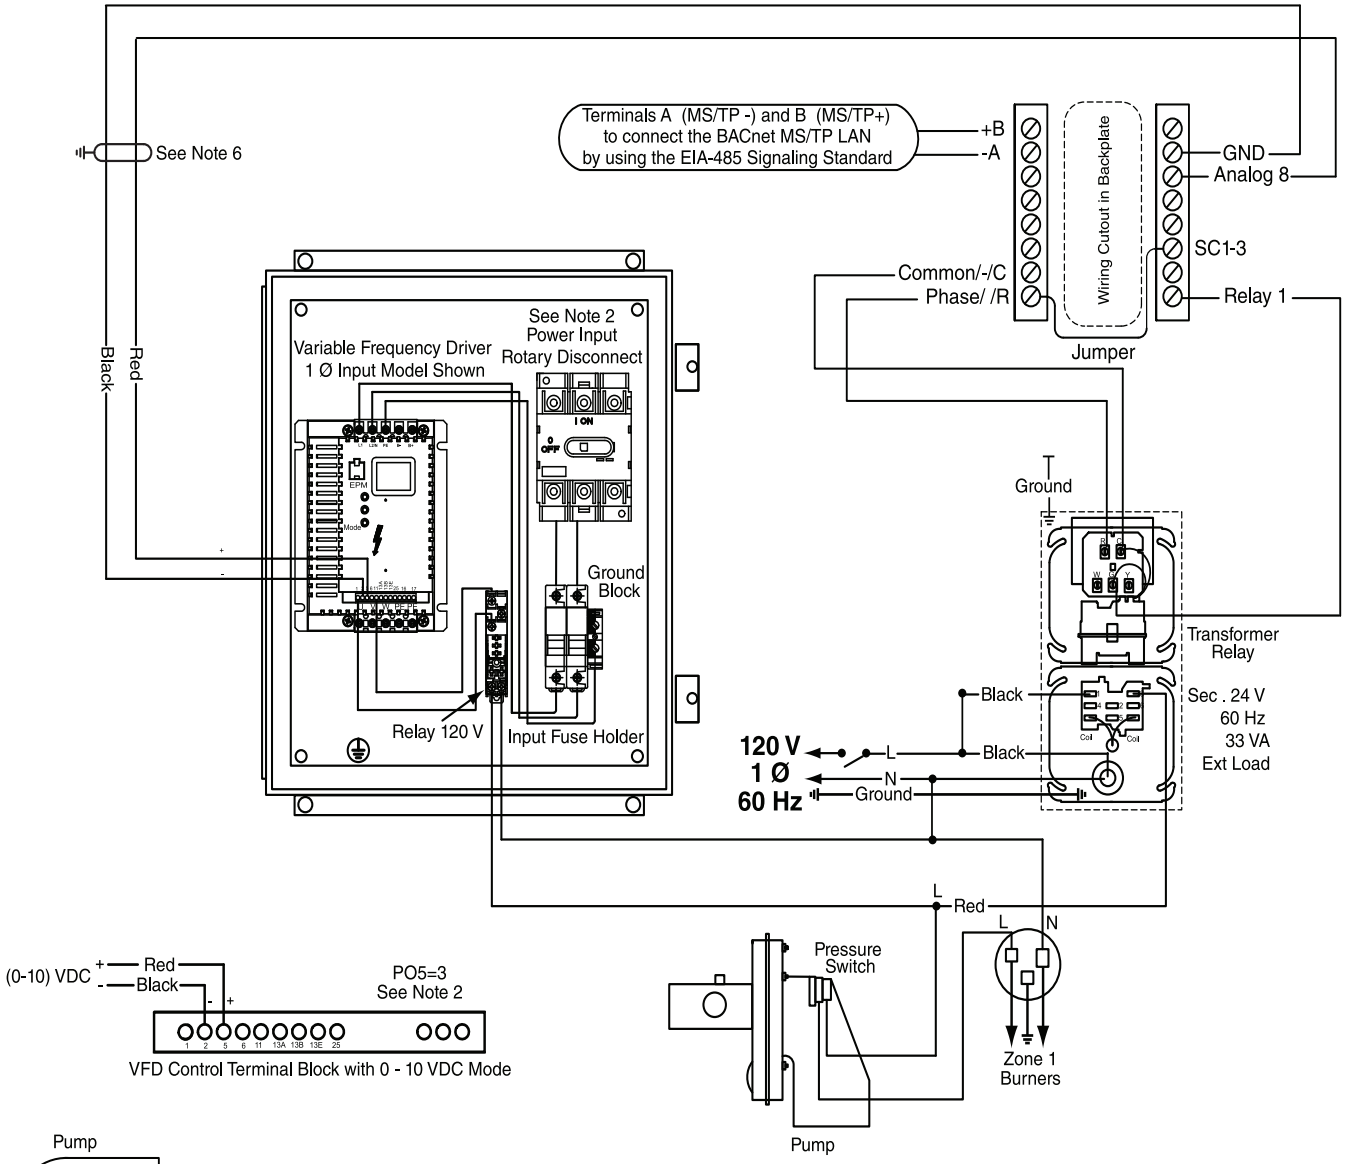

NOTES:

1. A jumper is pre-installed between Phase R (24 VAC) and SC1-3 (24 VAC Relay).
2. For 0-10VDC Speed Control, set standard speed source (parameter 05) to 03.
3. See VFD Rating Plate for Required Input .
   A) 120 V 1 PH 60 HZ Supply for 120V VFD Model.
   B) 230 V 1 PH 60 HZ Supply for 230V VFD Model.
4. Ground only one end of the shielded cable.
5. Control Wire To Be A Minimum of 20 AWG Type Belden 5401FE CMR 75° C Shielded or Equivalent.
6. Wire Over 24 VAC To Be A Minimum of 16 AWG Flexing Type MTW, 105° C, 600V or Equivalent
   A) 120 VAC Colors: Phase =Red, Neutral=White, Ground=Green.
   B) 24 VAC Colors: Blue
7. All three power wires from terminals U, V and W to the pump motor must be kept tightly bundled and run in a separate conduit away from all other power and control wiring.

Description	Part Number
SPST Transformer Relay	90417600K
Thermostat, Modulating BACnet®	90425109

FIGURE 40: Burner Internal Wiring

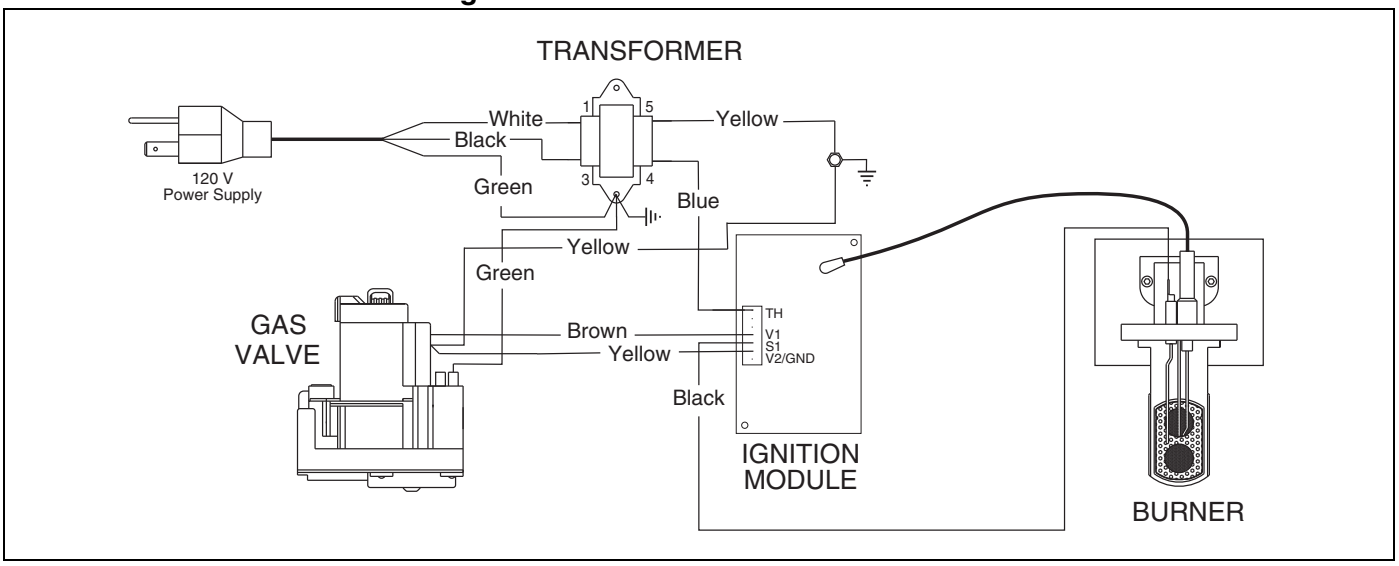

If any of the original wire as supplied with the heater must be replaced, it must be replaced with wiring material having a temperature rating of at least 105°C and 600 volts.

FIGURE 41: Burner Internal Ladder Diagram

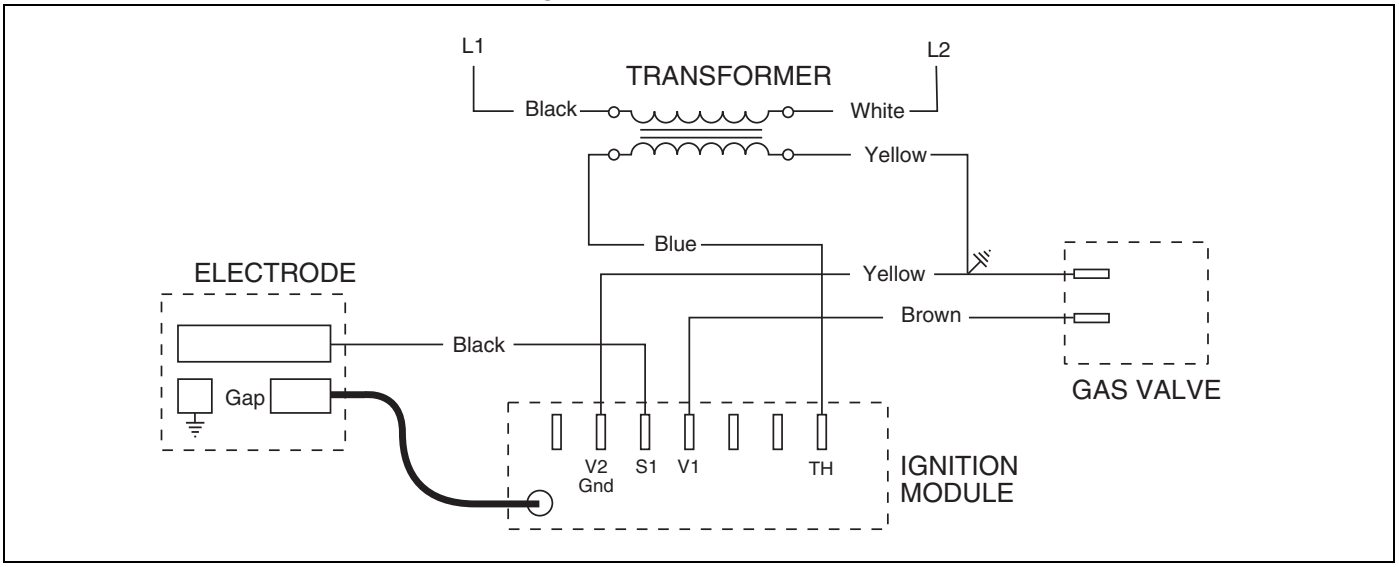

SECTION 13: STARTING THE SYSTEM

⚠DANGER	⚠WARNING		
Electrical Shock Hazard **Disconnect electric before service.** **More than one disconnect switch may be required to disconnect electric from heater.** **Heater must be connected to a properly grounded electrical source.**	**Explosion Hazard** **Leak test all components of gas piping before operation.** **Gas can leak if piping is not installed properly.** **Do not high pressure test gas piping with equipment connected.**	**Carbon Monoxide Hazard** **Heaters installed unvented must be interlocked with sufficient building exhaust.** **Heaters must be installed according to the installation manual.**	**Burn Hazard** **Allow heater to cool before service.** **Tubing may still be hot after operation.**
Failure to follow these instructions can result in death, electric shock, injury or property damage.			

Start with the main gas valve closed and the electric power off.

13.1 Checking the Gas Line

1. Open the main valve and verify that no gas is flowing through the meter.
2. Purge the line if this was not done following pressure testing with air.
3. Verify that the gas pressure is not above 14'' wc (1/2 PSIG).
4. Close the main gas valve.

13.2 Checking the Electrical System

1. See that all temperature setpoints are set below room temperature.
2. Turn on power supply to system controls.
3. Check to see that no part of the system (i.e. burners, pump or air supply blower) is powered.
4. Individually check each zone by raising the zone temperature set points separately. Raising each zone temperature set point above room temperature should start the pump immediately. After a 45 second delay, the burners will begin their ignition sequence by sparking at the electrode (visible through the burner window).
5. Make a preliminary vacuum check at burners in branches that have an adjustable damper coupling. *See Page 65, Figure 42* for manometer hookup to check vacuum. This check is to insure that all dampers are open before the system is fired. Vacuum, as measured at the end vents, should be approximately 3.5'' wc or slightly above (cold).

13.3 Starting the System

NOTE: During the initial firing, the protective oil on the tubing may smoke for 30 to 60 minutes and adequate ventilation should be provided.

1. Start with all temperature setpoints below room temperature.
2. Open main gas valve.
3. Turn up temperature setpoints one zone at a time, waiting to see that all burners in a zone start. When the burner ignites, a blue flame will be observed through the viewer window.
4. If any abnormal operation occurs, see the troubleshooting section of the service instructions.

13.4 Setting the Vacuum

1. Set temperature setpoints above room temperature. See that all burners are operating properly.

2. Allow at least ½ hour operation for temperature to normalize, then check system vacuum balance. Vacuum can be measured by inserting a manometer hose into the end vent as shown *on Page 65, Figure 42*. Normal end vent vacuum should be set at approximately 2.5'' wc to 3.0'' wc (hot).
   Vacuum adjustments are made by means of the damper in the pump inlet and the adjustable damper coupling(s) in the system. Check the vacuum at all end vents and then adjust the damper coupling to obtain equal vacuum readings of 2.5'' wc to 3.0'' wc. If end vent vacuum exceeds 3.0" wc, adjust the pump inlet damper until vacuum readings are 2.5'' wc to 3.0'' wc.
   With systems designed to operate at maximum vacuum, it may not be possible to obtain vacuum differential readings at or slightly above 2.5'' wc. If so, adjust the damper couplings to maximum but equal vacuum reading. Be sure to lock all dampers securely after adjustment.
3. Reset temperature setpoints to desired room temperature.
4. If heat is not required, turn off main switch and close the main gas valve.

FIGURE 42: Vacuum Reading

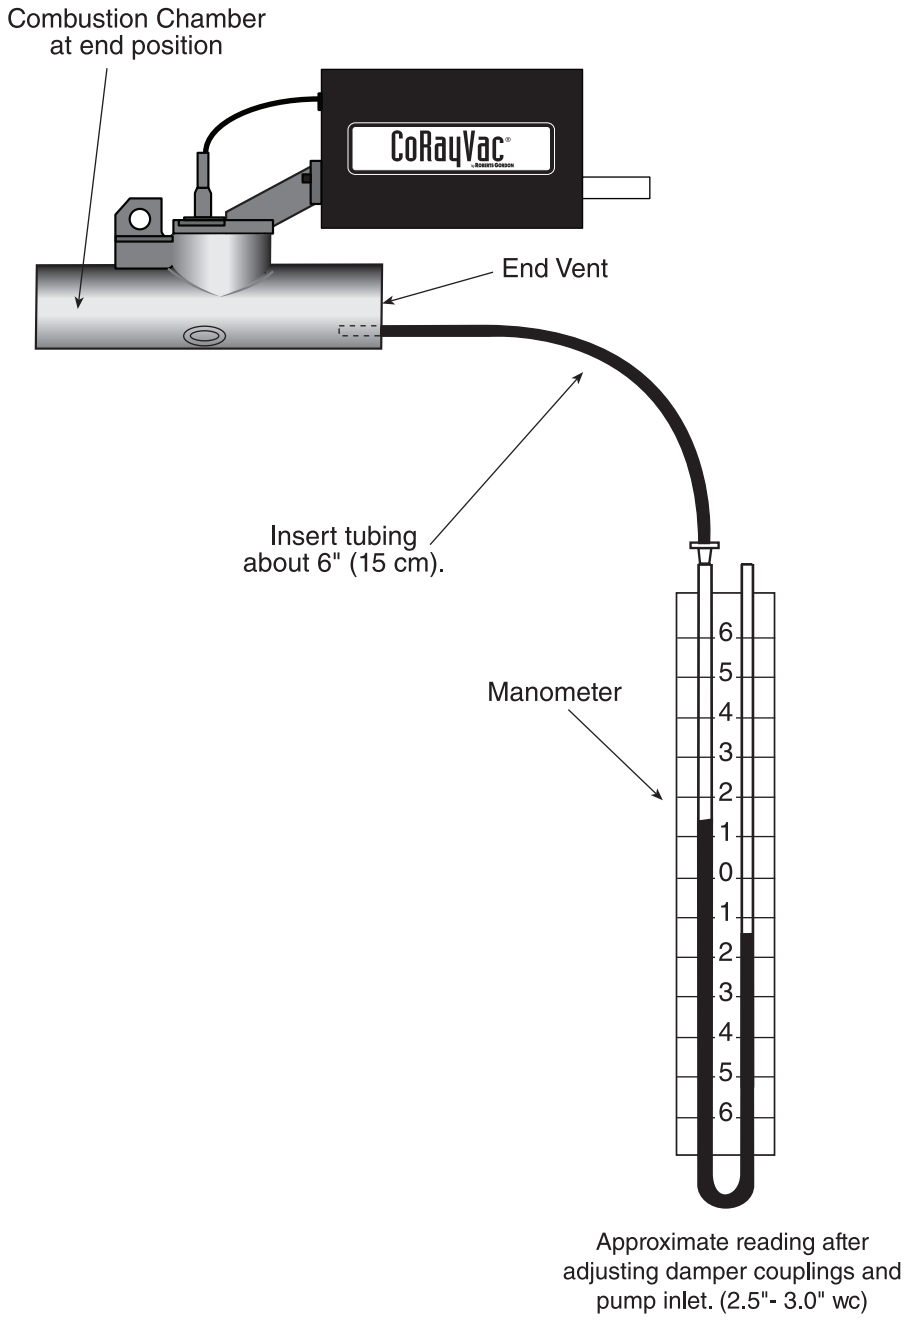

SECTION 14: VARIABLE FREQUENCY DRIVE PROGRAMMING

14.1 VFD Parameter Settings For Use With Modulating Thermostats

The VFD parameters come with factory default settings. The following parameter settings must be changed for modulating thermostats. Settings can only be altered when the pump motor is stopped.

Verify that there is power to the VFD (LCD display will be on) and modulating thermostat is set to off.

⚠DANGER

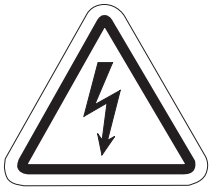

Electrical Shock Hazard

Enclosure contains live electrical components.

Programming must be done by a trained technician only.

Replace cover before operating.

Failure to follow these instructions can result in death or electrical shock.

To override the rotary disconnect switch inside the VFD enclosure, turn the square rod with a wrench to the ON position. In order to be able to close the cover of the disconnect, the rods need to be turned back to the OFF position.

14.1.1

To enter the PROGRAM mode and access the parameters, press the Mode button. This will activate the PASSWORD prompt (if the password has not been disabled).

Display reads "00"

Upper right decimal point blinks

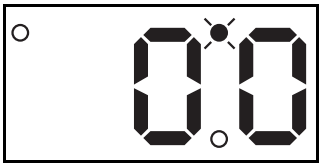

14.1.2

Use the arrow buttons to scroll to the password value (the factory set password is 225).

Press Mode to enter password.

Once the correct password value is entered, the display will read "P01", which indicates that the PROGRAM mode has been accessed at the beginning of the parameter menu (P01 is the first parameter).

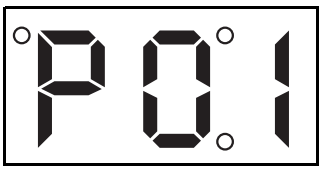

NOTE: If the display flashes "Er", the password was incorrect, and the process to enter the password must be repeated.

14.1.3 Use the arrow buttons to scroll to the desired parameter number. For new parameter settings *See Page 67, Section 14.2*.

14.1.4 Once the desired parameter number is found:

Press Mode to display present parameter setting (example setting is 20.0).

Upper right decimal point blinks.

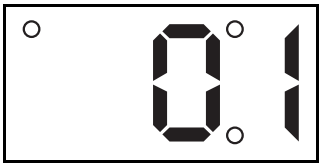

Use arrow buttons to change setting.

Press Mode to store new setting and exit the program mode.

14.1.5 To change another parameter, press the Mode key again to re-enter the PROGRAM mode (the parameter menu will be accessed at the parameter that was last viewed or changed before exiting).

If the Mode key is pressed within two minutes of exiting the PROGRAM mode, the password is not required to access the parameters. After two minutes, the password must be entered in order to access the parameters again.

14.2 Altering VFD Parameters

Using the procedure described *on Page 66, Section 14.1.1 through Section 14.1.5*, alter the following parameters:

Parameter Number	Parameter Name	Factory Default	New Setting
P01	Line Voltage	01	01
P03	Start Method	01	05
P05	Standard Speed Source	01	(03) (0-10) Vdc (04) (4-20) mA
P44	Password	225	Any # 000-999
P45	Speed at Minimum Signal	0.0Hz	Frequency Setting noted *on Page 68, Section 15.2.2*
P46	Speed at Maximum Signal	60.0Hz	Frequency Setting noted *on Page 68, Section 15.2.1*

SECTION 15: COMMISSIONING THE CORAYVAC® MODULATING SYSTEM

NOTE: Before starting the commissioning procedure, all the wiring of the ROBERTS GORDON® ULTRAVAC™ control boards, relay boards, modulating thermostats, pumps and VFD must be completed. The communication connection must be made to the controller, modulating thermostat and burners. The ROBERTS GORDON® ULTRAVAC™ software must be installed on the PC.

It is important to understand that the frequency that the VFD runs the motor at, determines the speed of the impeller in the pump. Variation of the impeller speed will increase or decrease vacuum in the system. The following procedure will help you set minimum and maximum VFD frequency settings to achieve proper vacuum in the system.

15.1 Setting The CORAYVAC® End Burner Vacuum

15.1.1 ROBERTS GORDON® ULTRAVAC™

For complete ROBERTS GORDON® ULTRAVAC™ installation please refer to the ROBERTS GORDON® ULTRAVAC™ Installation, Operation and Service Manual (P/N 10081601NA), latest edition.

15.1.2 Modulating Thermostat

Turn on power to the VFD and transformer relay; this should energize the modulating thermostat. Set the thermostat to "call for heat" as described in the accompanying instructions for the modulating thermostat. *See Page 66, Section 14* for setting up the VFD.

15.2 Adjusting the Variable Frequency Drive

15.2.1 Maximum Signal Speed

The pump should be running and the burners should light within 60 seconds. At the VFD, verify the number displayed on the LCD screen is "60.0" If it is lower than 60.0, hit the "up" arrow button on the VFD until the number reads 60.0 Let the burners fire for approximately 20-30 minutes to warm up the system. Using a manometer, check the end vent vacuum in each zone (each branch of burners). *See Page 70, Figure 43*.

If the lowest end vent vacuum reading is above 3.0" wc, reduce the vacuum pump speed. Generally, the lowest end vent vacuum reading is on the longest branch of the system. Use the down arrow button on the VFD to reduce the frequency of the output signal to the pump, thus reducing the pump speed and lowering the end vent vacuum reading. Continue to reduce the frequency until the end vent vacuum reading is between 2.5" - 3.0" wc. Make note of this frequency setting below. The frequency is found on the VFD's LCD screen.

2.5" wc - 3.0" wc VFD Frequency Setting

Record Frequency Setting Here:

NOTE: To avoid damage to the pump motor, do not adjust the frequency above 60.0 Hz. Verify that the end vent vacuum readings in the remaining branches are proper. If necessary, adjust the proper damper coupling to achieve an end vent vacuum of 2.5" - 3.0" wc, *See Page 65, Figure 42*. Damper couplings should be found near the end of the radiant portion of the pipe in each branch or where a branch connects to other branches at a cross or tee. *See Page 70, Figure 43*.

15.2.2 Minimum Signal Speed

After setting end vent vacuums between 2.5" wc and 3.0" wc, while all the burners are still operating, use the down arrow button on the VFD to reduce the frequency of the output signal to the pump. Reduce the frequency of the VFD until the manometer at each of the end vents reads 1.2" wc - 1.5" wc. Make note of this frequency setting below. The frequency is found on the VFD's LCD screen.

1.0" w.c. - 1.2" wc VFD Frequency Setting

Record Frequency Setting Here:

15.3 Programming Of Variable Frequency Drive

Parameter Number	Parameter Name	Factory Default	New Setting
P01	Line Voltage	01	01
P03	Start Method	01	05
P05	Standard Speed Source	01	(03) (0-10) Vdc (04) (4-20) mA
P44	Password	225	Any # 000-999
P45	Speed at Minimum Signal	0.0Hz	Frequency Setting noted *on Page 68, Section 15.2.2*
P46	Speed at Maximum Signal	60.0Hz	Frequency Setting noted *on Page 68, Section 15.2.1*

15.3.1 Modulating Thermostat

Turn "OFF" the power to the transformer relay. Using the procedure described *on Page 66, Section 14*, alter the parameters above on the VFD. Turn on the transformer relay and program the modulating thermostat to the customer's requirements.

FIGURE 43: Possible Damper Couplings' Locations

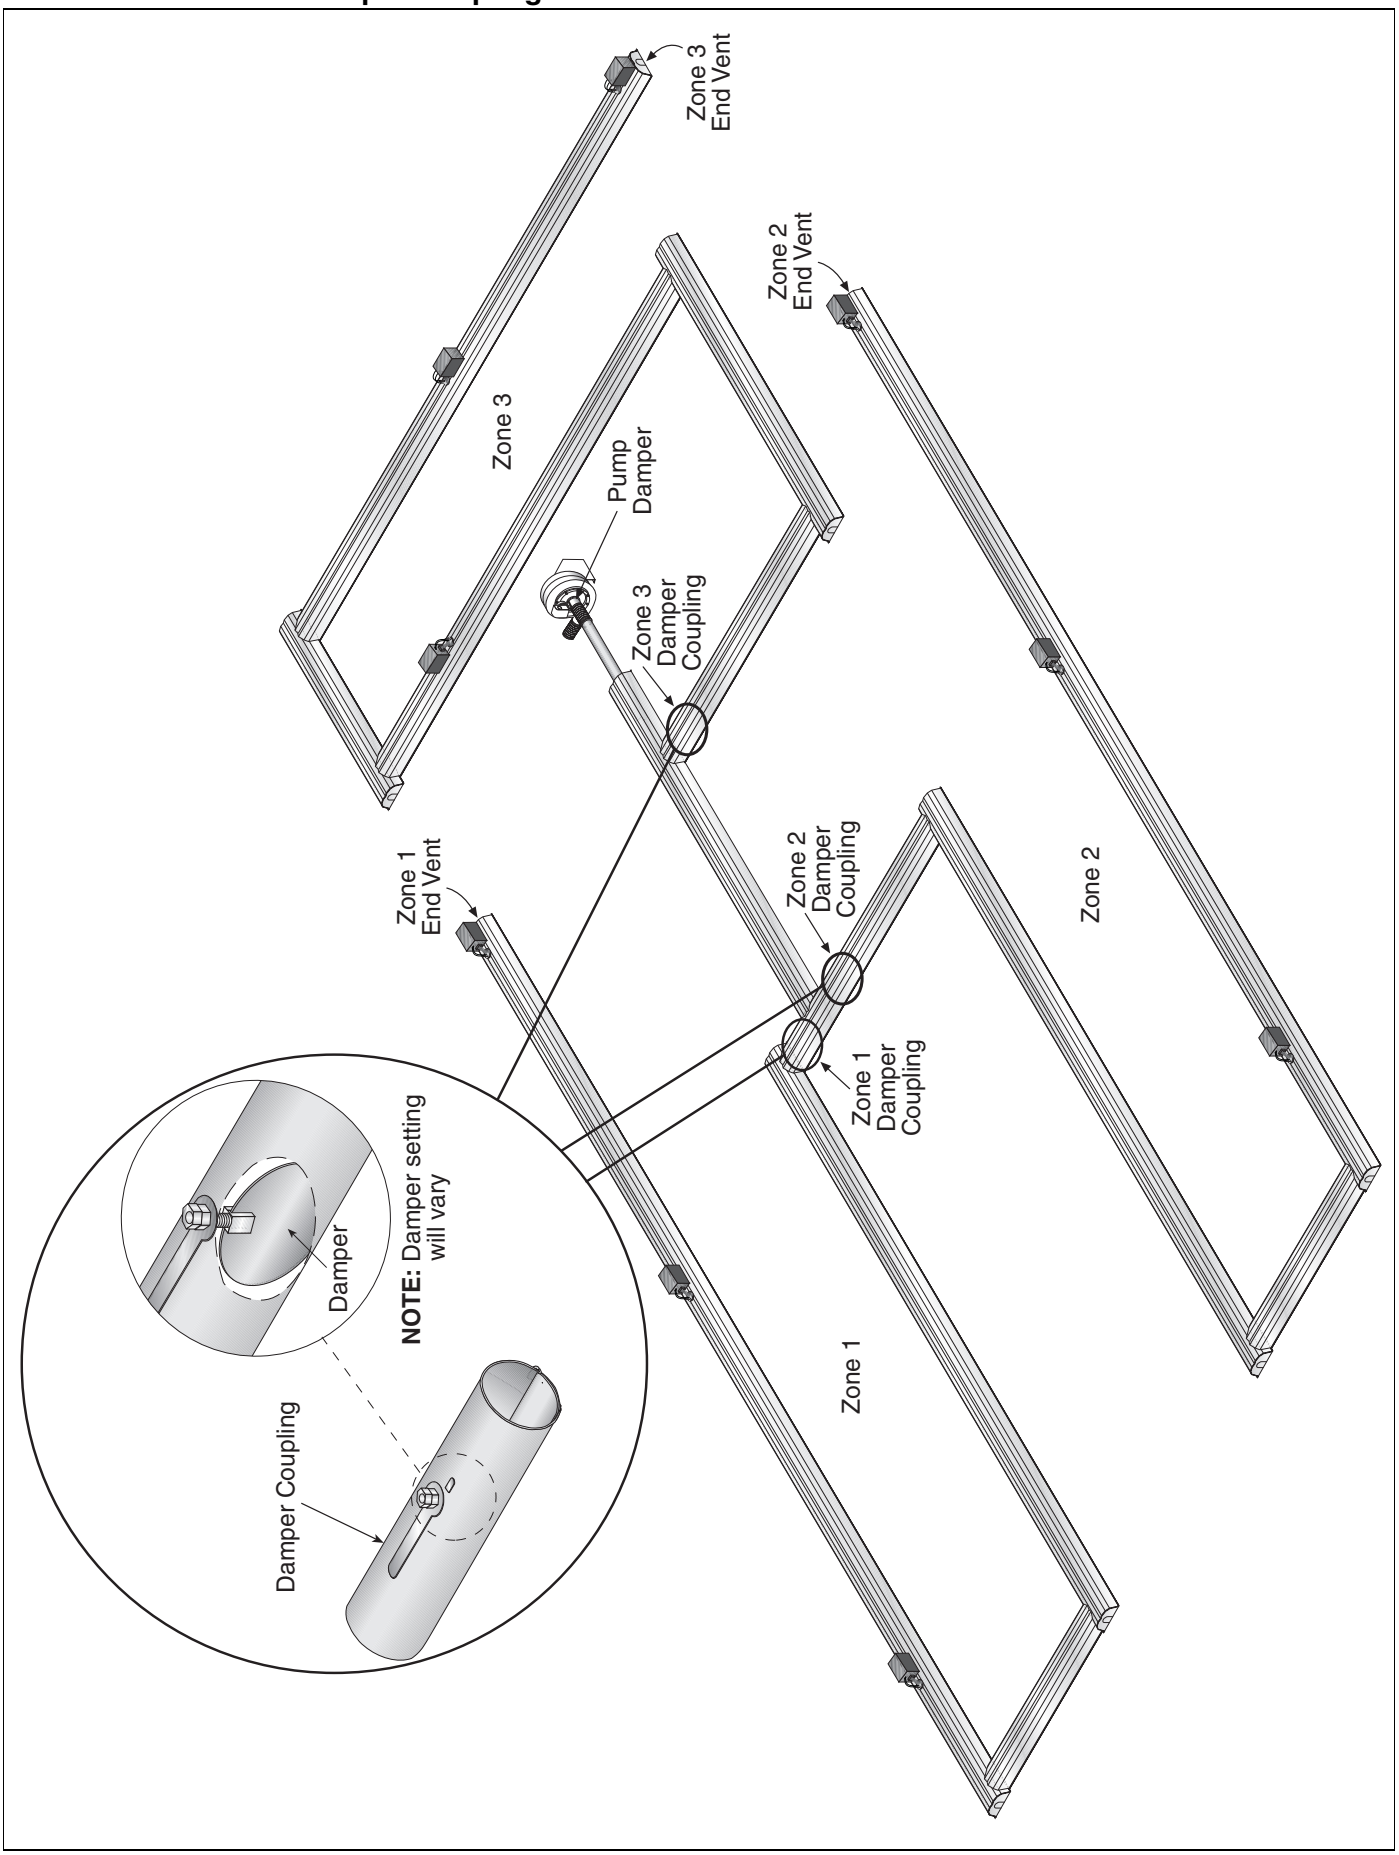

SECTION 16: OPERATION AND MAINTENANCE

⚠ DANGER	⚠ WARNING		
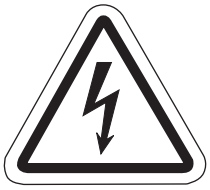			
Electrical Shock Hazard **Disconnect electric before service.** **More than one disconnect switch may be required to disconnect electric from heater.** **Heater must be connected to a properly grounded electrical source.**	**Explosion Hazard** **Turn off gas supply to heater before service.**	**Burn Hazard** **Allow heater to cool before service.** **Tubing may still be hot after operation.**	**Cut/Pinch Hazard** **Wear protective gear during installation, operation and service.** **Edges are sharp.**
Failure to follow these instructions can result in death, electric shock, injury or property damage.			

The heater is equipped with a direct-spark ignition system.

16.1 Sequence of Operation

1. Turn the thermostat up. When the thermostat calls for heat, the pump will start immediately. After a short period, the burners will begin their ignition sequence. Sparking will begin at the electrodes and the gas valve will be energized 45 seconds later.
2. The flame will be sensed by the flame sensing rod and the electrode is de-energized.
3. If a flame is detected, the gas valve remains open. When the call for heat is satisfied, the burner shuts off. On CRV-Series systems equipped with the optional ROBERTS GORDON® System Control, or ROBERTS GORDON® ULTRAVAC™, the pump will continue operation for a post-purge period of two minutes.
4. If no flame is detected, the module will close and a purge period begins. If a flame is not established, a second purge and warm-up will take place and then a third trial cycle will begin. After three trials, the module will lockout for one hour or until reset.
5. A reset is accomplished by removing power from the module for at least 5 seconds (thermostat cycle is required) or automatically after 1 hour.

16.2 To Shut Off Heater

Set thermostat to lowest setting.
Turn OFF electric power to heater.
Turn OFF manual gas valve in the heater supply line.

16.3 To Start Heater

Turn gas valve and electric power OFF and wait five minutes for unburned gases to vent from heater.
Turn ON main gas valve.
Turn ON electric power.
Set thermostat to desired temperature.
Burner should light automatically.

16.4 Pre-Season Maintenance and Annual Inspection

To ensure your safety and years of trouble-free operation of the heating system, service and annual inspections must be done by a contractor qualified in the installation and service of gas-fired heating equipment.
Turn off gas and electric supplies before performing service or maintenance. Allow heater to cool before servicing.
Before every heating season, a contractor qualified in the installation and service of gas-fired heating equipment must perform a thorough safety

inspection of the heater.
For best performance, the gas, electrical, thermostat connections, tubing, venting, suspensions and overall heater condition should be thoroughly inspected.
NOTE: Gas flow and burner ignition are among the first things that should be inspected.
Please *see Page 72, Section 16.5* for suggested items to inspect.

All installation and service of ROBERTS GORDON® equipment must be performed by a contractor qualified in the installation and service of equipment sold and supplied by Roberts-Gordon LLC and conform to all requirements set forth in the ROBERTS GORDON® manuals and all applicable governmental authorities pertaining to the installation, service, operation and labeling of the equipment.
To help facilitate optimum performance and safety, Roberts-Gordon LLC recommends that a qualified contractor conduct, at a minimum, annual inspections of your ROBERTS GORDON® equipment and perform service where necessary, using only replacement parts sold and supplied by Roberts-Gordon LLC.

16.5 Maintenance Checklist

Installation Code and Annual Inspections:

The Vicinity of the Heater	Do not store or use flammable objects, liquids or vapors near the heating system. Immediately remove these items if they are present. *See Page 5, Section 3*.
Vehicles and Other Objects	Maintain the clearances to combustibles. Do not hang anything from, or place anything on, the heater. Make sure nothing is lodged underneath the reflector, in between the tubes or in the decorative or protective grilles (included with select models). Immediately remove objects in violation of the clearances to combustibles. *See Page 5, Section 3*.
Reflector	Support reflector with reflector hanger and support strap. Reflector must not touch tube. Make sure there is no dirt, sagging, cracking or distortion. Do not operate if there is sagging, cracking or distortion. Make sure reflectors are correctly overlapped. *See Page 24, Figure 7.4.3*. Clean outside surface with a damp cloth.
Vent Pipe	Venting must be intact. Using a flashlight, look for obstructions, cracks on the pipe or gaps in the sealed areas or corrosion. The area must be free of dirt and dust. Remove any carbon deposits or scale using a wire brush. *See Page 35, Section 9*.
Outside Air Inlet	Inlet must be intact. Look for obstructions, cracks on the pipe or gaps in the sealed areas or corrosion. The area must be free of dirt and dust. Clean and reinstall as required.
Tubes	Make sure there are no cracks. Make sure tubes are connected and suspended securely. *See Page 19, Figure 14 through Page 21, Section 7.2.1*. Make sure there is no dirt, sagging, bending or distortion. Clean or replace as required.

Gas Line	Check for gas leaks. *See Page 48, Figure 28*.
Combustion Chamber Window	Make sure it is clean and free of cracks or holes. Clean or replace as required.
Blower Scroll, Wheel and Motor	Compressed air or a vacuum cleaner may be used to clean dust and dirt.
Burner Head and Orifice	Clear of obstructions. (Even spider webs will cause problems). Carefully remove any dust and debris from the burner.
Electrode	Replace if there are cracked ceramics, excessive carbon residue, or erosion of the electrode. The electrode gap should be 1/8" (3 mm).
Thermostat or Sensor	There should be no exposed wire or damage to the thermostat or sensor. *See Page 49, Section 12*.
Suspension Points	Make sure the heater is hanging securely. Look for signs of wear on the chain or ceiling. *See Page 19, Figure 14*.
Filter	Check for dirt or dust. Clean or replace as required.
Decorative and Protective Grille (optional)	The grille must be securely attached. Check that side reflector extensions are installed correctly and secured in place if necessary. (Decorative grille only.) *See Page 31, Section 8.6.1 through Page 33, Section 8.7.3* Make sure shield is installed correctly and secured in place if necessary. (Decorative grille only.) *See Page 31, Section 8.6.2*.
Pump	With pump operating, check for excessive vibration or noise. Vibration is usually a sign that the impeller is out of balance. Turn off the system, insure power is shut off and remove the inlet plate. Check the shaft seal and replace it if worn or missing. **With the Power off:** Check the inlet and outlet of the pump for blockage or excessive soot and clean as necessary. Check boots for cracking or deterioration and replace if necessary. If a condensate trap is installed, check the condition of the trap and the drain line attached. Note: the condensate trap should be filled with water at the beginning of each heating season. Check the condition of the motor mounts. Lift the motor from the rear; look for breaks in the rubber and replace if necessary. Check the condition and operation of the pressure switch.
Wall Tag	If wall tag is present, make sure it is legible and accurate. Please contact Roberts-Gordon LLC or your ROBERTS GORDON® independent distributor, if you need a wall tag. *See Page 4, Section 2.1*.
Safety Labels	Product safety signs or labels should be replaced by the product user when they are no longer legible. Please contact Roberts-Gordon LLC or your ROBERTS GORDON® independent distributor to obtain replacement signs or labels. *See Page 2, Figure 1 through Page 3, Figure 2*.

SECTION 17: TROUBLESHOOTING

⚠ DANGER

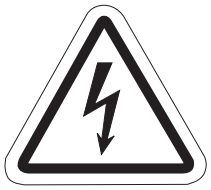

Electrical Shock Hazard

Disconnect electric before service.

More than one disconnect switch may be required to disconnect electric from heater.

Heater must be properly grounded.

Failure to follow these instructions can result in death or electrical shock.

⚠ WARNING

Fire Hazard	**Explosion Hazard**	**Burn Hazard**	**Cut/Pinch Hazard**
Keep all flammable objects, liquids and vapors the minimum required clearances to combustibles away from heater. **Some objects will catch fire or explode when placed close to heater.**	**Turn off gas supply to heater before service.**	**Allow heater to cool before service.** **Tubing may still be hot after operation.**	**Wear protective gear during installation, operation and service.** **Edges are sharp.**

Failure to follow these instructions can result in death, injury or property damage.

17.1 Troubleshooting Flow Chart

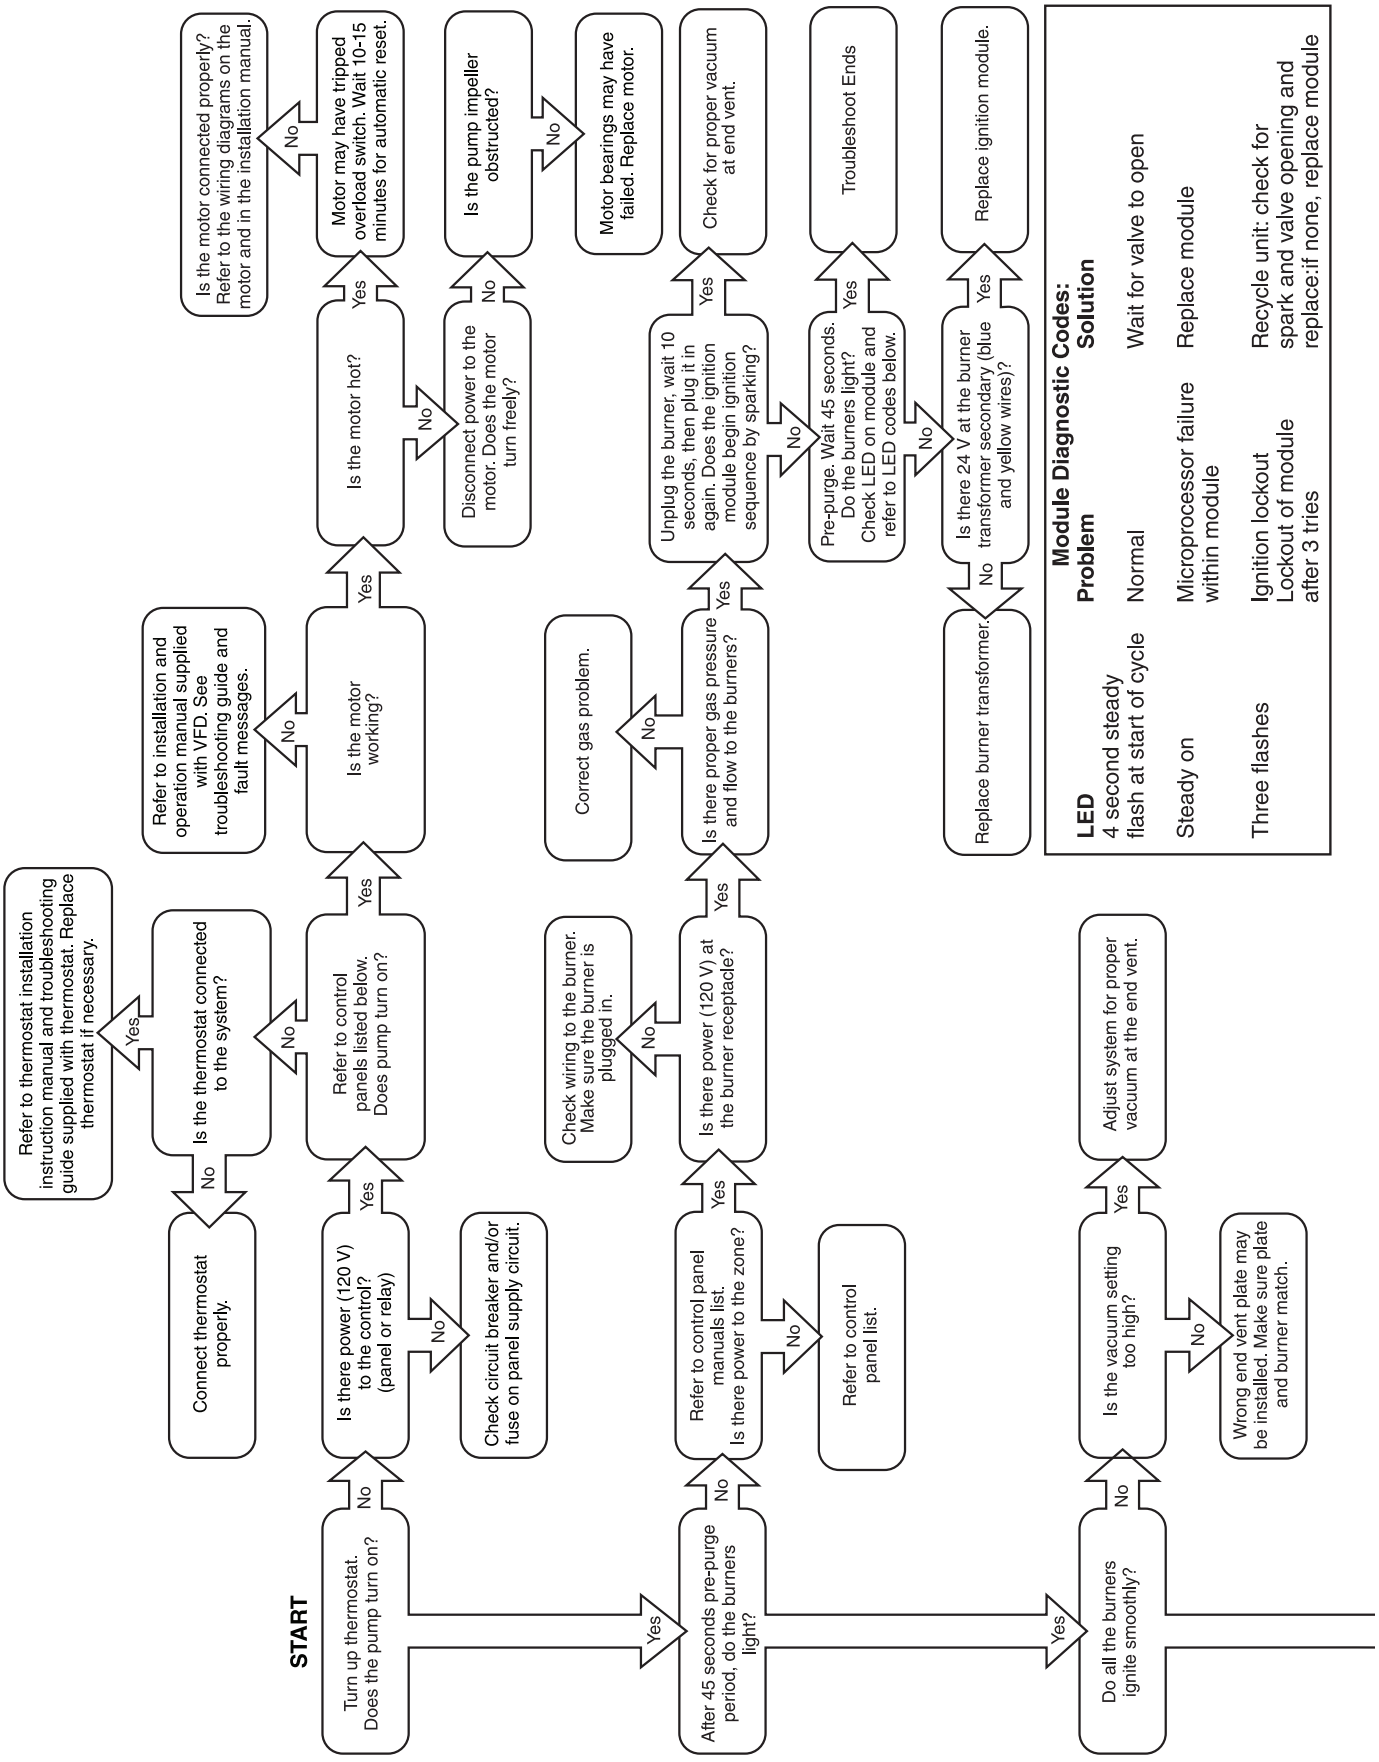
START
Turn up thermostat. Does the pump turn on?
No
Is there power (120 V) to the control? (panel or relay)
No
Check circuit breaker and/or fuse on panel supply circuit.
Yes
Refer to control panels listed below. Does pump turn on?
No
Is the thermostat connected to the system?
No
Connect thermostat properly.
Yes
Refer to thermostat installation instruction manual and troubleshooting guide supplied with thermostat. Replace thermostat if necessary.
Yes
Is the motor working?
No
Refer to installation and operation manual supplied with VFD. See troubleshooting guide and fault messages.
Yes
Is the motor hot?
Yes
Motor may have tripped overload switch. Wait 10-15 minutes for automatic reset.
No
Is the motor connected properly? Refer to the wiring diagrams on the motor and in the installation manual.
No
Disconnect power to the motor. Does the motor turn freely?
No
Is the pump impeller obstructed?
No
Motor bearings may have failed. Replace motor.
Yes
After 45 seconds pre-purge period, do the burners light?
No
Is there power (120 V) at the burner receptacle?
No
Check wiring to the burner. Make sure the burner is plugged in.
Yes
Refer to control panel manuals list. Is there power to the zone?
No
Refer to control panel list.
Yes
Is there proper gas pressure and flow to the burners?
No
Correct gas problem.
Yes
Unplug the burner, wait 10 seconds, then plug it in again. Does the ignition module begin ignition sequence by sparking?
No
Pre-purge. Wait 45 seconds. Do the burners light? Check LED on module and refer to LED codes below.
No
Is there 24 V at the burner transformer secondary (blue and yellow wires)?
No
Replace burner transformer.
Yes
Replace ignition module.
Yes
Troubleshoot Ends
Yes
Check for proper vacuum at end vent.
Yes
Do all the burners ignite smoothly?
No
Is the vacuum setting too high?
No
Wrong end vent plate may be installed. Make sure plate and burner match.
Yes
Adjust system for proper vacuum at the end vent.
Module Diagnostic Codes:
LED
Problem
Solution
4 second steady flash at start of cycle
Normal
Wait for valve to open
Steady on
Microprocessor failure within module
Replace module
Three flashes
Ignition lockout Lockout of module after 3 tries
Recycle unit: check for spark and valve opening and replace:if none, replace module

Troubleshooting Flow Chart

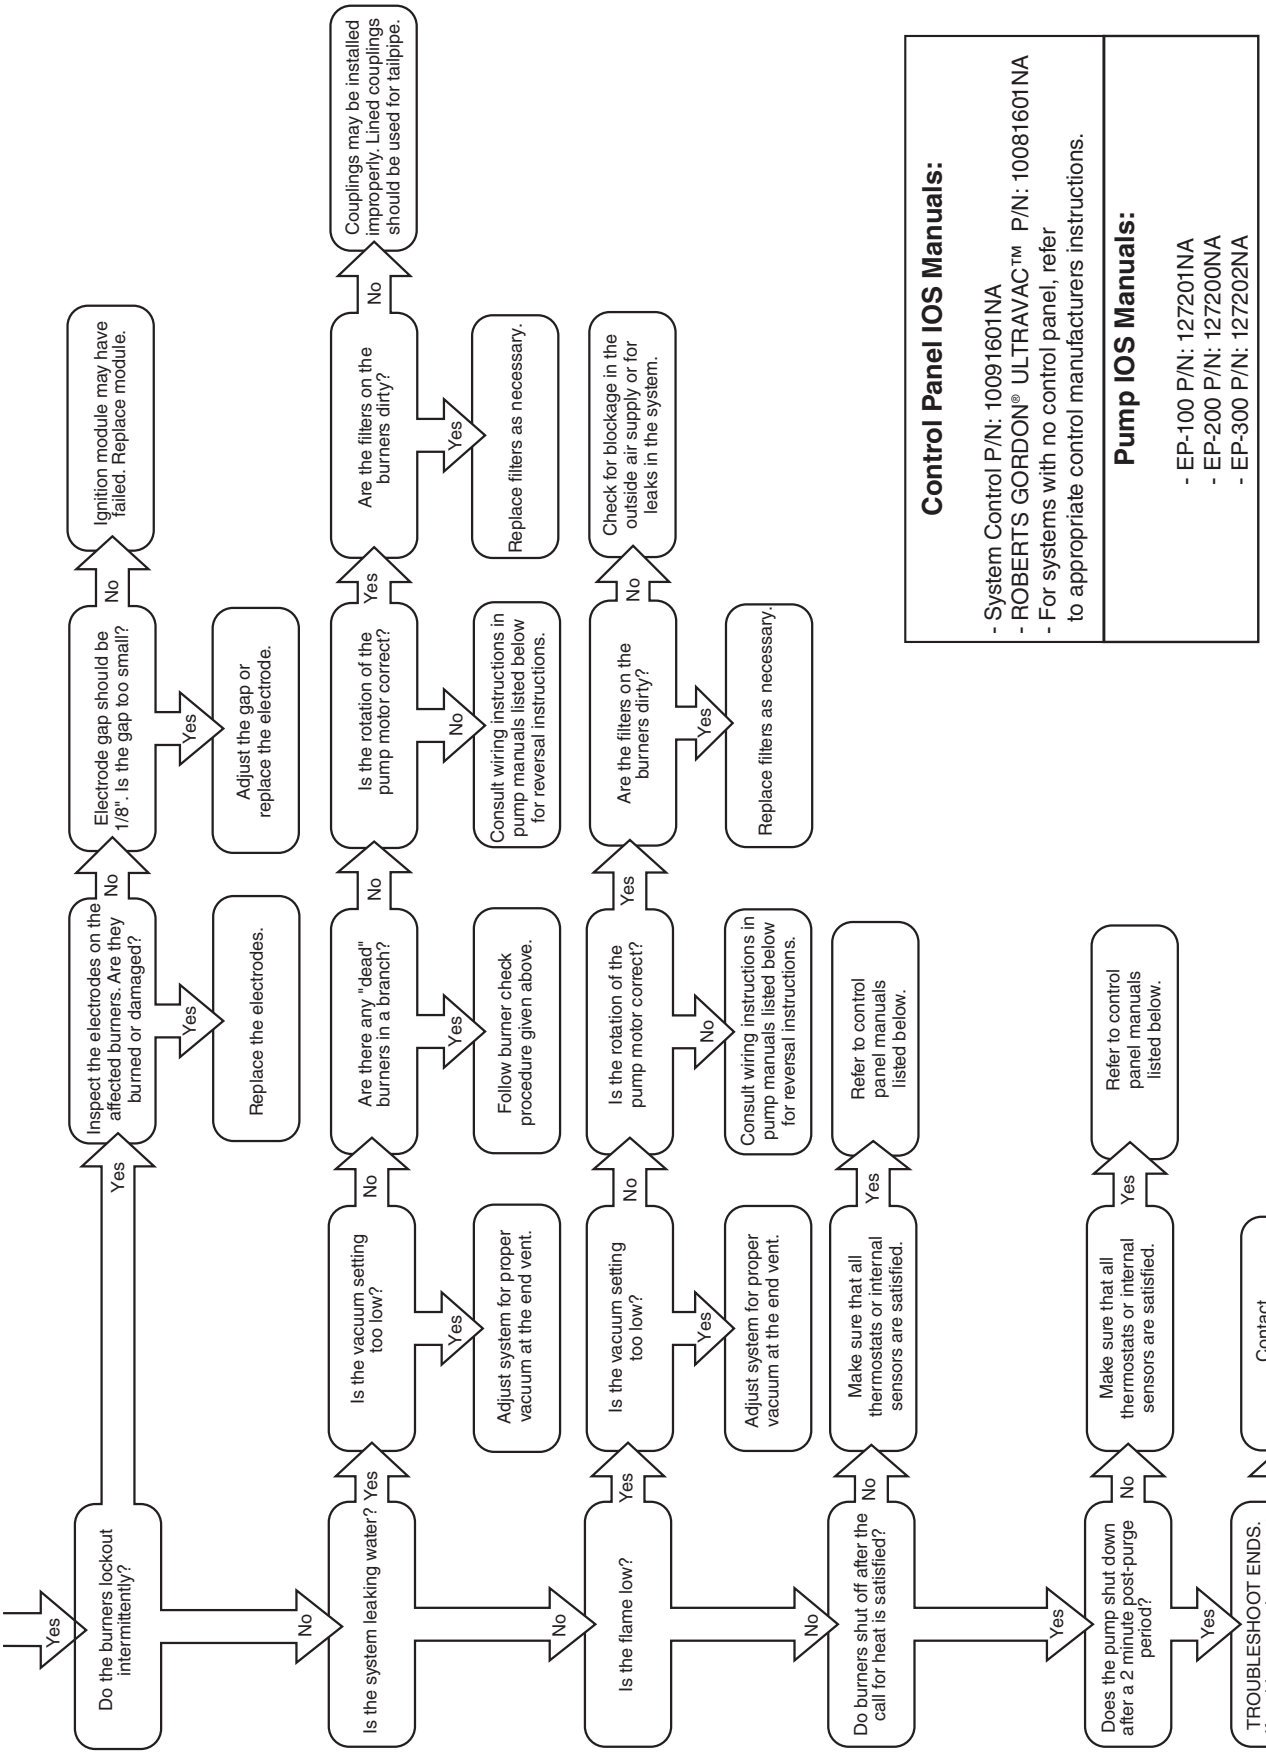
Yes
Do the burners lockout intermittently?
Yes
Inspect the electrodes on the affected burners. Are they burned or damaged?
Yes
Replace the electrodes.
No
Electrode gap should be 1/8". Is the gap too small?
Yes
Adjust the gap or replace the electrode.
No
Ignition module may have failed. Replace module.
No
Is the system leaking water?
Yes
Is the vacuum setting too low?
Yes
Adjust system for proper vacuum at the end vent.
No
Are there any "dead" burners in a branch?
Yes
Follow burner check procedure given above.
No
Is the rotation of the pump motor correct?
No
Consult wiring instructions in pump manuals listed below for reversal instructions.
Yes
Are the filters on the burners dirty?
Yes
Replace filters as necessary.
No
Couplings may be installed improperly. Lined couplings should be used for tailpipe.
No
Is the flame low?
Yes
Is the vacuum setting too low?
Yes
Adjust system for proper vacuum at the end vent.
No
Is the rotation of the pump motor correct?
No
Consult wiring instructions in pump manuals listed below for reversal instructions.
Yes
Are the filters on the burners dirty?
Yes
Replace filters as necessary.
No
Check for blockage in the outside air supply or for leaks in the system.
No
Do burners shut off after the call for heat is satisfied?
No
Make sure that all thermostats or internal sensors are satisfied.
Yes
Refer to control panel manuals listed below.
Yes
Does the pump shut down after a 2 minute post-purge period?
No
Make sure that all thermostats or internal sensors are satisfied.
Yes
Refer to control panel manuals listed below.
Yes
TROUBLESHOOT ENDS. If problems persist, contact your ROBERTS GORDON® Independent Distributor.
No
Contact Roberts-Gordon LLC at www.rg-inc.com
Control Panel IOS Manuals:
- System Control P/N: 10091601NA
- ROBERTS GORDON® ULTRAVAC™ P/N: 10081601NA
- For systems with no control panel, refer to appropriate control manufacturers instructions.
Pump IOS Manuals:
- EP-100 P/N: 127201NA
- EP-200 P/N: 127200NA
- EP-300 P/N: 127202NA

SECTION 18: REPLACEMENT PARTS

⚠ DANGER	⚠ WARNING		
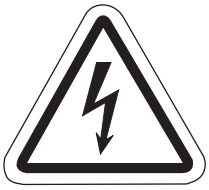			
Electrical Shock Hazard	Explosion Hazard	Fire Hazard	Carbon Monoxide Hazard

Use only genuine ROBERTS GORDON® replacement parts per this installation, operation and service manual.

Failure to follow these instructions can result in death, electric shock, injury or property damage.

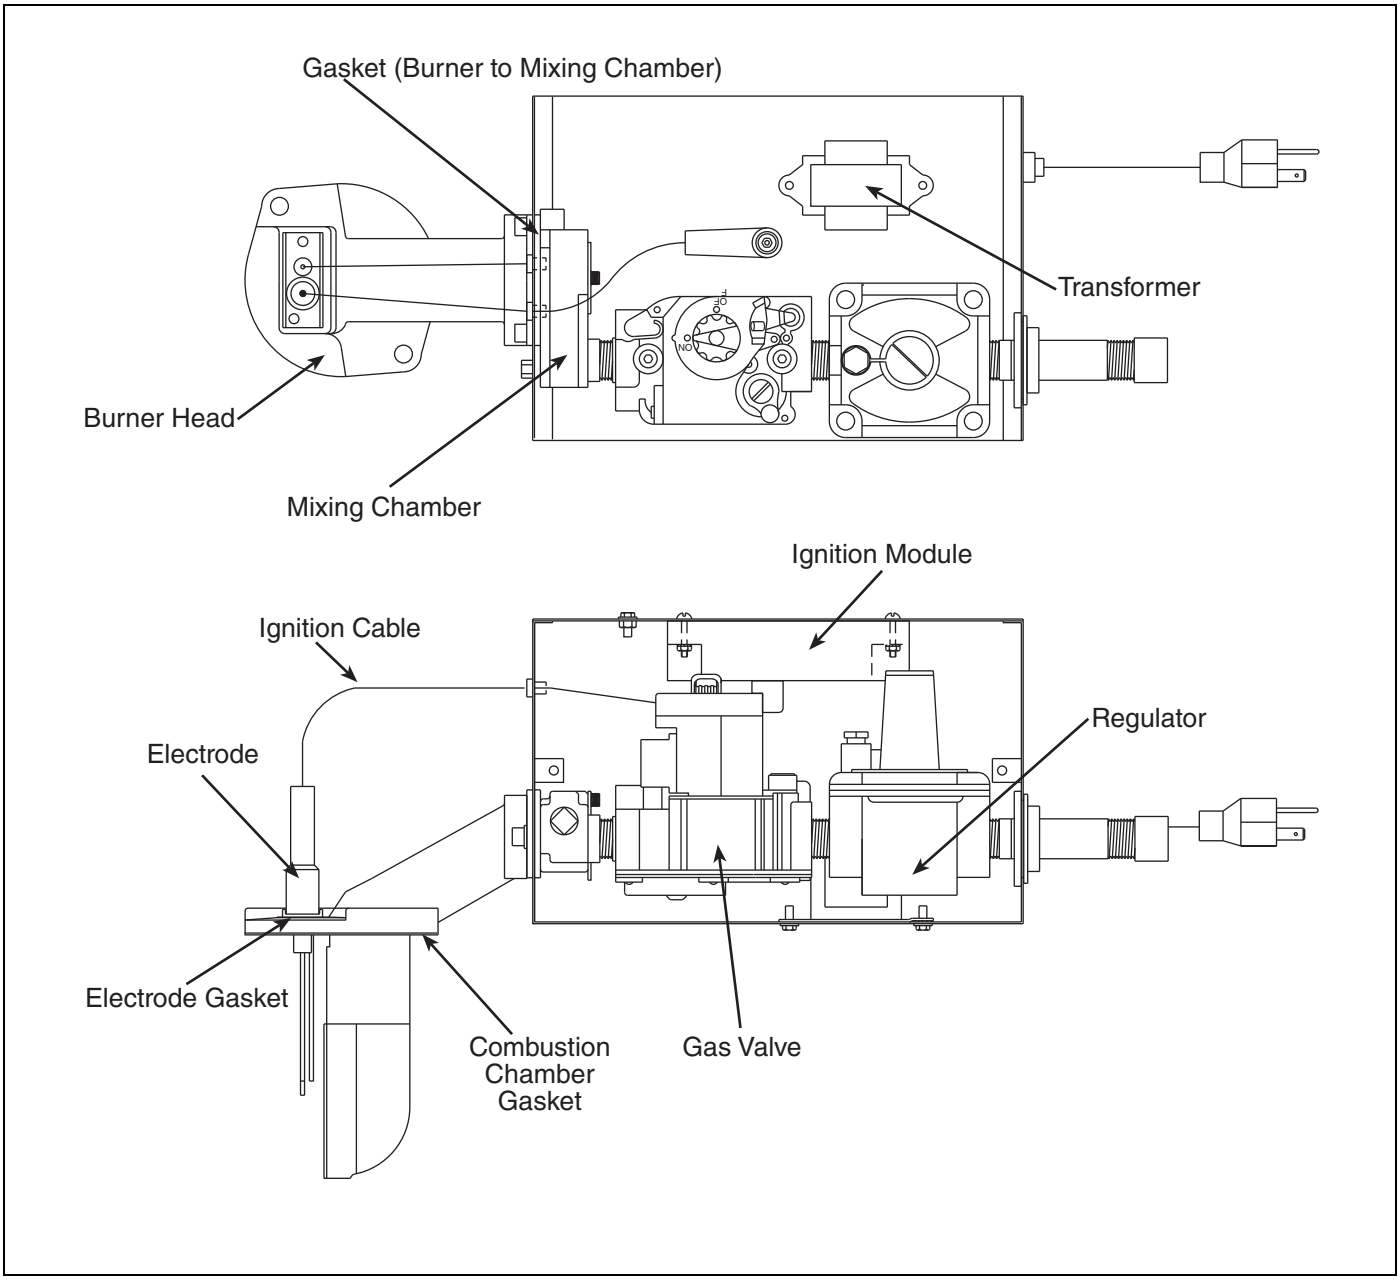

Description	Part Number
Gas Valve (All Burners)	90032502
Gasket (Burner to Mixing Chamber)	01351100
Burner Head Assembly Replacement Package (includes electrode and gasket installed)	02713000
Mixing Chamber	02790400
Transformer	90436900K
Regulator Replacement Kit	02725300
Gasket (Combustion Chamber)	01367800
Electrode Replacement Kit (includes electrode, electrode gasket and mounting screws)	02713200
Ignition Module	90439500K
Ignition Cable	90427706
Filter Cartridge with Gasket (not shown)	01312401

18.1 Variable Frequency Drive Replacement Parts

Caution: Use only genuine ROBERTS GORDON® replacement parts. Use of parts not specified by Roberts-Gordon voids warranty.

FIGURE 44: Variable Frequency Drive Components Diagram

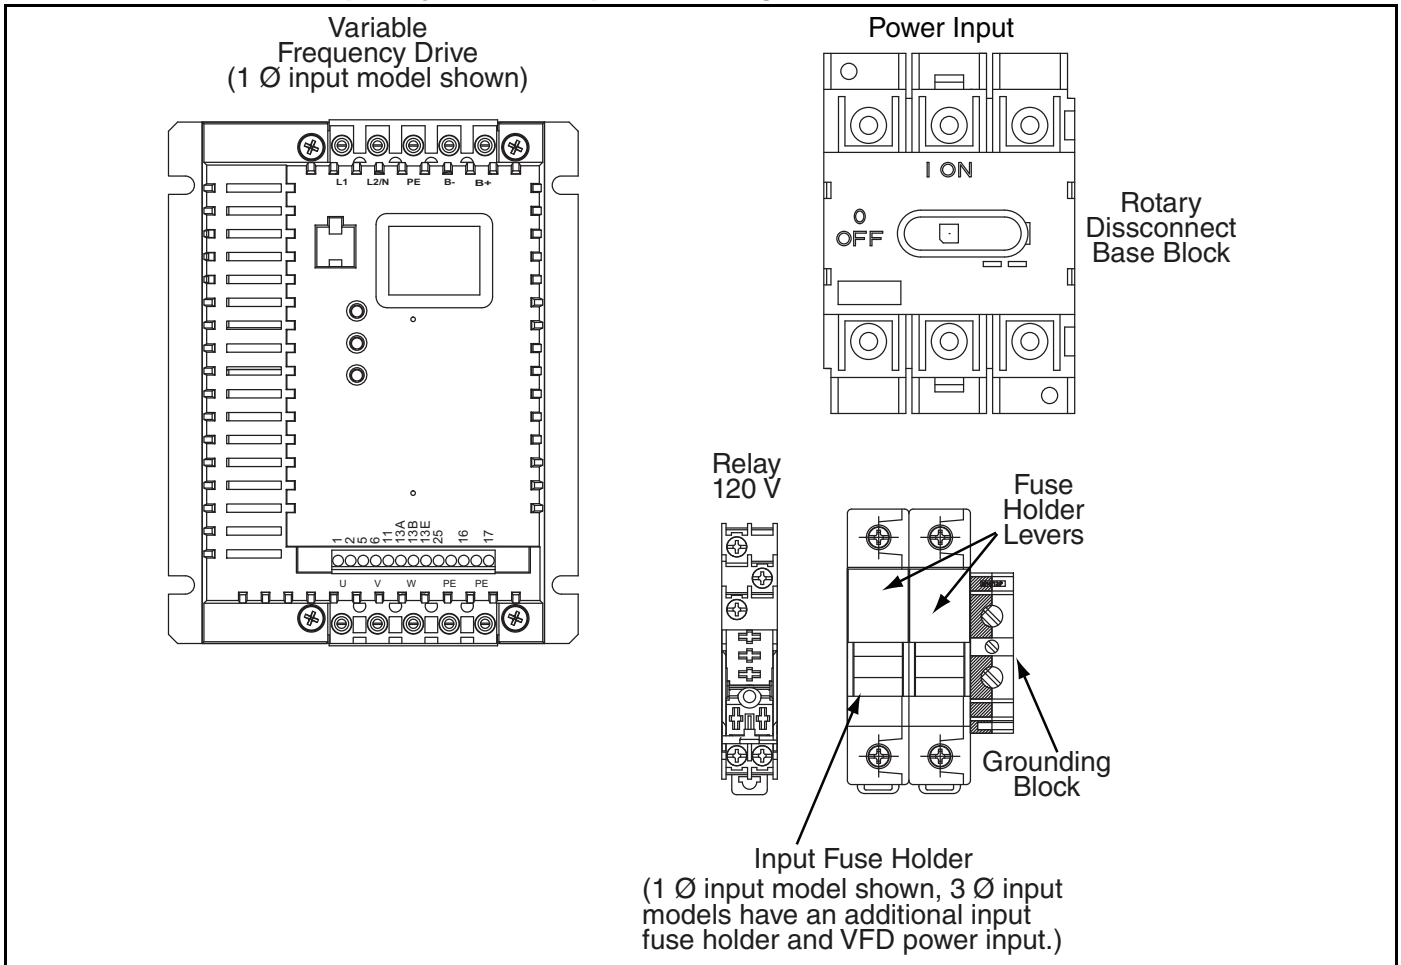

Description	Part Number
Variable Frequency Drive, 1 HP, 120 V, 1 Ø Input (for use with EP-203)	10081201
Variable Frequency Drive, 3/4 HP, 230 V, 1 Ø Input (for use with EP-203)	10081202
Variable Frequency Drive, 2 HP, 230 V, 1 Ø Input (for use with EP-303)	10081203
Variable Frequency Drive, 1 HP, 460 V, 3 Ø Input (for use with EP-203)	10081204
Variable Frequency Drive, 2 HP, 460 V, 3 Ø Input (for use with EP-303)	10081205
Relay, 120 V	90429100
Fuse 10 A (for.75 HP 230 V VFD, 1 HP 460 V VFD and 2 HP 460 V VFD)	91321410
Fuse 25 A (for 1 HP 120 V VFD and 2 HP 230 V VFD)	91321425
Grounding Block	91321300
Fuse Holder	91321400
Rotary Disconnect Base Block	91321550
Rotary Disconnect Handle (not shown)	91321551
Rotary Disconnect Rod (not shown)	91321552

18.2 Replacement Parts Instructions

⚠ DANGER

Electrical Shock Hazard

Disconnect electric before service.

Controller must be properly grounded to an electrical source.

Failure to follow these instructions can result in death or electrical shock.

18.2.1 Variable Frequency Drive (VFD)

To replace the Variable Frequency Drive, turn off all power to the drive assembly at the breaker or disconnect switch. Turn off the 24 V power switch on the relay board. Turn off 120 V power to the relay board inside the ROBERTS GORDON® ULTRAVAC™ Controller or the modulating thermostat.

Mark all wires connected to the VFD, noting the terminals that they are secured to. Remove all wires from the VFD terminals.

Remove the VFD from its mounting plate by removing the four securing screws.

Verify that the input voltage noted on the rating plate of the VFD matches the input voltage of the old VFD. Secure the new VFD to the mounting plate with the four screws. Return all wires to the correct VFD terminals. If possible, it may be easier to partially rewire the new VFD before mounting it to the mounting plate.

Close the door and return power to the VFD. Return 120 V power to the relay board or modulating thermostat. Turn on the 24 V power switch on the relay board. Press the reset button on the control board and close the doors.

18.2.2 Variable Frequency Drive 25 A or 10 A Fuse

To replace a fuse, turn off input power to the variable frequency drive assembly at the breaker or disconnect switch.

Turn off 120 V power to the relay board inside the ROBERTS GORDON® ULTRAVAC™ Controller or modulating thermostat. Turn off the 24 V power switch on the relay board.

Inside the VFD assembly, open the fuse holder by pulling down the lever to expose the fuse. Remove the old fuse and insert a new fuse. Verify the correct fuse rating, 25 A for 1 HP 120 V VFD or 2 HP 230 V VFD, 10 A for the.75 HP 230 V VFD, 1 HP 460 V VFD and 2 HP 460 V VFD. Close the fuse holder. Return power to the VFD assembly and verify that the VFD LCD screen is on. (dashes displayed). Close the VFD assembly door.

Return 120V power to the relay board or modulating thermostat. Turn on 24 V power switch on the relay board. Press the reset button on the control board and close the doors.

SECTION 19: GENERAL SPECIFICATIONS

19.1 Material Specifications

19.1.1 Reflectors

.024 Aluminium (Optional - 024 Stainless Steel Type 304).

19.2 Heater Specifications

19.2.1 Ignition

Fully Automatic, Three-Try, Direct Spark, Electronic Ignition Control, 100% Safety Shut-Off.

19.3 Suspension Specifications

Hang heater with materials with a minimum working load of 75 lbs (33 kg). *See Page 19, Figure 14*.

19.4 Controls Specifications

Time switches, thermostats, etc. can be wired into the electrical supply. External controls supplied as an option.

General Specifications for CRV-Series heaters are as follows:

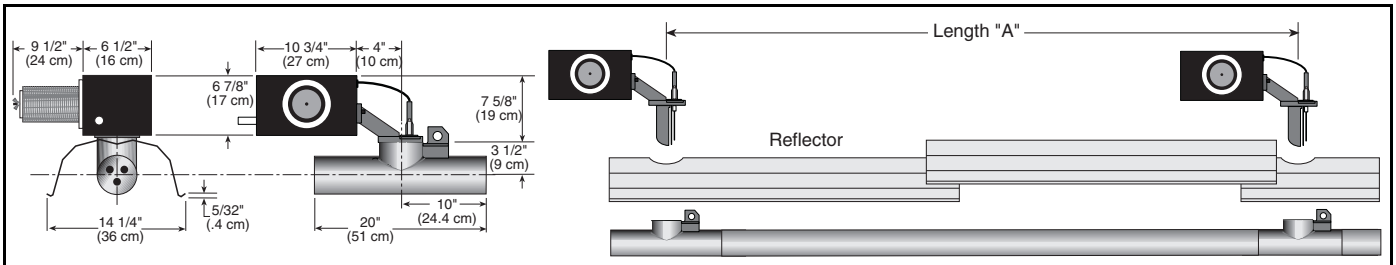

Model	Heat Input Rate (Btu/h) x (1000)	Length "A"		Recommended Minimum Mounting Height*
		Minimum	Maximum	Spot Heating
CRV-B-2 (NG only)	20	10' (3 m)	20' (6.1 m)	8' (2.4 m)
CRV-B-4	40	12.5' (3.8 m)	25' (7.6 m)	8' (2.4 m)
CRV-B-6	60	20' (6.1 m)	35' (10.7 m)	8' (2.4 m)
CRV-B-8	80	20' (6.1 m)	45' (13.7 m)	10' (3 m)
CRV-B-9	90	25' (7.6 m)	50' (15.2 m)	10' (3 m)
CRV-B-10	100	30' (9.1 m)	60' (18.3 m)	15' (4.5 m)
CRV-B-12A (NG only)	110	35' (10.7 m)	70' (21.3 m)	15' (4.5 m)
CRV-B-12 (LP only)	120	35' (10.7 m)	70' (21.3 m)	15' (4.5 m)

**See Page 5, Section 3* for clearances to combustibles.

PIPE CONNECTION:
1/2" NPT

DIMENSIONS:
Vent Connection Size: 4" (10 cm) or 6" (15 cm)
Outside Air Connection Size: 4" (10 cm)
Refer to figure above for dimensional information.

GAS INLET PRESSURE:
Natural Gas: 4.5" wc Minimum 14.0" wc Maximum
LP Gas: 10.5" wc Minimum 14.0" wc Maximum

ELECTRICAL RATING:
120 V - 60 Hz, 0.3 A

General Specifications for pumps are as follows:

Pump Dimensional Data (in.)							
Model	**A**	**B**	**C**	**D**	**E**	**F**	**G**
EP-100	17	14.5	21	3.75	10	4	4
EP-201/203	17.75	17	20.25	3.25	10	4.5	4.5
EP-301/303	25.6	24.8	22.7	4.8	15.2	6	6

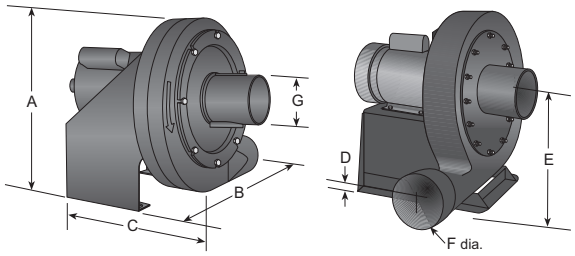

Pump Specifications

Model	EP-100	EP-201	EP-203	EP-301	EP-303
Horsepower (Hp)	1/3	3/4	3/4	2*	2*
Phase (Ø)	1	1	3	1	3
Hertz (Hz)	60	60	60	60	60
Voltage (V)	115/230	115/230	208-230/460	208-230	208-230/460
Full Load Amp (Amps)	4.8/2.4	6.6/3.3	2.4-2.2/1.1	12.8-11.5	5.5-5.2/2.6
R.P.M.	3450	3450	3500	3450	3450
Motor Frame	56	56	56	90	90
Motor Enclosure	TENV	TENV	TEFC	TEFC	TEFC
Noise Level @ 5' (DBA)	-	70	70	-	-
Inlet/Outlet (In.)	4/4	4/4	4/4	6/6	6/6
Weight (lbs.)	62	112	112	170	170

** For starter, see National Electric Code (NEC) requirement for motors 1 hp or higher.*

Air Supply Blower Specifications	
Capacity	240 CFM @ 0.75 in wc
Power (W)	167
Phase	1
Hertz (Hz)	60
Voltage (V)	120
Full Load Amp (Amps)	1.5
R.P.M.	3000
Motor Enclosure	OPEN FC
Inlet/Outlet (In.)	5/5
Weight (lbs.)	10

SECTION 20: THE ROBERTS GORDON® CORAYVAC® LIMITED WARRANTY

ROBERTS-GORDON LLC WILL PAY FOR:

Within 36 months from date of purchase by buyer or 42 months from date of shipment by Roberts-Gordon LLC (whichever occurs first), replacement parts will be provided free of charge for any part of the product which fails due to a manufacturing or material defect.

Roberts-Gordon LLC will require the part in question to be returned to the factory. Roberts-Gordon LLC will, at its sole discretion, repair or replace after determining the nature of the defect and disposition of part in question.

ROBERTS GORDON® warrants the cast iron combustion chamber of the ROBERTS GORDON® CORAYVAC® Classic System will be free from defects in material and workmanship. This warranty is limited to twenty-five (25) years from the date of shipment by Roberts-Gordon LLC. All other components of the ROBERTS GORDON® CORAYVAC® Classic System adhere to the standard warranty listed in the paragraph above.

ROBERTS GORDON® Replacement Parts are warranted for a period of 12 months from date of shipment from Roberts-Gordon LLC or the remaining ROBERTS GORDON® CORAYVAC® warranty.

ROBERTS-GORDON LLC WILL NOT PAY FOR:

Service trips, service calls and labor charges.

Shipment of replacement parts.

Claims where the total price of the goods have not been paid.

Damage due to:

- Improper installation, operation or maintenance.
- Misuse, abuse, neglect, or modification of the ROBERTS GORDON® CORAYVAC® in any way.
- Use of the ROBERTS GORDON® CORAYVAC® for other than its intended purpose.
- Incorrect gas or electrical supply, accident, fire, floods, acts of God, war, terrorism, or other casualty.
- Improper service, use of replacement parts or accessories not specified by Roberts-Gordon.
- Failure to install or maintain the ROBERTS GORDON® CORAYVAC® as directed in the Installation, Operation and Service Manual.
- Relocation of the ROBERTS GORDON® CORAYVAC® after initial installation
- The use of the ROBERTS GORDON® CORAYVAC® in a corrosive atmosphere containing contaminants.
- The use of the ROBERTS GORDON® CORAYVAC® in the vicinity of a combustible or explosive material.
- Any defect in the ROBERTS GORDON® CORAYVAC® arising from a drawing, design, or specification supplied by or on behalf of the consumer.
- Damage incurred during shipment. Claim must be filed with carrier.

WARRANTY IS VOID IF:

The ROBERTS GORDON® CORAYVAC® is not installed by a contractor qualified in the installation and service of gas fired heating equipment.

You cannot prove original purchase date and required annual maintenance history.

The data plate and/or serial number are removed, defaced, modified or altered in any way.

The ownership of the ROBERTS GORDON® CORAYVAC® is moved or transferred. This warranty is nontransferable.

Roberts-Gordon LLC is not permitted to inspect the damaged equipment and/or component parts.

READ YOUR INSTALLATION, OPERATION AND SERVICE MANUAL

If you have questions about your equipment, contact your installing professional. Should you need Replacement Parts or have additional questions, call or write:

Roberts-Gordon LLC
1250 William Street
P.O. Box 44
Buffalo, New York 14240-0044
Telephone: +1.716.852.4400
Fax: +1.716.852.0854 Toll Free: 800.828.7450
www.rg-inc.com www.corayvac.com
www.robertsgordon.com www.radiantheaters.com

Roberts-Gordon LLC's liability, and your exclusive remedy, under this warranty or any implied warranty (including the implied warranties of merchantability and fitness for a particular purpose) is limited to providing replacement parts during the term of this warranty. Some jurisdictions do not allow limitations on how long an implied warranty lasts, so this limitation may not apply to you. There are no rights, warranties or conditions, expressed or implied, statutory or otherwise, other than those contained in this warranty.

Roberts-Gordon LLC shall in no event be responsible for incidental or consequential damages or incur liability for damages in excess of the amount paid by you for the ROBERTS GORDON® CORAYVAC®. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from jurisdiction to jurisdiction.

Roberts-Gordon LLC shall not be responsible for failure to perform under the terms of this warranty if caused by circumstances out of its control, including but not limited to war, fire, flood, strike, government or court orders, acts of God, terrorism, unavailability of supplies, parts or power. No person is authorized to assume for Roberts-Gordon LLC any other warranty, obligation or liability.

LIMITATIONS ON AUTHORITY OF REPRESENTATIVES:

No representative of Roberts-Gordon LLC, other than an Executive Officer, has authority to change or extend these provisions. Changes or extensions shall be binding only if confirmed in writing by Roberts-Gordon LLC's duly authorized Executive Officer.

ROBERTS GORDON
Infrared Heating

OWNER WARRANTY REGISTRATION CARD

Mail or Fax to:

Roberts Gordon LLC •1250 William Street, P.O. Box 44 • Buffalo, NY 14240-0044 • Phone: 716-852-4400 • Fax: 716-852-0854
Toll Free: 800-828-7450 • www.rg-inc.com

About the Owner:

Name:_____

Address:_____City:_____State:_____Zip Code:_____

Phone:_____ Fax:_____ E-mail:_____

About the Installer:

Name:_____

Address:_____City:_____State:_____Zip Code:_____

Phone:_____Fax:_____E-mail:_____

Purchased From (if different than installer):

Name:_____

Address:_____City:_____State:_____Zip Code:_____

Phone:_____ Fax:_____ E-mail:_____

About your Heater:

Model#:_____ Serial #:_____ Fuel:_____Installation Date:_____

Type of Installation (check one):

o Automotive	o Manufacturing	o Warehouse	o Recreational	o Aircraft
o Public Building	o Office	o Retail	o Agricultural	o Other_____

Installation Code and Annual Inspections: All installation and service of ROBERTS GORDON® equipment must be performed by a contractor qualified in the installation and service of equipment sold and supplied by Roberts-Gordon LLC and conform to all requirements set forth in the ROBERTS GORDON® manuals and all applicable governmental authorities pertaining to the installation, service, operation and labeling of the equipment.

To help facilitate optimum performance and safety, Roberts-Gordon LLC recommends that a qualified contractor conduct, at a minimum, annual inspections of your ROBERTS GORDON® equipment and perform service where necessary, using only replacement parts sold and supplied by Roberts-Gordon LLC.

These products are not for residential use.

This product is intended to assist licensed professionals in the exercise of their professional judgment.

© 2012 Roberts-Gordon LLC - All rights reserved. No part of this work covered by the copyrights herein my be reproduced or copied in any form or by any means – graphic, electronic, or mechanical, including photcopying, recording, taping, or information storage and retrieval systems – without written permission of Roberts Gordon LLC. Printed in the U.S.A.

Attach this information to a wall near the ROBERTS GORDON® heater.

ROBERTS GORDON®
Infrared Heating

Read the Installation, Operation, and Service Manual thoroughly before installation, operation, or service.

Know your model number and installed configuration.

Model number and installed configuration are found on the burner and in the Installation, Operation and Service Manual.

Write the largest clearance dimensions with permanent ink according to your model number and configuration in the open spaces below.

OPERATING INSTRUCTIONS

1. STOP! Read all safety instructions on this information sheet.
2. Open the manual gas valve in the heater supply line.
3. Turn on electric power to the heater.
4. Set the thermostat to desired setting.

TO TURN OFF THE HEATER

1. Set the thermostat to off or the lowest setting.

IF THE HEATER WILL NOT OPERATE, TO ENSURE YOUR SAFETY, FOLLOW THESE INSTRUCTIONS TO SHUT DOWN YOUR HEATER

1. Set the thermostat to off or the lowest setting.
2. Turn off electric power to the heater.
3. Turn off the manual gas valve in the heater supply line.
4. Call your registered installer/contractor qualified in the installation and service of gas-fired heating equipment.

⚠WARNING

Fire Hazard

Keep all flammable objects, liquids and vapors the minimum required clearances to combustibles away from heater.

Some objects will catch fire or explode when placed close to heater.

Failure to follow these instructions can result in death, injury or property damage.

Maintain_____clearance to the side and _____ clearance below the heater from vehicles and combustible materials.

Roberts-Gordon LLC
1250 William Street
P.O. Box 44
Buffalo, NY 14240-0044 USA
Telephone: +1.716.852.4400
Fax: +1.716.852.0854
Toll Free: 800.828.7450

Roberts-Gordon Europe Limited
Unit A, Kings Hill Business Park
Darlaston Road, Wednesbury
West Midlands WS10 7SH UK
Telephone: +44 (0)121 506 7700
Fax: +44 (0)121 506 7701

Service Telephone: +44 (0)121 506 7709
Service Fax: +44 (0)121 506 7702
E-mail: uksales@rg-inc.com
E-mail: export@rg-inc.com

Installation Code and Annual Inspections:
All installation and service of ROBERTS GORDON® equipment must be performed by a contractor qualified in the installation and service of equipment sold and supplied by Roberts-Gordon and conform to all requirements set forth in the ROBERTS GORDON® manuals and all applicable governmental authorities pertaining to the installation, service, operation and labeling of the equipment. To help facilitate optimum performance and safety, Roberts-Gordon recommends that a qualified contractor conduct, at a minimum, annual inspections of your ROBERTS GORDON® equipment and perform service where necessary, using only replacement parts sold and supplied by Roberts-Gordon.

Further Information: Applications, engineering and detailed guidance on systems design, installation and equipment performance is available through ROBERTS GORDON® representatives. Please contact us for any further information you may require, including the Installation, Operation and Service Manual.

This product is not for residential use.

© 2012 Roberts-Gordon LLC All rights reserved. No part of this work covered by the copyrights herein may be reproduced or copied in any form or by any means – graphic, electronic, or mechanical, including photocopying, recording, taping, or information storage and retrieval systems – without written permission of Roberts-Gordon LLC.

www.rg-inc.com Printed in U.S.A. P/N 91037912 Rev. J